

680, 690, 680 MultiCut and 690 MultiCut Large Square Balers

**John Deere Werke Zweibrücken
OMZ92444 Issue B7**

European Edition

Printed in Germany

ENGLISCH

Introduction

READ THIS MANUAL carefully to learn how to operate and service your machine correctly. Failure to do so could result in personal injury or equipment damage. This manual and safety signs on your machine may also be available in other languages (see your John Deere dealer to order).

THIS MANUAL SHOULD BE CONSIDERED a permanent part of your machine and should remain with the machine when you sell it.

MEASUREMENTS in this manual are given in both metric and customary U.S. unit equivalents. Use only correct replacement parts and fasteners. Metric and inch fasteners may require a specific metric or inch wrench.

RIGHT-HAND AND LEFT-HAND sides are determined by facing the direction the implement will travel when going forward.

WRITE PRODUCT IDENTIFICATION NUMBERS (P.I.N.) in the Specification or Identification Numbers section. Accurately record all the numbers to help in tracing the machine should it be stolen. Your dealer also needs these numbers when you order parts. File the identification numbers in a secure place off the machine.

BEFORE DELIVERING THIS MACHINE, your dealer performed a predelivery inspection. After operating for the first 20 to 50 hours, schedule an after-sale inspection with your dealer to ensure best performance.

THIS LARGE SQUARE BALER IS DESIGNED SOLELY for use in customary agricultural or similar operations ("INTENDED USE"). Use in any other way is considered as contrary to the intended use. The manufacturer accepts no liability for damage or injury resulting from this misuse, and these risks must be borne solely by the user. Compliance with and strict adherence to the conditions of operation, service and repair as specified by the manufacturer also constitute essential elements for the intended use.

THIS LARGE SQUARE BALER SHOULD BE OPERATED, serviced and repaired only by persons familiar with all its particular characteristics and acquainted with the relevant safety rules (accident prevention). The accident prevention regulations, all other generally recognized regulations on safety and occupational medicine and the road traffic regulations must be observed at all times. Any arbitrary modifications carried out on this large square baler will relieve the manufacturer of all liability for any resulting damage or injury.

Contents

	Page		Page
Identification View	00-1	Blade check at cutting mechanism	30-10
Safety	05-1	Sensor and valve test	30-11
Safety Decals	10-1	Language entry	30-14
How the Baler Works	15-1	Checking the valves	30-14
Preparing the Baler		Operating the Baler	
Preparation	20-1	Adjusting pick-up working height	35-1
Adjusting tongue height	20-1	Bale chute	35-2
Adapting the jointed shaft	20-3	Baling pressure	35-3
Before Operating the Baler		Adjusting bale length	35-3
Main drive	25-1	Twine	35-4
Feed rake drum drive	25-1	Electric twine fault display	35-8
Knotter shaft drive	25-1	Tripping the twine tying cycle by hand	35-8
Pick-up drive	25-2	Emptying the bale channel	35-9
Attaching baler to tractor	25-2	Adjustments	
Hydraulic connections	25-4	General information	40-1
Compressed air connections	25-4	Needle adjustment	40-1
Hydraulic brake	25-4	Twine bar	40-4
Jointed shaft	25-5	Plunger adjustment	40-5
Electrical connection	25-6	Guide rail cleaning	40-5
Parking brake	25-6	Setting the rake relative to the plunger	40-6
Hydraulic system	25-7	Sensor adjustment - rake drum	40-6
Pick-up	25-8	Sensor adjustment - piston rod	40-7
Bale discharge chute	25-8	Adjusting flywheel cleaning mechanism	40-7
Lighting system	25-8	Twine brake adjustment	40-7
Detaching the baler	25-9	Knotter	
Maintenance platform	25-11	Safety rules	45-1
Electronic Controls		Knotter hook	45-1
On-board computer	30-1	Twine mount	45-2
Control and indicator box	30-2	Blade lever	45-3
Control functions	30-3	Knotting	45-5
Adjusting bale density	30-4	Optional Equipment	
Releasing the bale channel	30-7	Cutting mechanism	50-1
Bale counter	30-7	MultiCut cutting platform	50-2
Alarm messages	30-8	Length of cut	50-2
		Adjusting the length of cut	50-3

Continued on next page

All information, illustrations and specifications in this manual are based on the latest information available at the time of publication. The right is reserved to make changes at any time without notice.


OMZ92444 B7-19-02FEB97

COPYRIGHT© 1997
DEERE & COMPANY
European Office Mannheim
All rights reserved
A John Deere ILLUSTRATION® Manual
Previous Editions
Copyright 1996 Deere & Company

Contents

	Page
Changing the blades	50-4
Blade adjusting shaft	50-6
Adjusting the blade safety mechanism	50-7
Compressor	50-8
Lubricants and Capacities	
Use of gear oil	55-1
Use of hydraulic oil	55-2
Grease	55-3
Lubrication	
General information	60-1
Service intervals	60-1
Main jointed shaft	60-1
Important lubricating points	60-2
Troubleshooting	
Warning and indicator lamp	65-1
Needle yoke	65-1
Knotter mechanism	65-1
Rake drum	65-2
Electronic controls	65-3
Other malfunctions	65-4
Service	
General information	70-1
Cleaning	70-3
Tires	70-3
Opening the front guard	70-4
Hydraulic system	70-5
Changing and checking the oil in the gearboxes	70-6
Compressed air tanks	70-11
Brake cylinders	70-11
Replacing rake guide rollers	70-11
Storage	
After the season	75-1
Removing baler from storage	75-3
Specifications 80-1	
Serial Number 85-1	
Index	

Identification View

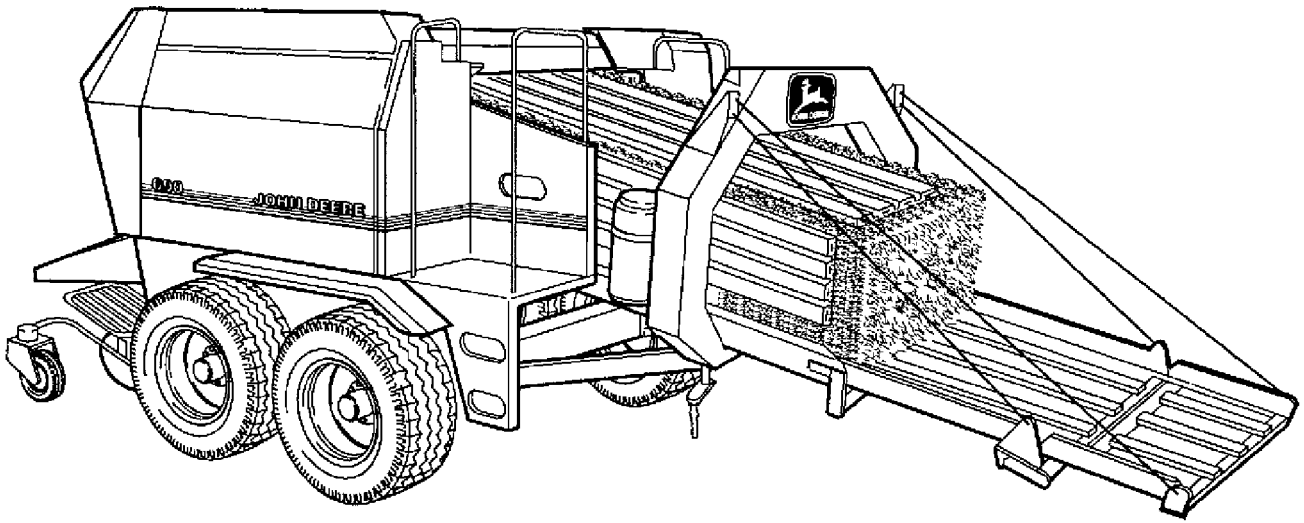

690 Large Square Baler

ZX007934

ZX007934 -UN-19DEC95

ZX_OMGPP1004413-19-01FEB96

Safety

RECOGNIZE SAFETY INFORMATION

This is the safety-alert symbol. When you see this symbol on your machine or in this manual, be alert to the potential for personal injury.

Follow recommended precautions and safe operating practices.



DX,ALERT -19-03MAR93

T81389 -UN-07DEC68


FOLLOW SAFETY INSTRUCTIONS

Carefully read all safety messages in this manual and on your machine safety signs. Keep safety signs in good condition. Replace missing or damaged safety signs. Be sure new equipment components and repair parts include the current safety signs. Replacement safety signs are available from your John Deere dealer.

Learn how to operate the machine and how to use controls properly. Do not let anyone operate without instruction.

Keep your machine in proper working condition. Unauthorized modifications to the machine may impair the function and/or safety and affect machine life.

If you do not understand any part of this manual and need assistance, contact your John Deere dealer.

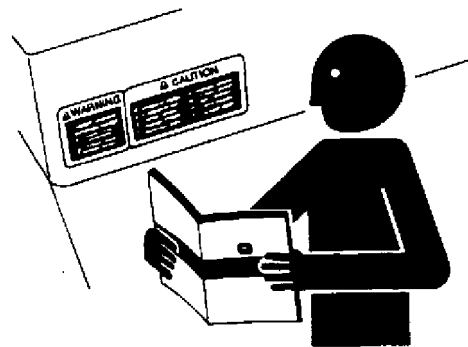

DX,READ -19-03MAR93

T5201 -UN-23AUG88

UNDERSTAND SIGNAL WORDS

A signal word—DANGER, WARNING, or CAUTION—is used with the safety-alert symbol. DANGER identifies the most serious hazards.

DANGER or WARNING safety signs are located near specific hazards. General precautions are listed on CAUTION safety signs. CAUTION also calls attention to safety messages in this manual.



DX,SIGNAL -19-03MAR93

T5187 -19-30SEP88



OBSERVE ROAD TRAFFIC REGULATIONS

Always observe local road traffic regulations when using public roads.



FX,ROAD -19-01MAY91


H28930 -UN-30JUN89

PREPARE FOR EMERGENCIES

Be prepared if a fire starts.

Keep a first aid kit and fire extinguisher handy.

Keep emergency numbers for doctors, ambulance service, hospital, and fire department near your telephone.

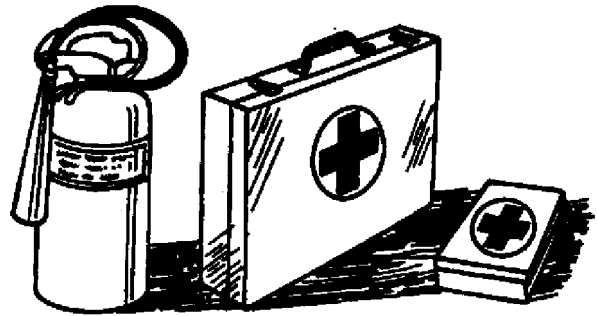

DX,FIRE2 -19-03MAR93

TS291 -UN-23AUG88


WEAR PROTECTIVE CLOTHING

Wear close fitting clothing and safety equipment appropriate to the job.

Prolonged exposure to loud noise can cause impairment or loss of hearing.

Wear a suitable hearing protective device such as earmuffs or earplugs to protect against objectionable or uncomfortable loud noises.

Operating equipment safely requires the full attention of the operator. Do not wear radio or music headphones while operating machine.

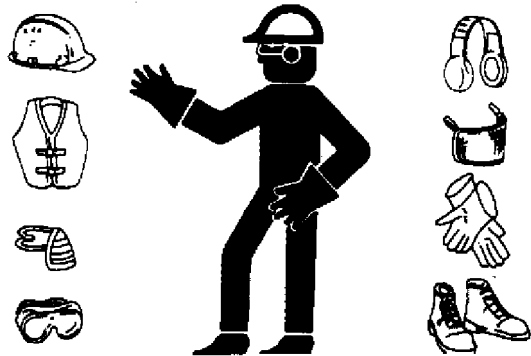

DX,WEAR -19-10SEP90

TS206 -UN-23AUG88



CHECK MACHINE SAFETY

Always check the road and general operating safety of the machine before using.

FX,READY -19-28FEB91

STAY CLEAR OF ROTATING DRIVELINES

Entanglement in rotating driveline can cause serious injury or death.

Keep tractor master shield and driveline shields in place at all times. Make sure rotating shields turn freely.

Wear close fitting clothing. Stop the engine and be sure PTO driveline is stopped before making adjustments, connections, or cleaning out PTO driven equipment.




TS1644 -UN-22AUG95

DX,PTO -19-12SEP95

USE SAFETY LIGHTS AND DEVICES

Prevent collisions between other road users, slow moving tractors with attachments or towed equipment, and self-propelled machines on public roads. Frequently check for traffic from the rear, especially in turns, and use hand signals or turn signal lights.

Use headlights, flashing warning lights, and turn signals day and night. Follow local regulations for equipment lighting and marking. Keep lighting and marking visible and in good working order. Replace or repair lighting and marking that has been damaged or lost. An implement safety lighting kit is available from your John Deere dealer.

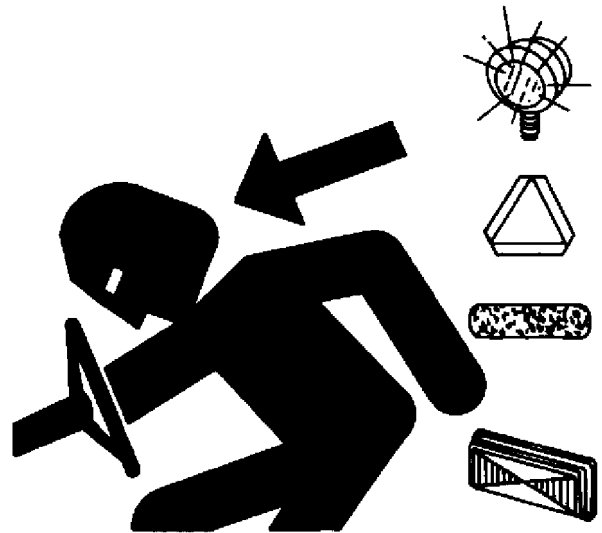

TS951 -UN-12APR90

DX,FLASH -19-12SEP95




USE A SAFETY CHAIN

A safety chain will help control drawn equipment should it accidentally separate from the drawbar.

Using the appropriate adapter parts, attach the chain to the tractor drawbar support or other specified anchor location. Provide only enough slack in the chain to permit turning.

See your John Deere dealer for a chain with a strength rating equal to or greater than the gross weight of the towed machine. Do not use safety chain for towing.

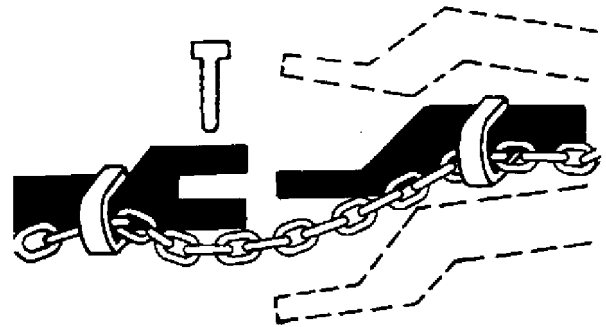

-UN-23AUG68
TS217

DX,CHAIN -19-03MAR93

OPERATE BALER SAFELY

To avoid injury or death by being pulled into the machine:

- DO NOT attempt to feed crop or twine into baler or unplug feed area WHILE BALER IS RUNNING. The baler feeds material faster than you can release it.
- Disengage PTO, shut off engine and apply flywheel brake.
- Stand clear of baler at all times when machine is operating.

ZX,OMGPP1004541-19-23SEP95

EXTINGUISHING A FIRE

1. Eject bale immediately.
2. Move tractor and baler upwind as far as possible from flammable material.
3. Fold in bale chute.
4. Use pressurized water fire extinguisher or other water supply to put out fire.

ZX,OMGPP1004665-19-23SEP95



PRACTICE SAFE MAINTENANCE

Understand service procedure before doing work. Keep area clean and dry.

Never lubricate, service, or adjust machine while it is moving. Keep hands, feet, and clothing from power-driven parts. Disengage all power and operate controls to relieve pressure. Lower equipment to the ground. Stop the engine. Remove the key. Allow machine to cool.

Securely support any machine elements that must be raised for service work.

Keep all parts in good condition and properly installed. Fix damage immediately. Replace worn or broken parts. Remove any buildup of grease, oil, or debris.

Disconnect battery ground cable (-) before making adjustments on electrical systems or welding on machine.



DX,SERV -19-03MAR93

-UN-23AUG88

T5218


AVOID HIGH-PRESSURE FLUIDS

Escaping fluid under pressure can penetrate the skin causing serious injury.

Avoid the hazard by relieving pressure before disconnecting hydraulic or other lines. Tighten all connections before applying pressure.

Search for leaks with a piece of cardboard. Protect hands and body from high pressure fluids.

If an accident occurs, see a doctor immediately. Any fluid injected into the skin must be surgically removed within a few hours or gangrene may result. Doctors unfamiliar with this type of injury should reference a knowledgeable medical source. Such information is available from Deere & Company Medical Department in Moline, Illinois, U.S.A.

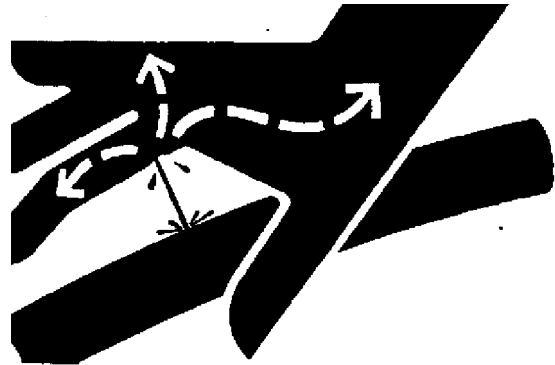

DX,FLUID -19-03MAR93

-UN-23AUG88


X9811



SERVICE MACHINES SAFELY

Tie long hair behind your head. Do not wear a necktie, scarf, loose clothing, or necklace when you work near machine tools or moving parts. If these items were to get caught, severe injury could result.

Remove rings and other jewelry to prevent electrical shorts and entanglement in moving parts.

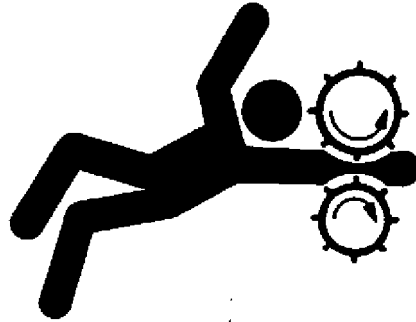


DX.LOOSE -19-04JUN90

TS228 -UN-23AUG88

SUPPORT MACHINE PROPERLY

Always lower the attachment or implement to the ground before you work on the machine. If you must work on a lifted machine or attachment, securely support the machine or attachment.

Do not support the machine on cinder blocks, hollow tiles, or props that may crumble under continuous load. Do not work under a machine that is supported solely by a jack. Follow recommended procedures in this manual.

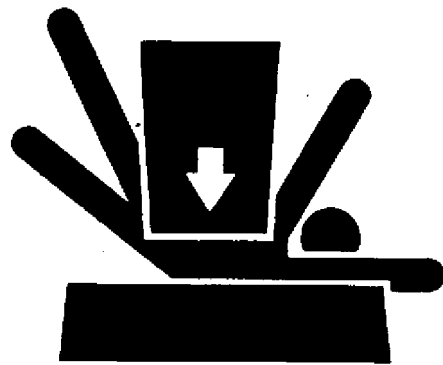

DX.LOWER -19-04JUN90

TS229 -UN-23AUG88

Thank you so much for reading.
Please click the “Buy Now!”
button below to download the
complete manual.



After you pay.

You can download the most
perfect and complete manual in
the world immediately.

Our support email:

ebooklibonline@outlook.com