

**1170  
Combine and  
314, 316  
Cutting Platforms**

**John Deere Werke Zweibrücken  
OMZ92467 Issue A7**

**European Edition  
Printed in Germany  
ENGLISCH**

# Introduction

READ THIS MANUAL carefully to learn how to operate and service your machine correctly. Failure to do so could result in personal injury or equipment damage. This manual and the safety signs on your machine may also be available in other languages (see your John Deere dealer to order).

THIS MANUAL SHOULD BE CONSIDERED a permanent part of your machine and should remain with the machine when you sell it.

MEASUREMENTS in this manual are given in both metric and customary U.S. unit equivalents. Use only correct replacement parts and fasteners. Metric and inch fasteners may require a specific metric or inch wrench.

RIGHT-HAND AND LEFT-HAND sides are determined by facing the direction of forward travel.

WRITE PRODUCT IDENTIFICATION NUMBERS (P.I.N.) in the Specification or Identification Numbers section. Accurately record all the numbers to help in tracing the machine should it be stolen. Your dealer also needs these numbers when you order parts. File the identification numbers in a secure place off the machine.

SETTING FUEL DELIVERY BEYOND PUBLISHED factory specifications or otherwise overpowering will result in loss of warranty protection for this machine.

BEFORE DELIVERING THIS MACHINE, your dealer performed a predelivery inspection. After operating for the first 20 to 50 hours, schedule an after-sale inspection with your dealer to ensure best performance.

THIS COMBINE IS DESIGNED SOLELY for use in customary agricultural or similar operations ("INTENDED USE"). Use in any other way is considered as contrary to the intended use. The manufacturer accepts no liability for damage or injury resulting from this misuse, and these risks must be borne solely by the user. Compliance with and strict adherence to the conditions of operation, service and repair as specified by the manufacturer also constitute essential elements for the intended use.

THIS COMBINE SHOULD BE OPERATED, serviced and repaired only by persons familiar with all its particular characteristics and acquainted with the relevant safety rules (accident prevention). The accident prevention regulations, all other generally recognized regulations on safety and occupational medicine and the road traffic regulations must be observed at all times. Any arbitrary modifications carried out on this combine will relieve the manufacturer of all liability for any resulting damage or injury.

# Contents

	Page		Page
<b>Identification View</b> . . . . .	00-1	Encoding Stop Warnings . . . . .	20-29
<b>Safety</b> . . . . .	05-1	Deleting Data . . . . .	20-31
<b>Safety Decals</b> . . . . .	10-1	Testing Combine Harvester Computer Components . . . . .	20-32
<b>Controls and Instruments</b>		Adjusting Sieve Loss Sensor Position . . . . .	20-33
Survey . . . . .	15-1	Sensitivity of sensors . . . . .	20-34
Multi-Function Lever . . . . .	15-2	Operational Check . . . . .	20-35
Instrument Console . . . . .	15-3	<b>Lighting System and Signals</b>	
Roof Console . . . . .	15-4	Light Switch . . . . .	25-1
Operator's Cab Controls—Functions . . . . .	15-5	Full beam . . . . .	25-1
Instrument Console—Functions . . . . .	15-7	Work Lights . . . . .	25-1
Multi-Function Lever—Functions . . . . .	15-11	Hazard Warning Lights . . . . .	25-2
Roof Console—Functions . . . . .	15-12	Turn Signals . . . . .	25-2
Miscellaneous Controls . . . . .	15-14	<b>Operator's Cab</b>	
Miscellaneous Controls—Outside Operator's Cab . . . . .	15-15	Cab Lighting . . . . .	30-1
<b>Warning Devices and Monitors</b>		Access Ladder . . . . .	30-1
Indicator Lights I . . . . .	20-1	Operator's Seat . . . . .	30-2
Indicator Lights II . . . . .	20-5	Armrest . . . . .	30-2
Combine Harvester Computer . . . . .	20-6	Foot Brakes . . . . .	30-3
Component Description . . . . .	20-7	Parking Brake . . . . .	30-3
Monitor Description . . . . .	20-8	Steering Column . . . . .	30-3
Key Description . . . . .	20-9	Storage Compartment . . . . .	30-4
Switching ON Combine Harvester Computer . . . . .	20-13	Tool Box . . . . .	30-4
Combine Harvester Computer Main Menu . . . . .	20-14	Document Holder . . . . .	30-4
Selecting Screen Display Language . . . . .	20-15	Rear Tool Box . . . . .	30-4
Operating Combine Harvester Computer . . . . .	20-16	Door . . . . .	30-5
Accessing Area Functions . . . . .	20-18	Cab Windows . . . . .	30-5
Accessing Time Functions . . . . .	20-19	Sun Visor . . . . .	30-5
Encoding Combine Harvester Computer . . . . .	20-20	<b>Pre-Starting Checks</b>	
Adjusting Grain Loss Level . . . . .	20-23	Daily Checks . . . . .	35-1
Adjusting Wheel Circumference . . . . .	20-24	Engine Oil Level . . . . .	35-1
Adjusting Working Width . . . . .	20-25	Hydraulic Oil Level . . . . .	35-2
Adjusting Loss Warning . . . . .	20-26	Coolant Level . . . . .	35-2
Adjusting Field Size . . . . .	20-27	Fuel Level . . . . .	35-2
Adjusting Date/Clock . . . . .	20-28	Lubricating The combine . . . . .	35-3
		Rotary Radiator Screen . . . . .	35-4

Continued on next page

*All information, illustrations and specifications in this manual are based on the latest information available at the time of publication. The right is reserved to make changes at any time without notice.*

OMZ92467 A7-19-03FEB97

COPYRIGHT© 1997  
DEERE & COMPANY  
European Office Mannheim  
All rights reserved  
A John Deere ILLUSTRATION® Manual  
Previous Editions  
Copyright 1996 Deere & Company

Contents

	Page		Page
Air Intake System . . . . .	35-4	Concave/Cylinder Spacing . . . . .	55-14
Tires . . . . .	35-4	Separator Operation . . . . .	55-16
Checks In Operator's Cab . . . . .	35-5	Evaluating Separation . . . . .	55-17
<b>Operating the Engine</b>		Cleaning Unit . . . . .	55-17
Engine Break-In . . . . .	40-1	Grain Screen . . . . .	55-19
Starting The Engine . . . . .	40-3	Fan . . . . .	55-20
Cold weather starting aid . . . . .	40-7	Evaluating Cleaning . . . . .	55-21
Stopping The Engine . . . . .	40-9	Grain Handling and Storage Units . . . . .	55-22
<b>Driving and Transporting Harvester</b>		Grain Loss Limit . . . . .	55-22
Driving The Harvester . . . . .	45-1	Cutting Platform Losses . . . . .	55-27
Steering And Driving . . . . .	45-1	Separator Losses . . . . .	55-27
Operating The Foot Brakes . . . . .	45-2	Straw Walker Losses . . . . .	55-28
Raising Header . . . . .	45-2	Measuring Losses . . . . .	55-28
Road Safety Switch . . . . .	45-3	Threshing Adjustments . . . . .	55-35
Forward And Reverse Travel . . . . .	45-3	Combine Settings . . . . .	55-36
Reverse Travel Alarm . . . . .	45-4	Preparations Before Changing Crop . . . . .	55-36
Choosing Correct Ground Speed . . . . .	45-4	Preparations For Harvesting Grain Crops . . . . .	55-37
Transport Information . . . . .	45-5	Preparations For Harvesting Corn . . . . .	55-37
Transport Under Own Power . . . . .	45-6	Preparations For Harvesting Oil Seed Crops . . . . .	55-37
Towing The Harvester . . . . .	45-6	Operating The Cutting Platform In Standing Crops . . . . .	55-38
<b>Wheels, Axles and Additional Weights</b>		Operating The Cutting Platform In Low Height Crops . . . . .	55-39
Tire Maintenance . . . . .	50-1	Operating The Cutting Platform In Downed Crops . . . . .	55-39
Wheel Bolts And Nuts . . . . .	50-1	<b>Feeder House</b>	
Mounting Tires . . . . .	50-2	Header Installation . . . . .	60-1
Changing Tires . . . . .	50-3	Hydraulic Connections . . . . .	60-1
Tire Pressures . . . . .	50-3	Coupling The Drives . . . . .	60-2
Counterweights . . . . .	50-3	Levelling Feeder House . . . . .	60-2
<b>Preparations and Field Operation</b>		Locking Header Lift Cylinders . . . . .	60-3
Fundamentals of Combine Operation . . . . .	55-1	3rd Lift Cylinder . . . . .	60-4
Cutting and Harvesting Unit . . . . .	55-2	Removing The Header . . . . .	60-4
Cutting Platform . . . . .	55-2	Storing Hydraulic Hoses . . . . .	60-4
Combine Ground Speed . . . . .	55-3	Hydraulic Reverser . . . . .	60-5
Cutting Height . . . . .	55-3	Adjusting Floating Drum Height . . . . .	60-5
Cutting Platform Reel Operation . . . . .	55-4	Adjusting Tension of Feeder Conveyor Chain . . . . .	60-6
Feeder House . . . . .	55-7	<b>Cutting Platform (314 and 316)</b>	
Threshing Unit . . . . .	55-8	Adjusting Reel Minimum Height . . . . .	65-1
Threshing Principles . . . . .	55-8	Angling Reel Pickup Fingers . . . . .	65-1
Cylinder And Bar Concave . . . . .	55-9	Tilting Cutterbar . . . . .	65-1
Threshing Evaluation . . . . .	55-10	Cutterbar Position . . . . .	65-3
Examination Of Tailings . . . . .	55-10	Adjusting Cutterbar Position . . . . .	65-4
Examination Of Grain . . . . .	55-11	Auger Height . . . . .	65-6
Examination Of Straw . . . . .	55-11	Auger Horizontal Position . . . . .	65-8
Examination Of Grain Loss . . . . .	55-12	Adjusting Auger Horizontal Position . . . . .	65-9
Harvesting Small Grain . . . . .	55-12		
Harvesting Large Crops . . . . .	55-13		
Cylinder Speed . . . . .	55-13		

Continued on next page

Contents

	Page		Page
Adjusting Auger Scrapers . . . . .	65-9	Straw Chopper Electro-Magnetic Clutch	
Adjusting Retractable Pickups . . . . .	65-10	Switches . . . . .	75-7
<b>Separator and Cleaning Unit</b>		Disengaging Straw Chopper . . . . .	75-8
Cylinder Inspection Ports . . . . .	70-1	Moving Straw Distributor Into Transport	
Opening Stone Trap Bottom Plate . . . . .	70-2	Position . . . . .	75-9
Cylinder Bars . . . . .	70-2	Replacing Rotating Knives . . . . .	75-10
Rotating Cylinder By Hand . . . . .	70-3	Replacing Counter-Knives . . . . .	75-10
Concave And Cylinder Alignment . . . . .	70-3	<b>Grain Tank Loading and Unloading</b>	
Adjusting Concave-to-Cylinder Spacing . . . . .	70-4	Grain Tank Inspection Window . . . . .	80-1
Adjusting Concave Extension . . . . .	70-4	Lower Elevator Inspection Windows . . . . .	80-1
Cylinder Baffle . . . . .	70-5	Elevator Auger Covers . . . . .	80-1
Concave De-Awning Plates . . . . .	70-5	Clean Grain Elevator Upper Cover . . . . .	80-2
Straw Walker Types . . . . .	70-6	Grain Tank Cover . . . . .	80-2
Fishbacks . . . . .	70-6	Adjusting Lower Auger Covers . . . . .	80-2
Straw Walker Curtain . . . . .	70-7	Auger Feeder . . . . .	80-2
Adjusting Straw Walker Bearings . . . . .	70-8	Checking Elevator Conveyor Chains . . . . .	80-3
Cleaner Arms And Connecting Rods . . . . .	70-8	Adjusting Tailings Elevator Conveyor	
Screens . . . . .	70-9	Chain . . . . .	80-3
Adjusting Chaffer Extension Angle . . . . .	70-9	Adjusting Grain Elevator Conveyor Chain . . . . .	80-3
Grain Saver System . . . . .	70-10	Adjusting Unloading Auger Cut-Out	
Chaffer Extension . . . . .	70-10	Device . . . . .	80-4
Comb-Type Chaffer Extension . . . . .	70-11	<b>Fuel, Lubricants, Coolant and Capacities</b>	
Grain Retention Plate . . . . .	70-11	Engine Oil . . . . .	85-2
Removing Chaffer Extension . . . . .	70-11	Coolant . . . . .	85-3
Removing Chaffer . . . . .	70-12	Transmission Oil . . . . .	85-4
Removing Grain Sieve . . . . .	70-12	Hydraulic Oil . . . . .	85-5
Cleaning The Chaffers And Sieves . . . . .	70-12	Brake Fluid . . . . .	85-6
Opening The Pan . . . . .	70-12	Grease . . . . .	85-7
Adjusting Air Flow Direction . . . . .	70-13	Alternative Lubricants . . . . .	85-7
Adjusting Fan Speed . . . . .	70-13	Lubricant Storage . . . . .	85-8
Bar Concave For Large Grain . . . . .	70-14	Periodic Maintenance . . . . .	85-9
Special Kit For Corn . . . . .	70-14	<b>Lubrication Chart, Periodic Service</b>	
<b>Straw Chopper</b>		Lubrication Charts . . . . .	90-1
General Information . . . . .	75-1	Break-in Period . . . . .	90-5
Engaging Straw Chopper . . . . .	75-1	Every 10 Hours . . . . .	90-5
Moving Straw Distributor Into Operating		After The First 100 Hours . . . . .	90-6
Position . . . . .	75-2	Every 250 Hours . . . . .	90-6
Adjusting Straw Deflectors . . . . .	75-3	Every 500 Hours . . . . .	90-6
Adjusting Counter-Knives . . . . .	75-3	Every 1000 Hours . . . . .	90-7
Chopping Corn And Sunflowers . . . . .	75-4	After Each Harvesting Season . . . . .	90-7
Reducing Straw Chopper Rotor Speed . . . . .	75-5	Belts . . . . .	90-9
Operating Straw Chopper . . . . .	75-5	Chains . . . . .	90-10
Driving On Public Roads . . . . .	75-6	<b>Service — Engine</b>	
Electro-Magnetic Straw Chopper Clutch . . . . .	75-6	Engine Service Platform . . . . .	95-1
Straw Chopper Alarm (Independent Of		Engine Service Flap . . . . .	95-1
Combine Harvester Computer) . . . . .	75-7	Adjusting Engine Valve Tappets . . . . .	95-1
		Checking Oil level . . . . .	95-2

Continued on next page

Contents

	Page		Page
Changing Oil And Filter . . . . .	95-3	Adjusting Cutting Platform Auger Slip Clutch . . . . .	105-5
Service — Fuel System . . . . .	95-4	Feeder House Drive . . . . .	105-6
Fuel System . . . . .	95-5	Adjusting Feeder House Slip Clutch . . . . .	105-6
Fuel Tank Filler Neck . . . . .	95-5	Adjusting Header Drive Chain . . . . .	105-6
Fuel Tank Water Trap . . . . .	95-6	Replacing Header Drive Chain . . . . .	105-7
Emptying Fuel Filter . . . . .	95-6	Replacing Feeder House Drive Belt . . . . .	105-7
Replacing Fuel Filter Element . . . . .	95-7	Adjusting Feeder House Hydraulic Reverser Drive Chain . . . . .	105-8
Cleaning The Fuel System Water Trap . . . . .	95-8	Adjusting Threshing Unit Drive Belt Tension . . . . .	105-9
Fuel Transfer Pump . . . . .	95-8	Replacing Threshing Unit Drive Belt . . . . .	105-9
Checking Injection Nozzles . . . . .	95-8	Adjusting Threshing Unit Drive Belt Guide . . . . .	105-10
Bleeding The Fuel System . . . . .	95-9	Adjusting Hydraulic Variable Speed Drive . . . . .	105-10
Engine Coolant . . . . .	95-11	Replacing Cylinder Variable Speed Drive Belt . . . . .	105-11
Radiator Coolant Level . . . . .	95-11	Adjusting Straw Walker V-Belt Tension . . . . .	105-13
Cooling System Components . . . . .	95-12	Adjusting Straw Walker Drive Chain . . . . .	105-13
Cleaning the Rotary Screen . . . . .	95-12	Adjusting Straw Walker Slip Clutch . . . . .	105-13
Flushing The Cooling System . . . . .	95-13	Adjusting The Fan Variable Speed Drive Belt Tension . . . . .	105-13
Replacing Thermostats . . . . .	95-14	Replacing The Fan Variable Speed Drive Belt . . . . .	105-14
Checking Belt Tension And Wear . . . . .	95-14	Adjusting Tailings Elevator Drive Belt Tension . . . . .	105-15
Replacing Fan/Alternator V-Belt . . . . .	95-16	Adjusting Tailings Elevator Slip Clutch . . . . .	105-16
Air Intake System . . . . .	95-16	Adjusting Tailings Elevator Upper Auger Drive . . . . .	105-16
Air Filter Primary Element . . . . .	95-17	Adjusting Clean Grain Elevator Slip Clutch . . . . .	105-16
Washing Element . . . . .	95-18	Adjusting Clean Grain Elevator Drive Belt Tension . . . . .	105-16
Replacing Air Filter Primary Element . . . . .	95-18	Adjusting Upper Auger Drive Chain . . . . .	105-17
Replacing Air Filter Secondary Element . . . . .	95-19	Adjusting Auger Feeder Drive Chain . . . . .	105-17
Element Storage . . . . .	95-19	Adjusting Unloading System Drive . . . . .	105-18
Air Intake Lines . . . . .	95-20	Adjusting Unloading Auger Drive Chain . . . . .	105-19
Turbocharger . . . . .	95-20	Tensioning Drive Belt To Straw Chopper Countershaft . . . . .	105-19
<b>Service — Compressed Air System</b>		Adjusting Straw Chopper Intermediate Drive Belt . . . . .	105-20
Compressed Air System Reservoir . . . . .	100-1		
Draining The Air Reservoir . . . . .	100-1	<b>Service — Electrical System</b>	
Air Hose . . . . .	100-1	Specifications . . . . .	110-1
Using Compressed Air . . . . .	100-1	Alternator . . . . .	110-4
Adjusting Compressor Drive Belt Tension . . . . .	100-2	Starting motor . . . . .	110-4
<b>Service — Drives and Shields</b>		Electronic Boards . . . . .	110-5
Right Side Shield . . . . .	105-1	Fuses On Fuse Board . . . . .	110-6
Left Side Shields . . . . .	105-2	Relays On Fuse Board . . . . .	110-7
Straw Chopper Idler Pulley Shield . . . . .	105-2	Straw Chopper And Fan Motor Control Box . . . . .	110-7
Header Drive Shield . . . . .	105-3		
Drive Chains . . . . .	105-3		
V-Belts . . . . .	105-4		
Adjusting Hydraulic Pump Drive Belt Tension . . . . .	105-4		
Adjusting Reel Motor Chain Tension . . . . .	105-4		
Adjusting Cutterbar Drive Belt . . . . .	105-5		
Adjusting Cutting Platform Auger Drive Chain . . . . .	105-5		

Continued on next page

Contents

	Page		Page
Combine Harvester Computer Control Box . . .	110-8		
Cab Roof Fuses . . . . .	110-8		
Starting Motor Relay . . . . .	110-8		
Solenoid Valves . . . . .	110-9		
Adjusting Fan Speed Sending Unit . . . . .	110-9		
Adjusting Tailings And Grain Auger Sending Units . . . . .	110-10		
Adjusting Straw Walker Sending Units . . . . .	110-10		
Adjusting Straw Chopper Speed Sending Unit . . . . .	110-11		
Adjusting Combine Ground Speed Sending Unit . . . . .	110-11		
Adjusting Area Counter Switch . . . . .	110-11		
Adjusting Fan Drive Motor Limit Switches . . .	110-12		
 <b>Service — Hydraulic System</b>			
Pressure Relief Valves . . . . .	115-2		
Hydraulic System Description . . . . .	115-3		
Hydraulic Oil Reservoir . . . . .	115-4		
Checking Hydraulic Oil Level . . . . .	115-4		
Changing The Hydraulic Oil Filter . . . . .	115-5		
Draining Hydraulic System Oil . . . . .	115-6		
Refilling Hydraulic System . . . . .	115-7		
Bleeding The Reel Variable Speed Drive System . . . . .	115-7		
Accumulator . . . . .	115-8		
 <b>Service — Ground Speed Drive</b>			
Brake Fluid Reservoir . . . . .	120-1		
Adjusting Foot Brakes . . . . .	120-1		
Adjusting Parking Brake . . . . .	120-1		
Hydrostatic Drive Components . . . . .	120-2		
Changing Hydrostatic Drive Oil And Filter . . .	120-3		
Cleaning Oil Cooler . . . . .	120-4		
Transmission . . . . .	120-5		
Final Drives . . . . .	120-6		
Tightening Front Axle Attaching Screws . . . .	120-6		
Rear Axle Toe-In . . . . .	120-7		
Steering System Components . . . . .	120-8		
 <b>Service — Air Conditioning and Heating</b>			
Adjusting Compressor Drive Belt Tension . . .	125-1		
Checking Refrigerant Level . . . . .	125-1		
Low Pressure Switch . . . . .	125-2		
High Pressure Switch . . . . .	125-2		
Cleaning The Condenser . . . . .	125-3		
Cab Air Filters . . . . .	125-3		
Cleaning Air Intake Opening . . . . .	125-3		
Cab Air Filters . . . . .	125-4		
Cleaning Paper Filter Element . . . . .	125-5		
Cleaning Evaporator . . . . .	125-6		
 <b>Service — Cutting Platform</b>			
Cutterbar Removal And Installation . . . . .	130-1		
Blade Position . . . . .	130-1		
Aligning Double Fingers . . . . .	130-2		
Adjusting Cutterbar Wear Plate . . . . .	130-3		
Adjusting Blade Support Clamps . . . . .	130-4		
Checking Cutting Mechanism Drive Oil Level . . . . .	130-4		
 <b>Storage</b>			
After The Season . . . . .	135-1		
Removing Combine From Storage . . . . .	135-4		
 <b>Specifications</b>			
Operating Speeds . . . . .	140-1		
300 Series Cutting Platforms . . . . .	140-2		
1170 Combine . . . . .	140-3		
1170 Combine Dimensions . . . . .	140-8		
 <b>Serial Numbers</b>			
Type Plates . . . . .	145-1		
 <b>Index</b>			

*Contents*



# Identification View



ZX009062

ZX009062  
-UN-10JUN96


ZX,OMSLC 006476-19-01MAY96

# Safety

## RECOGNIZE SAFETY INFORMATION

This is the safety-alert symbol. When you see this symbol on your machine or in this manual, be alert to the potential for personal injury.

Follow recommended precautions and safe operating practices.

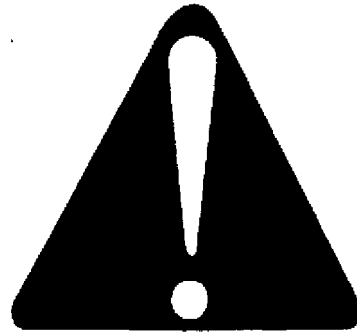

DX,ALERT -19-03MAR93

T81389 -UN-07DEC68


## FOLLOW SAFETY INSTRUCTIONS

Carefully read all safety messages in this manual and on your machine safety signs. Keep safety signs in good condition. Replace missing or damaged safety signs. Be sure new equipment components and repair parts include the current safety signs. Replacement safety signs are available from your John Deere dealer.

Learn how to operate the machine and how to use controls properly. Do not let anyone operate without instruction.

Keep your machine in proper working condition. Unauthorized modifications to the machine may impair the function and/or safety and affect machine life.

If you do not understand any part of this manual and need assistance, contact your John Deere dealer.

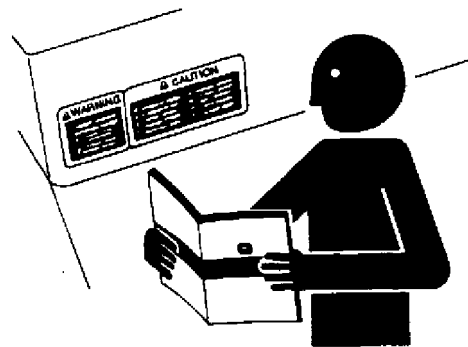

DX,READ -19-03MAR93

T5201 -UN-23AUG88

## UNDERSTAND SIGNAL WORDS

A signal word—DANGER, WARNING, or CAUTION—is used with the safety-alert symbol. DANGER identifies the most serious hazards.

DANGER or WARNING safety signs are located near specific hazards. General precautions are listed on CAUTION safety signs. CAUTION also calls attention to safety messages in this manual.



DX,SIGNAL -19-03MAR93

T5187 -19-30SEP88



## OBSERVE ROAD TRAFFIC REGULATIONS

Always observe local road traffic regulations when using public roads.



H28930 -UN-30JUN89

FX,ROAD -19-01MAY91



**CAUTION:** Avoid possible injury or death from machinery runaway.

**Do not start engine by shorting across starter terminals. Machine will start in gear if normal circuitry is bypassed.**

**NEVER start engine while standing on ground. Start engine only from operator's seat, with transmission in neutral or park.**

DX,BYPAS -19-26JAN90




## USE SAFETY LIGHTS AND DEVICES

Slow moving tractors, self-propelled equipment and towed implements or attachments can create a hazard when driving on public roads. They are difficult to see, especially at night. Avoid personal injury or death resulting from collision with a vehicle.

If legally permitted, use flashing warning lights or rotary beacons whenever driving on public roads. To increase visibility, use the lights and devices provided with your machine. For some equipment, install additional flashing warning lights.

Keep safety items in good condition. Replace missing or damaged items. An implement safety lighting kit is available from your John Deere dealer.

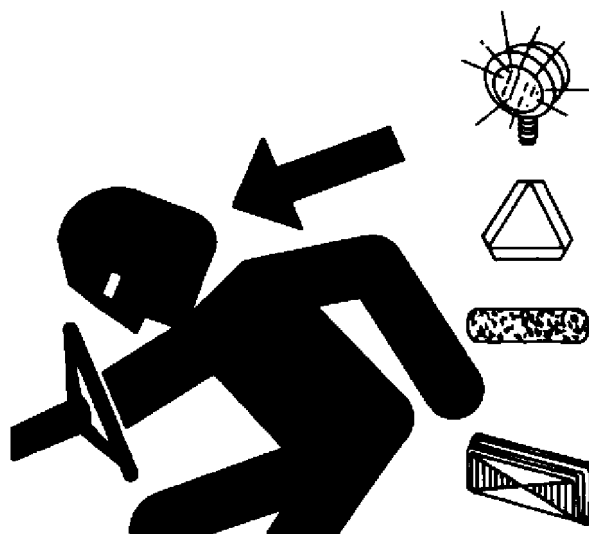

TS951 -UN-12APR90


ZX,FLASH -19-01OCT91

## PREPARE FOR EMERGENCIES

Be prepared if a fire starts.

Keep a first aid kit and fire extinguisher handy.

Keep emergency numbers for doctors, ambulance service, hospital, and fire department near your telephone.

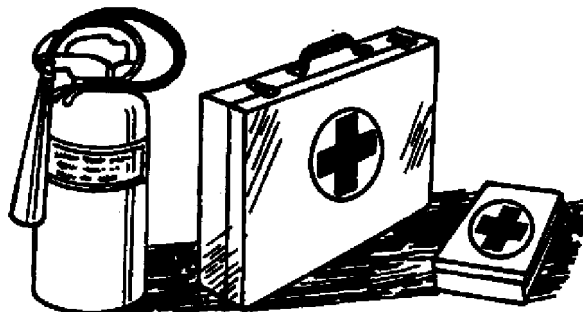

TS291 -UN-23AUG88

DX,FIRE2 -19-03MAR93




## WEAR PROTECTIVE CLOTHING

Wear close fitting clothing and safety equipment appropriate to the job.

Prolonged exposure to loud noise can cause impairment or loss of hearing.

Wear a suitable hearing protective device such as earmuffs or earplugs to protect against objectionable or uncomfortable loud noises.

Operating equipment safely requires the full attention of the operator. Do not wear radio or music headphones while operating machine.

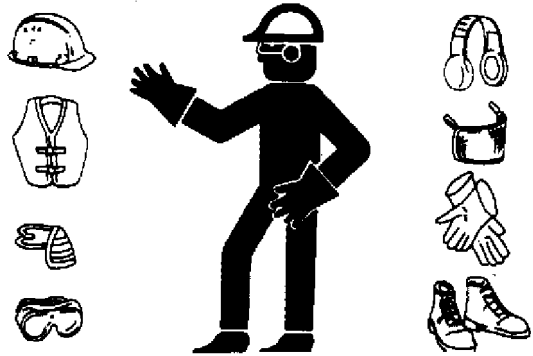

DX,WEAR -19-10SEP90

TS206 -UN-23AUG88

## HANDLE FUEL SAFELY—AVOID FIRES

Handle fuel with care: it is highly flammable. Do not refuel the machine while smoking or when near open flame or sparks.

Always stop engine before refueling machine. Fill fuel tank outdoors.

Prevent fires by keeping machine clean of accumulated trash, grease, and debris. Always clean up spilled fuel.




DX,FIRE1 -19-03MAR93

TS202 -UN-23AUG88

## STORE ATTACHMENTS SAFELY

Stored attachments such as dual wheels, cage wheels, and loaders can fall and cause serious injury or death.

Securely store attachments and implements to prevent falling. Keep playing children and bystanders away from storage area.

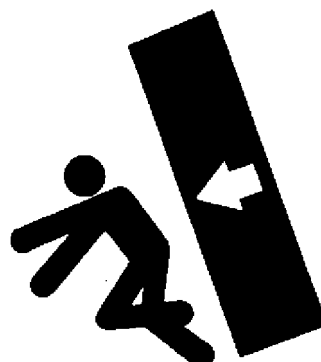

DX,STORE -19-03MAR93

TS219 -UN-23AUG88




## FIRE EXTINGUISHER

A 6 kg (13 lb) general purpose fire extinguisher meeting local legal requirements has to be installed on the left-hand side of the operator's platform.

Maintain fire extinguisher to keep it in operational condition.

Keep the engine clean and free of dust, chaff and straw to prevent the possibility of a fire.

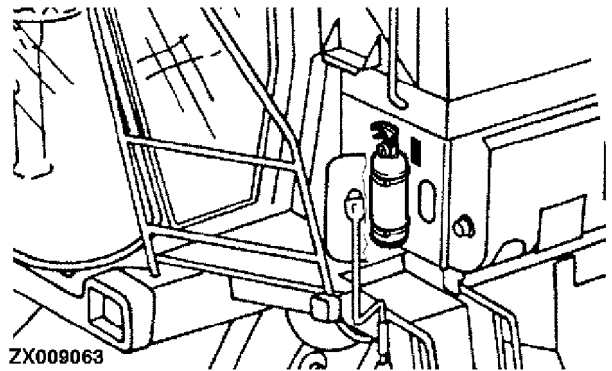

ZX009063

ZX,FIRESLC -19-01MAY96

-UN-10JUN96  
ZX009063


## CHECK MACHINE SAFETY

Always check the road and general operating safety of the machine before using.

FX,READY -19-28FEB91

## MOUNT AND DISMOUNT SAFELY

Use handrail when mounting or dismounting the combine.

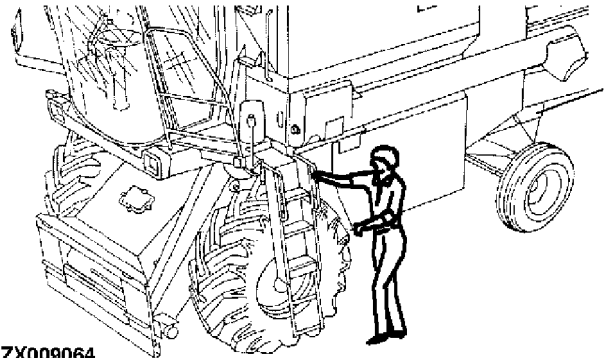

ZX009064

ZX,HANDLESLC -19-01MAY96

-UN-10JUN96  
ZX009064

## RIDERS

Only allow the operator and one rider on the machine.

Other riders are subject to injury such as being thrown off the machine and obstruct the operator's view resulting in the machine being operated in an unsafe manner.

One rider is permitted, since the machine is equipped with a factory-approved passenger seat.



ZX,PASSENGER -19-02OCT91

-UN-23AUG88  
TS253



## EMERGENCY EXIT

The right-hand cab window may be used as an emergency exit. Disengage the linkage on the sidewall of the cab and open the window.

ZX009065



ZX009065 -UN-10JUN96

ZX,OMSLC006477 -19-01MAY96

## DRIVING THE COMBINE

Operate machine only when all guards are correctly installed.

Before moving away, always check immediate vicinity of machine (e.g. for children). Ensure adequate visibility. Use the horn as a warning immediately before moving away.

Always adapt ground speed to road or field conditions. Avoid making sharp turns when driving up or down slopes or when driving across a slope. Be especially careful when turning on slopes with full grain tank.


Attach harvesting units and other implements to combine with extreme care.

When making turns, always take into consideration the width of the attachment and the fact that the rear end of the combine swings out. Attachments and ground conditions affect the driving characteristics of the combine.

Reduce ground speed when driving on slopes or over uneven ground and before making sharp turns. Before descending a steep hill, shift to a lower gear.

Avoid holes, ditches and obstructions which may cause the combine to tip, particularly on hillsides.

ZX002461

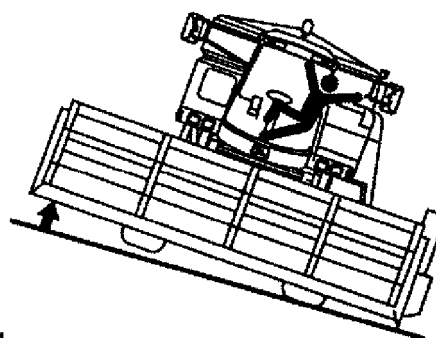

ZX002461 -UN-16JUN95

ZX,DRIVEXZCO -19-27JAN92




### GUARDS AND SHIELDS

Keep guards and shields in place at all times. Ensure that they are serviceable and installed correctly.

Always disengage main clutch, shut off engine and remove key before removing any guards or shields.

Keep hands, feet and clothing away from moving parts.

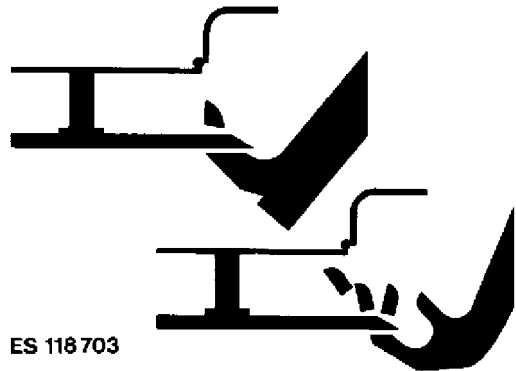

ES 118 703

FX,DEVICE -19-04DEC90

ES118703 -UN-21MAR95

### STAY CLEAR OF HARVESTING UNITS

Cutterbar, auger, reel and feed rolls cannot be completely shielded due to their function. Stay clear of these moving elements during operation. Always disengage main clutch, shut off engine and remove key before servicing or unclogging machine.



ES 118 704

FX,CUT -19-21DEC90

ES118704 -UN-21MAR95

### STAY CLEAR OF ROTATING DRIVELINES

Entanglement in rotating driveline can cause serious injury or death.

Keep tractor master shield and driveline shields in place at all times. Make sure rotating shields turn freely.

Wear close fitting clothing. Stop the engine and be sure PTO driveline is stopped before making adjustments, connections, or cleaning out PTO driven equipment.




DX,PTO -19-12SEP95

TS1644 -UN-22AUG95

### TRANSPORT WITH HARVESTING UNIT INSTALLED

Before driving combine on public roads, harvesting unit must be raised and secured in this position. It must not, however, obstruct operator's view of the road. Remove crop dividers (if equipped) and install protective cover.

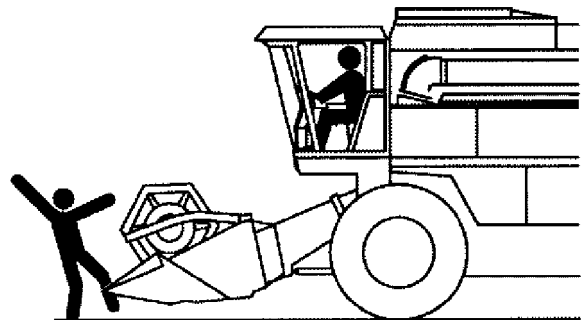

ZX002462

ZX,HEADERXZCO -19-27JAN92


ZX002462 -UN-16JUN95





## BALLASTING FOR SAFE GROUND CONTACT

Operating, steering and braking performance of the combine can be considerably affected by attachments which alter the center of gravity of the machine. To maintain safe ground contact, ballast the combine at the rear end as necessary. Observe the maximum permissible axle loads and total weights.

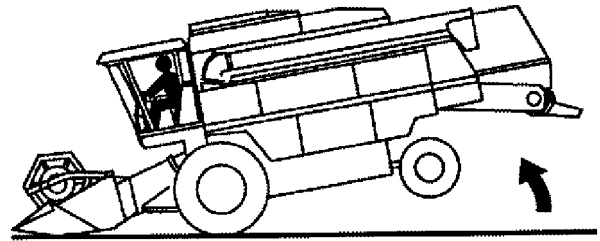

ZX002463

ZX,WEIGHTXZCO -19-27JAN92


-UN-16JUN95  
ZX002463

## RADIO AERIAL

If radio aerial is not secured in its transport position before driving on public roads, it may come into contact with low-hanging electrical cables. This would result in the operator suffering a severe electrical shock.

To avoid electrical shock, no portion of the machine should be higher than 4 m.

Before transporting machine, bend aerial or remove it.

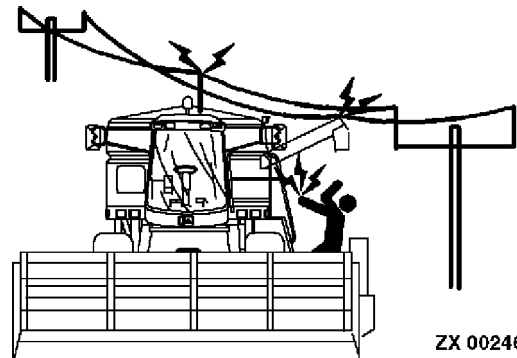

ZX 002464

ZX,ANTENNAZCO -19-27JAN92

-UN-16JUN95  
ZX002464

## PARKING AND LEAVING THE COMBINE


Lower harvesting unit to the ground.

Before leaving the combine, disengage harvesting unit and separator. Shut off engine and move gear shift lever to neutral. Apply parking brake, remove key and lock the operator's cab. Position chock blocks.

*NOTE: Use only chock blocks provided with the machine.*

Never leave combine unattended as long as engine is running.

Never leave the operator's cab when driving.

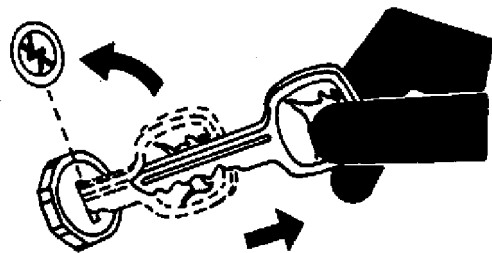

ZX,PARKXZCO -19-13APR92


-UN-24MAY89  
TS230



## WORK IN VENTILATED AREA

Engine exhaust fumes can cause sickness or death. If it is necessary to run an engine in an enclosed area, remove the exhaust fumes from the area with an exhaust pipe extension.

If you do not have an exhaust pipe extension, open the doors and get outside air into the area.

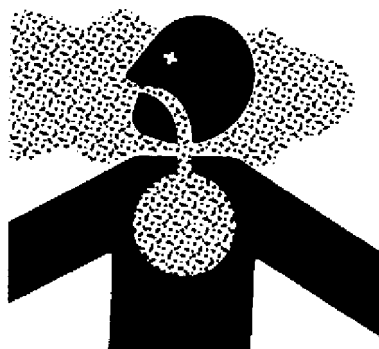

DX,AIR -19-04JUN90

TS220 -UN-23AUG88

## PRACTICE SAFE MAINTENANCE

Understand service procedure before doing work. Keep area clean and dry.

Never lubricate, service, or adjust machine while it is moving. Keep hands, feet, and clothing from power-driven parts. Disengage all power and operate controls to relieve pressure. Lower equipment to the ground. Stop the engine. Remove the key. Allow machine to cool.

Securely support any machine elements that must be raised for service work.

Keep all parts in good condition and properly installed. Fix damage immediately. Replace worn or broken parts. Remove any buildup of grease, oil, or debris.

Disconnect battery ground cable (-) before making adjustments on electrical systems or welding on machine.




DX,SERV -19-03MAR93

TS218 -UN-23AUG88

## SERVICE MACHINES SAFELY

Tie long hair behind your head. Do not wear a necktie, scarf, loose clothing, or necklace when you work near machine tools or moving parts. If these items were to get caught, severe injury could result.

Remove rings and other jewelry to prevent electrical shorts and entanglement in moving parts.

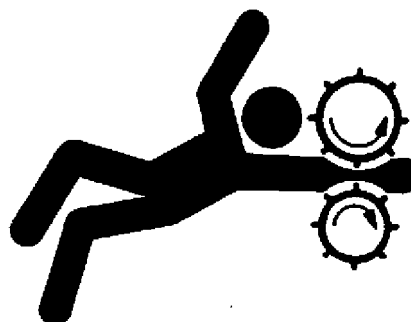

DX,LOOSE -19-04JUN90


TS228 -UN-23AUG88



## SUPPORT MACHINE PROPERLY

Always lower the attachment or implement to the ground before you work on the machine. If you must work on a lifted machine or attachment, securely support the machine or attachment.

Do not support the machine on cinder blocks, hollow tiles, or props that may crumble under continuous load. Do not work under a machine that is supported solely by a jack. Follow recommended procedures in this manual.

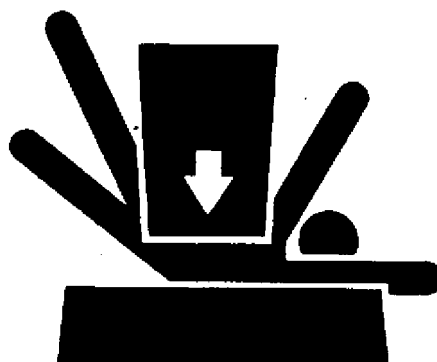


DX,LOWER -19-04JUN90

-UN-23AUG68  
TS229

## RETORQUE WHEEL NUTS

Retorque wheel nuts as specified in Sections "Wheels and Ballast" and "Lubrication, Periodic Services". Failure to do this could result in a wheel falling off during operation, causing the machine to tip over with serious injury to the operator and extensive damage to the machine.

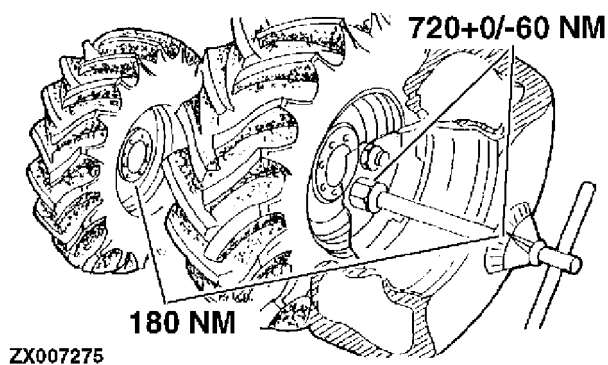

ZX,NUTS -19-01MAR95

-UN-19JUN95  
ZX007275




## AVOID HIGH-PRESSURE FLUIDS

Escaping fluid under pressure can penetrate the skin causing serious injury.

Avoid the hazard by relieving pressure before disconnecting hydraulic or other lines. Tighten all connections before applying pressure.

Search for leaks with a piece of cardboard. Protect hands and body from high pressure fluids.

If an accident occurs, see a doctor immediately. Any fluid injected into the skin must be surgically removed within a few hours or gangrene may result. Doctors unfamiliar with this type of injury should reference a knowledgeable medical source. Such information is available from Deere & Company Medical Department in Moline, Illinois, U.S.A.

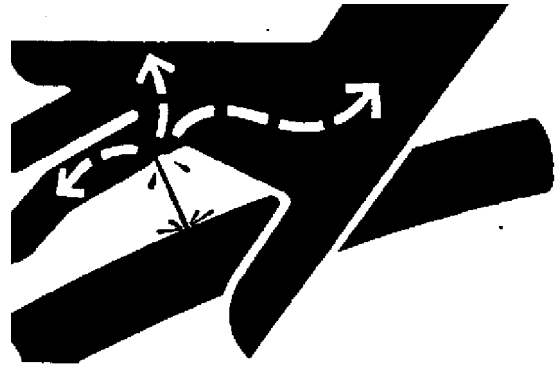

X9811 -UN-23AUG88

DX,FLUID -19-03MAR93

## PREVENT BATTERY EXPLOSIONS

Keep sparks, lighted matches, and open flame away from the top of battery. Battery gas can explode.

Never check battery charge by placing a metal object across the posts. Use a volt-meter or hydrometer.

Do not charge a frozen battery; it may explode. Warm battery to 16°C (60°F).



TS204 -UN-23AUG88

DX,SPARKS -19-03MAR93



## PREVENT ACID BURNS

Sulfuric acid in battery electrolyte is poisonous. It is strong enough to burn skin, eat holes in clothing, and cause blindness if splashed into eyes.

Avoid the hazard by:


1. Filling batteries in a well-ventilated area.
2. Wearing eye protection and rubber gloves.
3. Avoiding breathing fumes when electrolyte is added.
4. Avoiding spilling or dripping electrolyte.
5. Use proper jump start procedure.

If you spill acid on yourself:

1. Flush your skin with water.
2. Apply baking soda or lime to help neutralize the acid.
3. Flush your eyes with water for 15—30 minutes. Get medical attention immediately.

If acid is swallowed:

1. Do not induce vomiting.
2. Drink large amounts of water or milk, but do not exceed 2 L (2 quarts).
3. Get medical attention immediately.

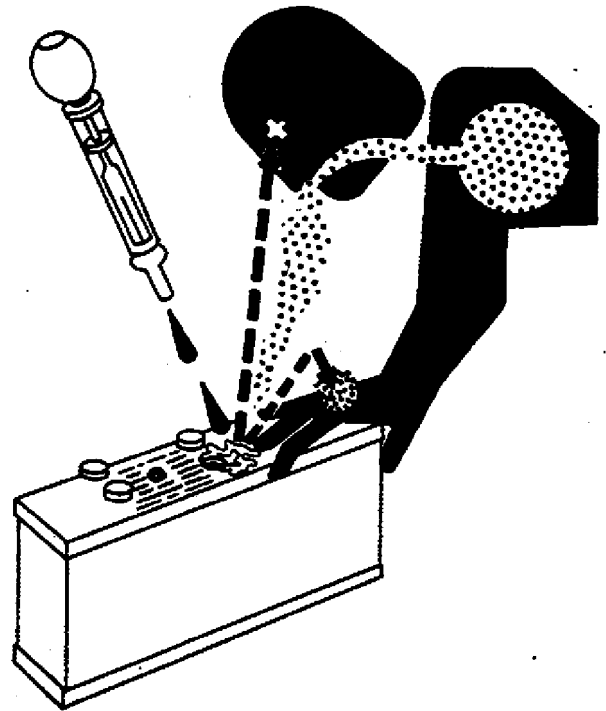

DX\_POISON -19-21APR93

TSS203 -UN-23AUG88

Thank you so much for reading.  
Please click the “Buy Now!”  
button below to download the  
complete manual.



After you pay.

You can download the most  
perfect and complete manual in  
the world immediately.

Our support email:

[ebooklibonline@outlook.com](mailto:ebooklibonline@outlook.com)