

**2254, 2256, 2258,  
2264 and 2266  
Combines**

**John Deere Werke Zweibrücken  
OMZ92501 Issue K6**

**European Edition**

Printed in Germany

**ENGLISCH**

# Introduction

READ THIS MANUAL carefully to learn how to operate and service your machine correctly. Failure to do so could result in personal injury or equipment damage. This manual and the safety signs on your machine may also be available in other languages (see your John Deere dealer to order).

THIS MANUAL SHOULD BE CONSIDERED a permanent part of your machine and should remain with the machine when you sell it.

MEASUREMENTS in this manual are given in both metric and customary U.S. unit equivalents. Use only correct replacement parts and fasteners. Metric and inch fasteners may require a specific metric or inch wrench.

RIGHT-HAND AND LEFT-HAND sides are determined by facing the direction of forward travel.

WRITE PRODUCT IDENTIFICATION NUMBERS (P.I.N.) in the Specification or Identification Numbers section. Accurately record all the numbers to help in tracing the machine should it be stolen. Your dealer also needs these numbers when you order parts. File the identification numbers in a secure place off the machine.

SETTING FUEL DELIVERY BEYOND PUBLISHED factory specifications or otherwise overpowering will result in loss of warranty protection for this machine.

BEFORE DELIVERING THIS MACHINE, your dealer performed a predelivery inspection. After operating for the first 20 to 50 hours, schedule an after-sale inspection with your dealer to ensure best performance.

THIS COMBINE IS DESIGNED SOLELY for use in customary agricultural or similar operations ("INTENDED USE"). Use in any other way is considered as contrary to the intended use. The manufacturer accepts no liability for damage or injury resulting from this misuse, and these risks must be borne solely by the user. Compliance with and strict adherence to the conditions of operation, service and repair as specified by the manufacturer also constitute essential elements for the intended use.

THIS COMBINE SHOULD BE OPERATED, serviced and repaired only by persons familiar with all its particular characteristics and acquainted with the relevant safety rules (accident prevention). The accident prevention regulations, all other generally recognized regulations on safety and occupational medicine and the road traffic regulations must be observed at all times. Any arbitrary modifications carried out on this combine will relieve the manufacturer of all liability for any resulting damage or injury.

# Contents

	Page		Page
<b>Identification Views</b> . . . . .	00-1	Straw warning device . . . . .	20-50
<b>Safety</b> . . . . .	05-1	<b>Lighting System and Signals</b>	
<b>Safety Decals</b> . . . . .	10-1	Parking light and low beam . . . . .	25-1
<b>Controls and Instruments</b>		Full beam . . . . .	25-1
Survey . . . . .	15-1	Turn signals . . . . .	25-2
Switch console . . . . .	15-2	Work lights . . . . .	25-4
Multi-function lever . . . . .	15-7	Beacon lights . . . . .	25-7
Roof switch console . . . . .	15-9	Hazard warning lights . . . . .	25-8
Roof console . . . . .	15-10	Indicator light bulb test . . . . .	25-8
Steering column . . . . .	15-11	<b>Operator's Cab</b>	
Switch console — Functions . . . . .	15-12	Door . . . . .	30-3
Right armrest — Functions . . . . .	15-34	Operator's seat . . . . .	30-3
Multi-function lever — Functions . . . . .	15-36	Lumbar support . . . . .	30-4
Roof console — Functions . . . . .	15-39	Left armrest . . . . .	30-4
Steering column — Functions . . . . .	15-41	Right armrest . . . . .	30-4
<b>Warning Devices and Monitors</b>		Ashtray . . . . .	30-5
Indicator lights I . . . . .	20-1	Passenger seat . . . . .	30-6
Indicator lights II . . . . .	20-6	Storage compartment for operator's manuals . . . . .	30-6
Header height gauge . . . . .	20-11	Cooling compartment . . . . .	30-7
Distributor plate gauge . . . . .	20-12	Steering column . . . . .	30-7
Fuel gauge . . . . .	20-12	Foot brakes . . . . .	30-8
Coolant temperature gauge . . . . .	20-12	Parking brake . . . . .	30-8
Infotrak monitor . . . . .	20-13	Releasing parking brake . . . . .	30-9
Cylinder speed alarm . . . . .	20-18	Sun visor . . . . .	30-9
SERVICE information . . . . .	20-19	Outside mirrors . . . . .	30-10
Automatic adjustments . . . . .	20-20	Switching on heater . . . . .	30-10
Combine data center . . . . .	20-21	Adjustable air louvers . . . . .	30-11
Area counter . . . . .	20-24	Interior lighting . . . . .	30-12
Operational diagrams . . . . .	20-28	Digital clock . . . . .	30-12
Low shaft speed monitor system . . . . .	20-42	Radio and CB radio . . . . .	30-13
Harvest performance monitor . . . . .	20-44	Rear window of cab . . . . .	30-13
Preliminary adjustments . . . . .	20-45	<b>Pre-Starting Checks</b>	
Switching on harvest performance monitor . . . . .	20-45	Daily checks . . . . .	35-1
Operational adjustment . . . . .	20-46	Engine oil level . . . . .	35-1
Sensitivity of sensors . . . . .	20-48	Hydraulic oil level . . . . .	35-1
Operational check . . . . .	20-49	Coolant level . . . . .	35-2
		Fuel level . . . . .	35-2

Continued on next page

*All information, illustrations and specifications in this manual are based on the latest information available at the time of publication. The right is reserved to make changes at any time without notice.*

OMZ92501 K6-19-21NOV96

COPYRIGHT© 1996  
DEERE & COMPANY  
European Office Mannheim  
All rights reserved  
A John Deere ILLUSTRATION® Manual

## Contents

	Page		Page
Tires . . . . .	35-2	Grain cleaning process . . . . .	55-5
Fuel system . . . . .	35-3	Grain recovery . . . . .	55-5
Lubricating the combine . . . . .	35-3	Evaluating threshing action . . . . .	55-6
Checks in operator's cab . . . . .	35-3	Checking straw at rear of combine . . . . .	55-6
<b>Operating the Engine</b>		Grain tank sample . . . . .	55-6
Engine break-in . . . . .	40-1	Checking tailings . . . . .	55-7
Starting the engine . . . . .	40-1	Identifying threshing problems . . . . .	55-7
Engine oil pressure indicator light . . . . .	40-4	Overthreshing . . . . .	55-8
Warming up the engine . . . . .	40-4	Underthreshing . . . . .	55-8
Idling the engine . . . . .	40-4	Adjusting fan speed . . . . .	55-9
Cold-weather starting aid . . . . .	40-5	Adjusting the chaffer . . . . .	55-10
Coolant preheater . . . . .	40-7	Slope Master system . . . . .	55-11
Booster battery . . . . .	40-8	Adjusting the sieve . . . . .	55-12
Stopping the engine . . . . .	40-9	Acceptable grain losses . . . . .	55-12
<b>Driving and Transporting Harvester</b>		The meaning of grain losses . . . . .	55-12
Driving the harvester . . . . .	45-1	Determining grain losses . . . . .	55-13
Releasing parking brake . . . . .	45-1	Causes of grain losses . . . . .	55-15
Operating the foot brakes . . . . .	45-2	Cutting platform losses . . . . .	55-15
Engaging a gear . . . . .	45-2	Threshing unit losses . . . . .	55-15
Road safety switch . . . . .	45-3	Straw walker losses . . . . .	55-16
Adjusting engine speed . . . . .	45-3	Sieve losses . . . . .	55-16
Raising header . . . . .	45-3	General prevention of grain losses . . . . .	55-17
Forward and reverse travel . . . . .	45-4	Threshing adjustments . . . . .	55-18
Ground speed . . . . .	45-5	Combine settings and automatic adjustments . . . . .	55-19
Hydrostatic system . . . . .	45-6	Additional combine settings . . . . .	55-20
Transport information . . . . .	45-6	Preparations before changing crop . . . . .	55-21
Four-wheel drive . . . . .	45-8	Preparations for harvesting grain crops . . . . .	55-22
Towing the harvester . . . . .	45-9	Preparations for harvesting rye . . . . .	55-22
<b>Wheels, Axles and Additional Weights</b>		Preparations for harvesting peas . . . . .	55-22
Tire maintenance . . . . .	50-1	Preparations for harvesting corn . . . . .	55-23
Wheel bolts and nuts . . . . .	50-1	Harvesting corn/cob mix (CCM) . . . . .	55-23
Mounting tires . . . . .	50-2	Preparations for harvesting oil seed crops . . . . .	55-24
Changing tires . . . . .	50-3	Operating the combine harvester . . . . .	55-24
Driven wheels . . . . .	50-3	Header float control . . . . .	55-27
Steered wheels . . . . .	50-7	Header function resume . . . . .	55-27
Tire pressures . . . . .	50-9	<b>Feeder House</b>	
<b>Preparations and Field Operation</b>		Electrical and hydraulic connections . . . . .	60-1
Choice of harvesting time . . . . .	55-1	Securing header lift cylinders . . . . .	60-2
Avoiding grain losses . . . . .	55-1	Service flaps . . . . .	60-2
Cutting platform . . . . .	55-2	Chain tension . . . . .	60-3
Feeder house . . . . .	55-2	Pivoting shield guide rolls . . . . .	60-4
Separator . . . . .	55-2	Adjusting height of feeder drum . . . . .	60-4
Adjusting cylinder and concave . . . . .	55-3	Adjusting the area counter switch . . . . .	60-5
Normal crops . . . . .	55-3	Slip clutch on upper feeder shaft . . . . .	60-6
Coarse crops . . . . .	55-4	Stripper on upper feeder shaft . . . . .	60-7
Separating process . . . . .	55-4	Lower unit, feeder house variator . . . . .	60-7
		Reverser shifter fork and cable . . . . .	60-8

Continued on next page

Page	Page
<b>Separator and Cleaning Unit</b>	
Service flaps . . . . .	65-1
Opening stone trap bottom plate . . . . .	65-2
Grain pan inserts . . . . .	65-2
Cylinder rasp bars . . . . .	65-3
Cylinder reduction gear . . . . .	65-4
Turning the cylinder . . . . .	65-5
Cylinder filler plates . . . . .	65-6
Grain concave . . . . .	65-6
Corn concave . . . . .	65-7
Universal concave . . . . .	65-7
Booster bar . . . . .	65-7
Special rasp bar . . . . .	65-8
De-awning plates . . . . .	65-8
Concave settings . . . . .	65-9
Changing the concave . . . . .	65-9
Adjusting the concave . . . . .	65-9
Second cylinder . . . . .	65-14
Second concave . . . . .	65-14
Finger rakes . . . . .	65-15
Curtain . . . . .	65-15
Cross-shaker tines . . . . .	65-16
Straw rakes . . . . .	65-17
Straw walkers . . . . .	65-19
Fishbacks . . . . .	65-21
Fan and windboard . . . . .	65-22
Metal sheet to separate chaff from straw . . . . .	65-23
Sieve variants . . . . .	65-25
Chaffer and sieve adjustment . . . . .	65-27
Chaffer extension . . . . .	65-28
Chaffer extension inserts . . . . .	65-29
Removing chaffer extension . . . . .	65-30
Removing chaffer . . . . .	65-30
Removing sieve . . . . .	65-31
Side-curtain . . . . .	65-32
<b>Chaff Spreader and Straw Chopper</b>	
Chaff spreader . . . . .	70-1
Operation . . . . .	70-1
Guard rail . . . . .	70-1
Folding down the chaff spreader . . . . .	70-2
Vanes on chaff spreader rotors . . . . .	70-2
Removing the chaff spreader . . . . .	70-3
Straw chopper . . . . .	70-4
Switching chopper on and off . . . . .	70-4
Adjusting straw distributor box . . . . .	70-5
Driving on public roads . . . . .	70-5
Adjusting straw deflectors . . . . .	70-5
Electrical adjustments, centrally . . . . .	70-6
Mechanical adjustment, centrally . . . . .	70-6
Separate adjustment of deflectors . . . . .	70-6
Adjusting counter-knives . . . . .	70-7
Chopping corn and sunflowers . . . . .	70-7
Removing counter-knives . . . . .	70-8
Splitting and chopping . . . . .	70-8
Replacing rotating knives . . . . .	70-9
<b>Grain Tank Loading and Unloading</b>	
Service openings . . . . .	75-1
Grain tank cover . . . . .	75-3
Opening the grain tank cover . . . . .	75-4
Checking and tensioning feeder chains . . . . .	75-5
Unloading drive overload protection . . . . .	75-6
Cover for unloading auger . . . . .	75-6
Sensor for grain tank filling gauge . . . . .	75-7
Spill guard on discharge tube outlet . . . . .	75-7
<b>Fuel, Lubricants, Coolant and Capacities</b>	
Engine oil . . . . .	80-3
Coolant . . . . .	80-4
Transmission oil . . . . .	80-5
Changing transmission oil . . . . .	80-8
Transmission and hydraulic oil . . . . .	80-9
Brake fluid . . . . .	80-10
Grease . . . . .	80-11
Alternative and synthetic lubricants . . . . .	80-11
Lubricant storage . . . . .	80-12
<b>Lubrication Chart, Periodic Service</b>	
Lubrication charts . . . . .	85-1
Break-in period . . . . .	85-11
Service intervals . . . . .	85-11
After the first 100 hours . . . . .	85-12
Every 250 hours . . . . .	85-12
Every 500 hours . . . . .	85-13
Every 1000 hours . . . . .	85-13
Every 1500 hours . . . . .	85-13
As required . . . . .	85-14
Once every year . . . . .	85-14
Every 2 years . . . . .	85-14
<b>Service — Engine</b>	
Access to engine . . . . .	90-1
Engine compartment . . . . .	90-1
Adjusting engine valve tappets . . . . .	90-2
Checking engine crankcase oil level . . . . .	90-2
Oil and filter change — 6.8-L engine . . . . .	90-3
Oil and filter change — 8.1-L engine . . . . .	90-4
Service — Fuel system . . . . .	90-5
Fuel system — 6.8-L engine . . . . .	90-6

Continued on next page

Contents

	<b>Page</b>		<b>Page</b>
Fuel system — 8.1-L engine . . . . .	90-7	Solenoid valves — Basis machine . . . . .	100-13
Fuel tank filler neck . . . . .	90-7	Solenoid valves — Hillmaster . . . . .	100-14
Water trap in fuel system . . . . .	90-8	Error codes, infotrak monitor . . . . .	100-15
Fuel transfer pump — 6.8-L engine . . . . .	90-9	Description of system . . . . .	100-17
Fuel filter — 6.8-L engine . . . . .	90-10	Error codes, reel speed control . . . . .	100-18
Fuel filter — 8.1-L engine . . . . .	90-11		
Injection nozzles — 8.1-L engine . . . . .	90-12	<b>Service — Hydraulic System</b>	
Bleeding the fuel system . . . . .	90-12	Pressure relief valve . . . . .	105-1
Access to cooling elements . . . . .	90-14	Description of system . . . . .	105-2
Layout of cooling elements . . . . .	90-15	Hydraulic components . . . . .	105-3
Engine coolant . . . . .	90-15	Hydraulic components, Hillmaster . . . . .	105-5
Flushing the cooling system . . . . .	90-16	Hydraulic components, chaff spreader . . . . .	105-6
Changing the thermostats . . . . .	90-19	Actuating electro-magnetic valves . . . . .	105-7
Drive belts — 6.8-L engine . . . . .	90-20	Accumulators . . . . .	105-10
Drive belts — 8.1-L engine . . . . .	90-20	Draining hydraulic oil . . . . .	105-11
Air intake system . . . . .	90-21	Replacing hydraulic oil filter . . . . .	105-12
Air cleaner (primary) element . . . . .	90-23	Refilling hydraulic oil . . . . .	105-13
Turbocharger . . . . .	90-27	Temperature/pressure sending unit . . . . .	105-14
Crankshaft vibration damper . . . . .	90-27		
		<b>Service — Ground Speed Drive</b>	
<b>Service — Drives and Shields</b>		Brake system . . . . .	110-1
Safety shields . . . . .	95-1	Brake fluid reservoir . . . . .	110-2
Adjusting belts . . . . .	95-2	Adjusting the foot brakes . . . . .	110-2
Main countershaft . . . . .	95-3	Parking brake . . . . .	110-2
Unloading drive . . . . .	95-4	Hydrostatic drive components . . . . .	110-3
Cylinder drive intermediate countershaft . . . . .	95-5	Oil cooler . . . . .	110-4
Adjusting the fan variator . . . . .	95-6	Oil and filter change . . . . .	110-5
Clean grain elevator, grain tank filling . . . . .	95-7	Transmission . . . . .	110-6
Slip clutch countershaft (clean grain elevator) . . . . .	95-7	Final drives . . . . .	110-7
Slip clutch for straw walker drive . . . . .	95-8	Rear wheel toe-in . . . . .	110-9
Slip clutch for tailings elevator . . . . .	95-8	Rear wheel tread . . . . .	110-10
Belt tensioners . . . . .	95-9	Steering components . . . . .	110-12
Drive chains . . . . .	95-10		
Tailings elevator drive chain . . . . .	95-10	<b>Service — Air Conditioning and Heating</b>	
Tailings auger drive chain . . . . .	95-10	Air conditioning components . . . . .	115-1
Unloading drive countershaft . . . . .	95-11	Heater components . . . . .	115-2
Drive chain for grain tank unloading . . . . .	95-11	Air intake and distribution . . . . .	115-3
V-belts . . . . .	95-11	Compressor . . . . .	115-4
		Refrigerant level . . . . .	115-5
		Low-pressure switch . . . . .	115-5
		High-pressure switch . . . . .	115-6
		Cleaning the condenser . . . . .	115-6
		Cab air filters . . . . .	115-6
		Air intake opening . . . . .	115-8
		Condensation water drain hose . . . . .	115-9
		<b>Storage</b>	
<b>Service — Electrical System</b>		After the season . . . . .	120-1
Specifications . . . . .	100-1	Removing combine from storage . . . . .	120-4
Batteries . . . . .	100-1		
Alternators . . . . .	100-4		
Sockets . . . . .	100-4		
Starting motor . . . . .	100-5		
Electronic boards . . . . .	100-6		
Fuses on fuse board . . . . .	100-7		
Relays on fuse board . . . . .	100-9		
Relay and diode board . . . . .	100-10		

Continued on next page

Contents

Page

**Specifications**

Operating speeds . . . . . 125-1  
Dimensions (2254, 2256) . . . . . 125-13  
Dimensions (2258, 2264) . . . . . 125-15  
Dimensions (2266) . . . . . 125-17

**Serial Numbers**

Type plates . . . . . 130-1

**Index**

# Identification Views



Hillmaster

-UN-08NOV96  
ZX009520



Standard

-UN-08NOV96  
ZX009519

ZX,OMXZC0001970-19-01NOV96




# Safety

## RECOGNIZE SAFETY INFORMATION

This is the safety-alert symbol. When you see this symbol on your machine or in this manual, be alert to the potential for personal injury.

Follow recommended precautions and safe operating practices.

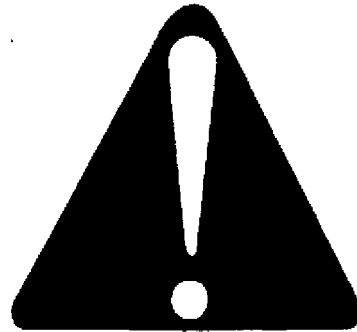

DX,ALERT -19-03MAR93

T81389 -UN-07DEC68


## FOLLOW SAFETY INSTRUCTIONS

Carefully read all safety messages in this manual and on your machine safety signs. Keep safety signs in good condition. Replace missing or damaged safety signs. Be sure new equipment components and repair parts include the current safety signs. Replacement safety signs are available from your John Deere dealer.

Learn how to operate the machine and how to use controls properly. Do not let anyone operate without instruction.

Keep your machine in proper working condition. Unauthorized modifications to the machine may impair the function and/or safety and affect machine life.

If you do not understand any part of this manual and need assistance, contact your John Deere dealer.

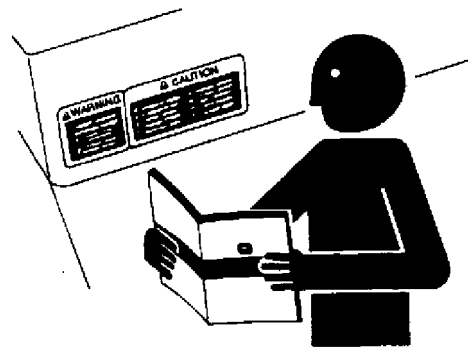

DX,READ -19-03MAR93

T5201 -UN-23AUG88

## UNDERSTAND SIGNAL WORDS

A signal word—DANGER, WARNING, or CAUTION—is used with the safety-alert symbol. DANGER identifies the most serious hazards.

DANGER or WARNING safety signs are located near specific hazards. General precautions are listed on CAUTION safety signs. CAUTION also calls attention to safety messages in this manual.



DX,SIGNAL -19-03MAR93

TS187 -19-30SEP88



## OBSERVE ROAD TRAFFIC REGULATIONS

Always observe local road traffic regulations when using public roads.



H28930 -UN-30JUN89

FX,ROAD -19-01MAY91



**CAUTION: Avoid possible injury or death from machinery runaway.**

**Do not start engine by shorting across starter terminals. Machine will start in gear if normal circuitry is bypassed.**

**NEVER start engine while standing on ground. Start engine only from operator's seat, with transmission in neutral or park.**

DX,BYPAS -19-26JAN90




## USE SAFETY LIGHTS AND DEVICES

Slow moving tractors, self-propelled equipment and towed implements or attachments can create a hazard when driving on public roads. They are difficult to see, especially at night. Avoid personal injury or death resulting from collision with a vehicle.

If legally permitted, use flashing warning lights or rotary beacons whenever driving on public roads. To increase visibility, use the lights and devices provided with your machine. For some equipment, install additional flashing warning lights.

Keep safety items in good condition. Replace missing or damaged items. An implement safety lighting kit is available from your John Deere dealer.

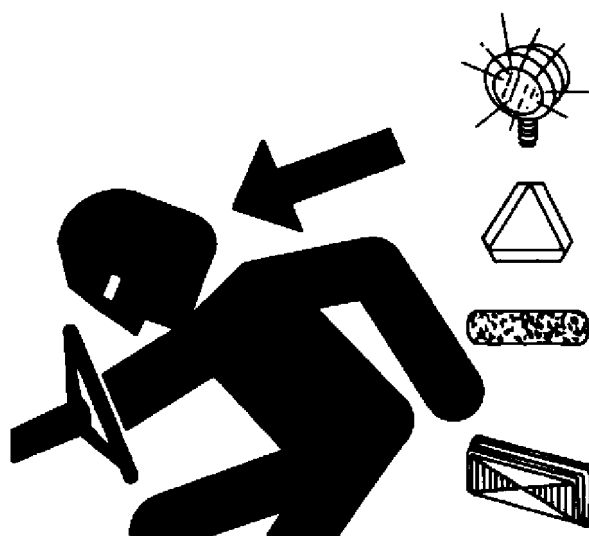

ZX,FLASH -19-01OCT91


TS951 -UN-12APR90

## PREPARE FOR EMERGENCIES

Be prepared if a fire starts.

Keep a first aid kit and fire extinguisher handy.

Keep emergency numbers for doctors, ambulance service, hospital, and fire department near your telephone.

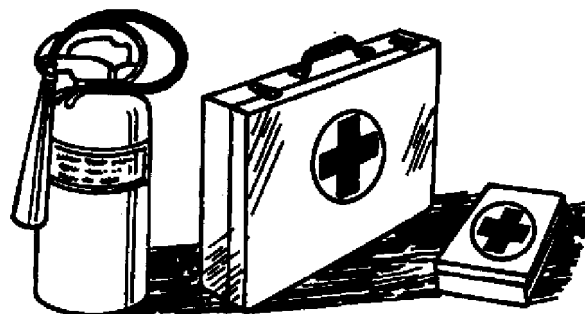

DX,FIRE2 -19-03MAR93

TS291 -UN-23AUG88




## WEAR PROTECTIVE CLOTHING

Wear close fitting clothing and safety equipment appropriate to the job.

Prolonged exposure to loud noise can cause impairment or loss of hearing.

Wear a suitable hearing protective device such as earmuffs or earplugs to protect against objectionable or uncomfortable loud noises.

Operating equipment safely requires the full attention of the operator. Do not wear radio or music headphones while operating machine.

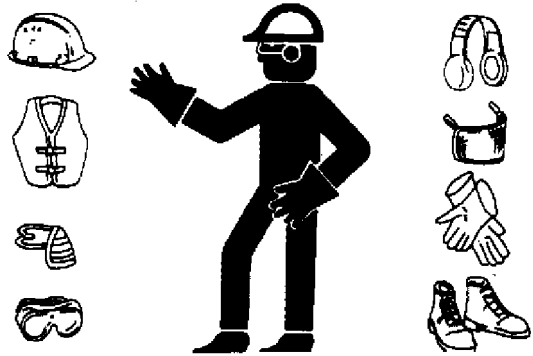

DX,WEAR -19-10SEP90

TS206 -UN-23AUG88

## HANDLE FUEL SAFELY—AVOID FIRES

Handle fuel with care: it is highly flammable. Do not refuel the machine while smoking or when near open flame or sparks.

Always stop engine before refueling machine. Fill fuel tank outdoors.

Prevent fires by keeping machine clean of accumulated trash, grease, and debris. Always clean up spilled fuel.




DX,FIRE1 -19-03MAR93

TS202 -UN-23AUG88

## STORE ATTACHMENTS SAFELY

Stored attachments such as dual wheels, cage wheels, and loaders can fall and cause serious injury or death.

Securely store attachments and implements to prevent falling. Keep playing children and bystanders away from storage area.

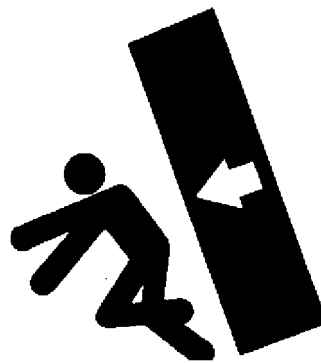

DX,STORE -19-03MAR93

TS219 -UN-23AUG88




## FIRE EXTINGUISHER

A 6 kg (13 lb) general purpose fire extinguisher meeting local legal requirements has to be installed on the left-hand side of the operator's platform.

Maintain fire extinguisher to keep it in operational condition.

Keep the engine clean and free of dust, chaff and straw to prevent the possibility of a fire.

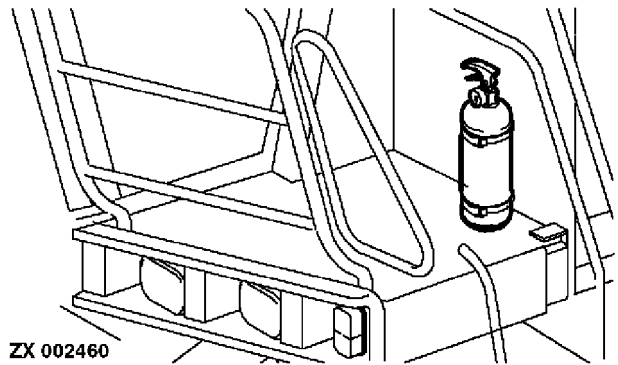

ZX 002460

ZX, FIREXZCO -19-27MAY94

ZX002460 -UN-16JUN95


## CHECK MACHINE SAFETY

Always check the road and general operating safety of the machine before using.

FX, READY -19-28FEB91

## MOUNT AND DISMOUNT SAFELY

Use handrail when mounting or dismounting the combine.

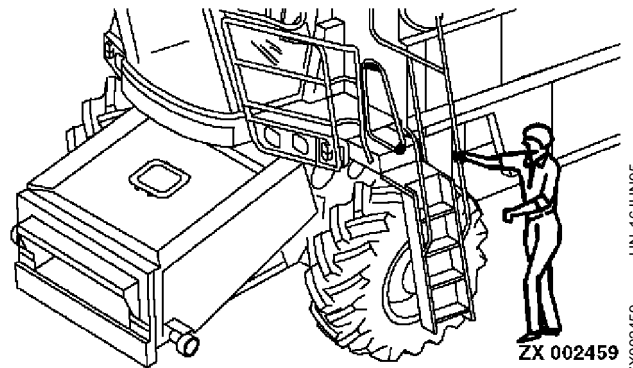

ZX 002459

ZX, HANDLEXZCO -19-27JAN92

ZX002459 -UN-16JUN95

## RIDERS

Only allow the operator and one rider on the machine.

Other riders are subject to injury such as being thrown off the machine and obstruct the operator's view resulting in the machine being operated in an unsafe manner.

One rider is permitted, since the machine is equipped with a factory-approved passenger seat.



ZX, PASSENGER -19-02OCT91

T5253 -UN-23AUG88




## ROAD SAFETY SWITCH

**IMPORTANT:** Before driving combine on public roads, make sure that road safety switch is in road position. Also move harvesting unit and unloading auger to transport position.

This ensures that all hydraulic functions — with exception of the steering system — are not working.

ZX 002418

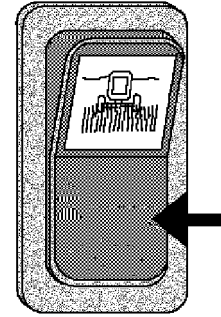


ZX, SWITCHXZCO -19-01MAR95

ZX002418 -UN-16JUN95

## EMERGENCY EXIT

The right-hand cab window may be used as an emergency exit. Disengage the gas-filled spring on the sidewall of the cab and open the window.

ZX 006004

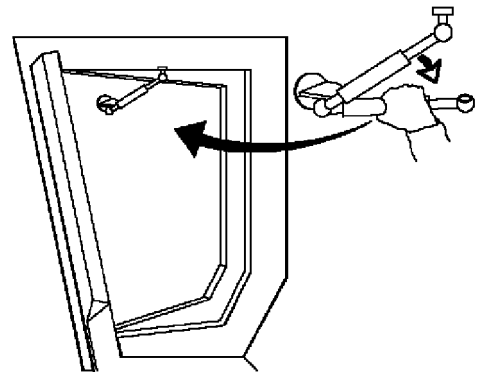

ZX, OMSPFH003293-19-01MAY94

ZX006004 -UN-03APR95



## DRIVING THE COMBINE

Operate machine only when all guards are correctly installed.

Before moving away, always check immediate vicinity of machine (e.g. for children). Ensure adequate visibility. Use the horn as a warning immediately before moving away.


Always adapt ground speed to road or field conditions. Avoid making sharp turns when driving up or down slopes or when driving across a slope. Be especially careful when turning on slopes with full grain tank.

Attach harvesting units and other implements to combine with extreme care.

When making turns, always take into consideration the width of the attachment and the fact that the rear end of the combine swings out. Attachments and ground conditions affect the driving characteristics of the combine.

Reduce ground speed when driving on slopes or over uneven ground and before making sharp turns. Before descending a steep hill, shift to a lower gear.

Avoid holes, ditches and obstructions which may cause the combine to tip, particularly on hillsides.

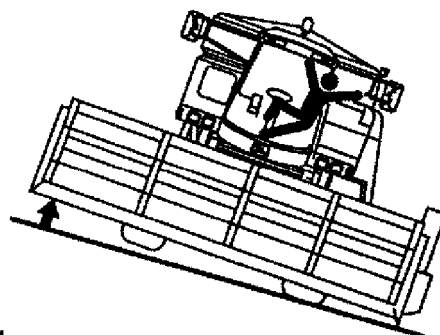

ZX002461

ZX002461 -JUN-16-JUN95


ZX,DRIVEXZCO -19-27JAN92

## GUARDS AND SHIELDS

Keep guards and shields in place at all times. Ensure that they are serviceable and installed correctly.

Always disengage main clutch, shut off engine and remove key before removing any guards or shields.

Keep hands, feet and clothing away from moving parts.

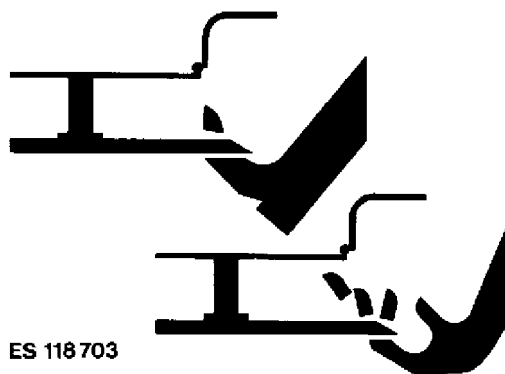

ES 118 703

ES118703 -JUN-21-MAR95

FX,DEVICE -19-04DEC90



### STAY CLEAR OF HARVESTING UNITS

Cutterbar, auger, reel and feed rolls cannot be completely shielded due to their function. Stay clear of these moving elements during operation. Always disengage main clutch, shut off engine and remove key before servicing or unclogging machine.



ES 118 704

FX,CUT -19-21DEC90

ES118704 -UN-21MAR95

### STAY CLEAR OF ROTATING DRIVELINES

Entanglement in rotating driveline can cause serious injury or death.

Keep tractor master shield and driveline shields in place at all times. Make sure rotating shields turn freely.

Wear close fitting clothing. Stop the engine and be sure PTO driveline is stopped before making adjustments, connections, or cleaning out PTO driven equipment.




DX,PTO -19-12SEP95

TS1844 -UN-22AUG95

### TRANSPORT WITH HARVESTING UNIT INSTALLED

Before driving combine on public roads, harvesting unit must be raised and secured in this position. It must not, however, obstruct operator's view of the road. Remove crop dividers (if equipped) and install protective cover.

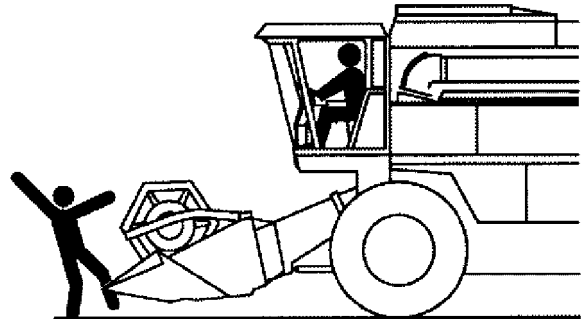


ZX002462

ZX,HEADERXZCO -19-27JAN92

ZX002462 -UN-16JUN95

### BALLASTING FOR SAFE GROUND CONTACT

Operating, steering and braking performance of the combine can be considerably affected by attachments which alter the center of gravity of the machine. To maintain safe ground contact, ballast the combine at the rear end as necessary. Observe the maximum permissible axle loads and total weights.

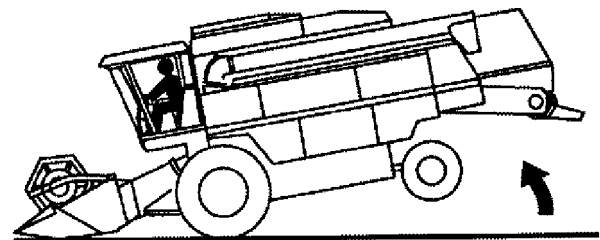

ZX002463

ZX,WEIGHTXZCO -19-27JAN92

ZX002463 -UN-16JUN95






## RADIO AERIAL

If radio aerial is not secured in its transport position before driving on public roads, it may come into contact with low-hanging electrical cables. This would result in the operator suffering a severe electrical shock.

To avoid electrical shock, no portion of the machine should be higher than 4 m.

Before transporting machine, bend aerial or remove it.

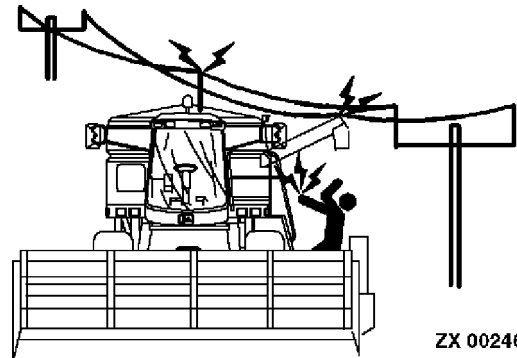

ZX002464 -UN-16JUN95

ZX,ANTENNAZCO -19-27JAN92

## PARKING AND LEAVING THE COMBINE


Lower harvesting unit to the ground.

Before leaving the combine, disengage harvesting unit and separator. Shut off engine and move gear shift lever to neutral. Apply parking brake, remove key and lock the operator's cab. Position chock blocks.

*NOTE: Use only chock blocks provided with the machine.*

Never leave combine unattended as long as engine is running.

Never leave the operator's cab when driving.

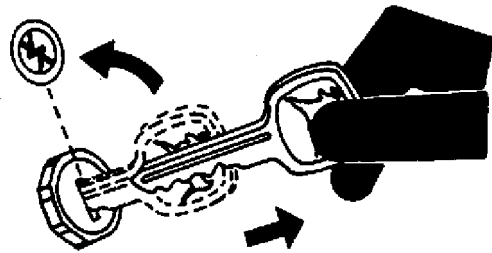


TS230 -UN-24MAY89

ZX,PARKXZCO -19-13APR92

## WORK IN VENTILATED AREA

Engine exhaust fumes can cause sickness or death. If it is necessary to run an engine in an enclosed area, remove the exhaust fumes from the area with an exhaust pipe extension.

If you do not have an exhaust pipe extension, open the doors and get outside air into the area.

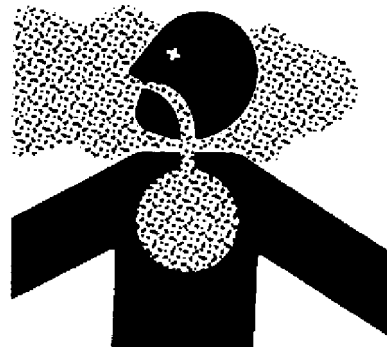

DX,AIR -UN-23AUG88

-19-04JUN90



## PRACTICE SAFE MAINTENANCE

Understand service procedure before doing work. Keep area clean and dry.

Never lubricate, service, or adjust machine while it is moving. Keep hands, feet, and clothing from power-driven parts. Disengage all power and operate controls to relieve pressure. Lower equipment to the ground. Stop the engine. Remove the key. Allow machine to cool.

Securely support any machine elements that must be raised for service work.

Keep all parts in good condition and properly installed. Fix damage immediately. Replace worn or broken parts. Remove any buildup of grease, oil, or debris.

Disconnect battery ground cable (-) before making adjustments on electrical systems or welding on machine.



DX,SERV -19-03MAR93


-UN-23AUG88

TS218

## SERVICE MACHINES SAFELY

Tie long hair behind your head. Do not wear a necktie, scarf, loose clothing, or necklace when you work near machine tools or moving parts. If these items were to get caught, severe injury could result.

Remove rings and other jewelry to prevent electrical shorts and entanglement in moving parts.

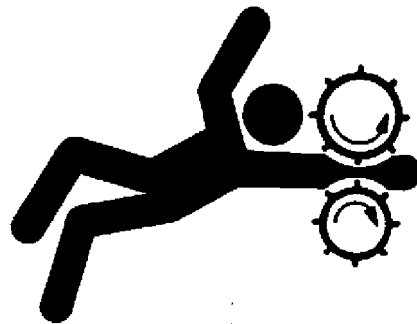

DX,LOOSE -19-04JUN90

-UN-23AUG88


TS228



## SUPPORT MACHINE PROPERLY

Always lower the attachment or implement to the ground before you work on the machine. If you must work on a lifted machine or attachment, securely support the machine or attachment.

Do not support the machine on cinder blocks, hollow tiles, or props that may crumble under continuous load. Do not work under a machine that is supported solely by a jack. Follow recommended procedures in this manual.

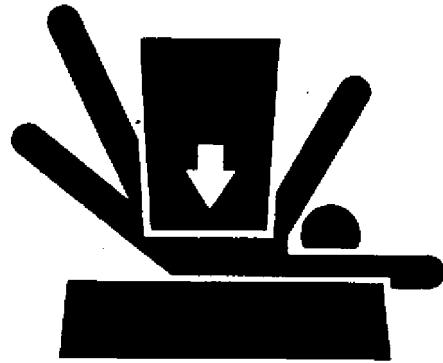


DX,LOWER -19-04JUN90

-UN-23AUG68  
TS229

## RETORQUE WHEEL NUTS

Retorque wheel nuts as specified in Sections "Wheels and Ballast" and "Lubrication, Periodic Services". Failure to do this could result in a wheel falling off during operation, causing the machine to tip over with serious injury to the operator and extensive damage to the machine.

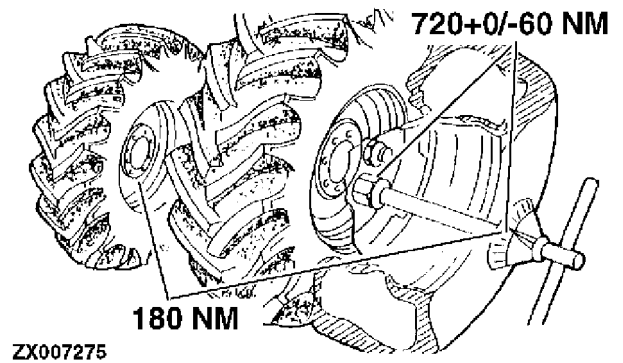

ZX,NUTS -19-01MAR95

-UN-19JUN95  
ZX007275




## AVOID HIGH-PRESSURE FLUIDS

Escaping fluid under pressure can penetrate the skin causing serious injury.

Avoid the hazard by relieving pressure before disconnecting hydraulic or other lines. Tighten all connections before applying pressure.

Search for leaks with a piece of cardboard. Protect hands and body from high pressure fluids.

If an accident occurs, see a doctor immediately. Any fluid injected into the skin must be surgically removed within a few hours or gangrene may result. Doctors unfamiliar with this type of injury should reference a knowledgeable medical source. Such information is available from Deere & Company Medical Department in Moline, Illinois, U.S.A.

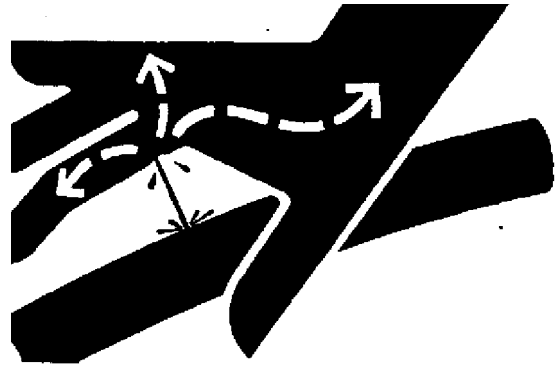

X9811 -UN-23AUG88

DX,FLUID -19-03MAR93

## PREVENT BATTERY EXPLOSIONS

Keep sparks, lighted matches, and open flame away from the top of battery. Battery gas can explode.

Never check battery charge by placing a metal object across the posts. Use a volt-meter or hydrometer.

Do not charge a frozen battery; it may explode. Warm battery to 16°C (60°F).



TS204 -UN-23AUG88

DX,SPARKS -19-03MAR93



## PREVENT ACID BURNS

Sulfuric acid in battery electrolyte is poisonous. It is strong enough to burn skin, eat holes in clothing, and cause blindness if splashed into eyes.

Avoid the hazard by:


1. Filling batteries in a well-ventilated area.
2. Wearing eye protection and rubber gloves.
3. Avoiding breathing fumes when electrolyte is added.
4. Avoiding spilling or dripping electrolyte.
5. Use proper jump start procedure.

If you spill acid on yourself:

1. Flush your skin with water.
2. Apply baking soda or lime to help neutralize the acid.
3. Flush your eyes with water for 15—30 minutes. Get medical attention immediately.

If acid is swallowed:

1. Do not induce vomiting.
2. Drink large amounts of water or milk, but do not exceed 2 L (2 quarts).
3. Get medical attention immediately.

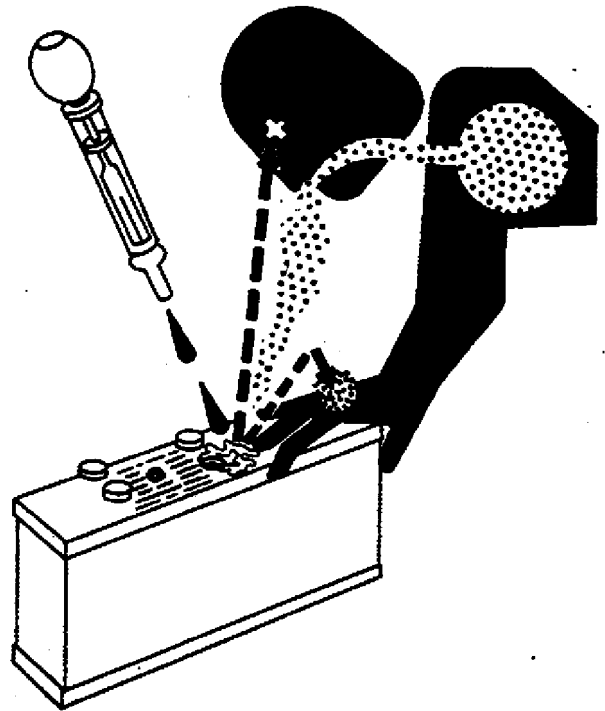

DX,POISON -19-21APR93

TS203 -UN-23AUG88

Thank you so much for reading.  
Please click the “Buy Now!”  
button below to download the  
complete manual.



After you pay.

You can download the most  
perfect and complete manual in  
the world immediately.

Our support email:

[ebooklibonline@outlook.com](mailto:ebooklibonline@outlook.com)