

**6650, 6750,
6850 and 6950
Self-Propelled
Forage Harvesters**
(From Serial No. 504341)

**John Deere Werke Zweibrücken
OMZ92831 Issue K9**

European Version
Printed in Germany
ENGLISCH

Contents

| | Page | | Page |
|---|-------|---|-------|
| Identification Views | 00-1 | Automatic kernel processor roll clearance . . . | 20-28 |
| Safety | | Manual kernel processor roll clearance | 20-28 |
| General | 05-1 | ROW-TRAK control unit | 20-29 |
| Operation | 05-5 | Area counter | 20-38 |
| Service | 05-11 | Lighting System and Signals | |
| Safety Decals | 10-1 | Parking lights/low-beam headlights | 25-1 |
| Controls and Instruments | | Full-beam headlights | 25-1 |
| General view | 15-1 | Turn signals | 25-3 |
| Switch console | 15-2 | Work lights | 25-5 |
| Multi-function lever | 15-6 | Beacon lights | 25-6 |
| Corner post | 15-7 | Hazard warning lights | 25-6 |
| Roof switch console | 15-8 | Indicator light test | 25-7 |
| Roof console | 15-9 | Operator's Cab | |
| Automatic function control | 15-10 | Operator's seat | 30-1 |
| Steering column | 15-11 | Lumbar support | 30-2 |
| Switch console — functions | 15-12 | Left-hand armrest | 30-3 |
| Multi-function lever — functions | 15-20 | Right-hand armrest | 30-3 |
| Roof switch console — functions | 15-23 | Air comfort seat | 30-5 |
| Steering column — functions | 15-25 | Passenger seat | 30-5 |
| Warning Devices and Monitors | | Storage compartment for Operator's | |
| Indicator lights I | 20-1 | Manuals | 30-6 |
| Indicator lights II | 20-6 | Cooling compartment | 30-6 |
| Fuel gauge | 20-9 | Steering column | 30-7 |
| Coolant temperature gauge | 20-9 | Foot brakes | 30-8 |
| Automatic function control lights | 20-10 | Parking brake | 30-8 |
| Infotrak monitor | 20-11 | Releasing parking brake | 30-8 |
| Input of specific machine data | 20-15 | Sun visor | 30-9 |
| Software version | 20-15 | Inside mirror | 30-9 |
| Cutterhead alarm speed | 20-18 | Outside mirror | 30-9 |
| SERVICE information | 20-19 | Interior lighting | 30-9 |
| Automatic function control | 20-20 | Adjustable air louvers | 30-10 |
| Sharpening cycles | 20-21 | Radio and CB radio | 30-11 |
| Automatic knife sharpening | 20-22 | Pre-Starting Checks | |
| Sharpening stone home position (manual) | 20-24 | Daily checks | 35-1 |
| Automatic stationary knife adjustment | 20-24 | Engine oil level | 35-1 |
| Manual stationary knife adjustment | 20-26 | Hydraulic oil level | 35-1 |
| Kernel processor roll clearance | 20-27 | Fuel level | 35-2 |
| | | Tires | 35-2 |

Continued on next page

All information, illustrations and specifications in this manual are based on the latest information available at the time of publication. The right is reserved to make changes at any time without notice.

OMZ92831 K9-19-01NOV99

COPYRIGHT© 1999
DEERE & COMPANY
European Office Mannheim
All rights reserved
A John Deere ILLUSTRATION® Manual

Contents

| | Page | | Page |
|---|-------------|---|-------------|
| Fuel system | 35-3 | Changing harvesting unit | 65-5 |
| Lubricating the forage harvester | 35-3 | Field operation of forage harvester | 65-5 |
| Checks in operator's cab | 35-4 | Reverser operation | 65-10 |
| | | | |
| Operating the Engine | | | |
| Starting the engine | 40-1 | Feed System | |
| Engine oil pressure indicator light | 40-4 | Safety information | 70-1 |
| Warming up the engine | 40-4 | Locking pin | 70-1 |
| Engine idle | 40-4 | Electro-magnetic clutch | 70-2 |
| Ether starting aid | 40-5 | Cutterhead speed sending unit | 70-4 |
| Booster battery | 40-8 | Length-of-cut transmission | 70-4 |
| Stopping the engine | 40-9 | Adjusting length of cut | 70-5 |
| Cold-weather operation | 40-9 | Harvesting unit speed | 70-6 |
| | | | |
| Driving and Transporting Forage Harvester | | | |
| Driving the forage harvester | 45-1 | Feed roll slip clutch | 70-7 |
| Releasing the parking brake | 45-1 | Length-of-cut transmission service | 70-7 |
| Operating foot brakes | 45-2 | Feed roll drive | 70-9 |
| Engaging a gear | 45-2 | Replacing wear plates | 70-9 |
| Road safety switch | 45-3 | Upper feed roll guides | 70-11 |
| Adjusting engine speed | 45-3 | Feed roll spring attaching points | 70-12 |
| Forward and reverse travel | 45-4 | Adjusting feed roll springs | 70-13 |
| Travel speed | 45-4 | Opening feed roll housing | 70-13 |
| Hydrostatic system | 45-5 | Smooth roll scraper | 70-14 |
| Four-wheel drive | 45-6 | Closing feed roll housing | 70-15 |
| Back-up alarm | 45-7 | Feed roll housing safety switch | 70-16 |
| Transport information | 45-7 | Hydraulic reverser motor | 70-16 |
| | | | |
| Wheels and Ballast | | | |
| Tire maintenance | 50-1 | Troubleshooting — feed system | 70-17 |
| Tire pressures | 50-7 | Metal Detector | |
| Overall width and track width | 50-8 | Metal detector operation | 75-1 |
| Wheel rim chart | 50-11 | Activating the metal detector | 75-2 |
| Rear weights | 50-11 | Operating without metal detector | 75-3 |
| | | | |
| Harvesting Units and Attachments 55-1 | | | |
| | | | |
| Attaching and Detaching Harvesting Units | | | |
| Attaching 6-row row-crop unit | 60-1 | When ferrous metal is detected | 75-4 |
| | | | |
| Preparations and Field Operation | | | |
| Preparations for harvesting grass | 65-1 | Adjusting the locking pawl | 75-5 |
| Preparations for harvesting corn (maize) | 65-1 | Metal detector test | 75-7 |
| Preparations for harvesting ear corn silage | 65-2 | Safety rules | 75-9 |
| Preparations for harvesting whole-plant silage | 65-3 | Electronic box | 75-10 |
| Preparations for harvesting sorghum | 65-3 | Relay box | 75-11 |
| Adjusting area counter switch | 65-3 | Indicator light test chart | 75-15 |
| | | | |
| Cutterhead, Drives, Guards, Covers | | | |
| | | | |
| Continued on next page | | | |

Contents

| | Page | | Page |
|--|-------------|---|-------------|
| Replacing threaded bar | 80-18 | Power Chute | |
| Knife screw torque | 80-19 | Power chute | 86-1 |
| Preparations for knife sharpening | 80-20 | Service and operation | 86-7 |
| Manual knife sharpening | 80-20 | Drive belts | 86-7 |
| Automatic knife sharpening device | 80-24 | Discharge | |
| Replacing sharpening stone | 80-26 | Blower and discharge spout | 90-1 |
| Aligning knife sharpening device | 80-28 | Blower bottom | 90-1 |
| Sharpening stone end switch | 80-29 | Replacing wear plate | 90-1 |
| Adjusting stationary knife | 80-31 | Installing wear plate | 90-3 |
| Checking stationary knife | 80-36 | Adjusting blower paddles | 90-4 |
| Removing stationary knife | 80-37 | Adjusting deflecting edges | 90-5 |
| Installing stationary knife | 80-38 | Spout worm gear and ring gear | 90-7 |
| Eliminating end play of adjusting spindle | 80-41 | Fuel, Lubricant, Coolant and Capacities | |
| Bottom and outlet bands | 80-42 | Fuel | 95-1 |
| Adjusting bottom band | 80-42 | Diesel engine oil | 95-2 |
| Adjusting outlet band | 80-43 | Engine coolant | 95-5 |
| Recirculating screens | 80-45 | Transmission oil | 95-6 |
| Installing/changing recirculating screen | 80-45 | Brake fluid | 95-10 |
| Adjusting recirculating screen | 80-48 | Grease | 95-10 |
| Installing spiral floor | 80-50 | Lubrication, Periodic Service | |
| Adjusting recutter floor | 80-52 | Lubrication charts | 100-3 |
| Adjusting spiral floor | 80-52 | Central lubrication system | 100-11 |
| Adjustment chart | 80-52 | Break-in service | 100-20 |
| Adjusting the service cover | 80-55 | Service intervals | 100-21 |
| Transition chute | 80-55 | After the first 100 operating hours | 100-22 |
| Cutterhead service cover | 80-56 | Every 250 operating hours | 100-23 |
| Removing cutterhead with harvesting unit | 80-57 | Every 500 operating hours | 100-23 |
| Installing cutterhead with harvesting unit | 80-61 | Every 1000 operating hours | 100-24 |
| Main drive troubleshooting | 80-62 | Every 1500 operating hours | 100-24 |
| Cutterhead troubleshooting | 80-63 | Every 2000 operating hours | 100-24 |
| Knife sharpener troubleshooting | 80-64 | As required | 100-24 |
| Stationary knife troubleshooting | 80-66 | Every year | 100-25 |
| Kernel Processor | | Every 2 years | 100-25 |
| Kernel processor quick conversion | 85-1 | V-belts | 100-25 |
| Adjusting service cover | 85-6 | Chains | 100-26 |
| Installing/removing kernel processor | 85-8 | Service — Engine | |
| Breaking-in kernel processor | 85-9 | Engine compartment | 105-1 |
| Field operation | 85-9 | Adjusting engine valve clearance | 105-1 |
| Kernel processor service | 85-9 | Rocker arm cover and crankcase ventilation | 105-2 |
| Adjusting roll spacing | 85-10 | Checking crankcase oil level | 105-4 |
| Adjusting stop screws | 85-11 | Changing engine oil and filter | 105-5 |
| Adjusting clearance indicator | 85-11 | Service — fuel system | 105-10 |
| Pretension, lower roll drive belt | 85-12 | Fuel filler neck | 105-11 |
| Adjusting scrapers | 85-12 | Fuel tank water trap | 105-11 |
| Roll wear and replacement | 85-13 | Fuel system, John Deere engine | 105-12 |
| Potentiometer, automatic adjustment | 85-13 | | |
| Replacing lower roll drive belts | 85-14 | | |
| Troubleshooting | 85-15 | | |

Continued on next page

Contents

| | Page | | Page |
|---|-------------|--|-------------|
| Fuel system, Cummins engine | 105-14 | Service — Hydraulic System | |
| Fuel shut-off valve | 105-15 | Pressure relief valve | 115-1 |
| Water trap, John Deere engine | 105-15 | Accumulators | 115-3 |
| Fuel filter, John Deere engine | 105-16 | Pressure control switch | 115-4 |
| Checking fuel injection nozzles | 105-17 | Hydraulic components — neutral oil flow . . . | 115-5 |
| Bleeding the fuel system | 105-17 | Draining hydraulic oil | 115-11 |
| Fuel filter, Cummins engine | 105-19 | Replacing hydraulic oil filter | 115-11 |
| Trailer hitch | 105-20 | Refilling with hydraulic oil | 115-12 |
| Flushing the cooling system | 105-22 | Temperature and pressure sending units . . | 115-12 |
| Heater shut-off valve | 105-28 | | |
| Replacing coolant conditioner | 105-29 | Service — Ground Speed Drive | |
| Drive belts | 105-30 | Brake system | 120-1 |
| Air intake system | 105-35 | Brake fluid reservoir | 120-2 |
| Air intake prefilter screen | 105-38 | Adjusting foot brakes | 120-2 |
| Air cleaner element | 105-38 | Parking brake | 120-2 |
| Turbocharger | 105-43 | Hydrostatic drive components | 120-3 |
| Vibration damper | 105-44 | Oil cooler | 120-5 |
| | | Filter change | 120-5 |
| Service — Electrical System | | Transmission | 120-6 |
| Specifications | 110-1 | Front axle | 120-8 |
| Batteries | 110-1 | Rear axle toe-in | 120-8 |
| Alternators | 110-4 | Steering system components | 120-11 |
| Starter motor | 110-5 | | |
| Access to fuse board | 110-6 | Service — Air Conditioning System, Heater | |
| Fuse tester | 110-6 | Air-conditioning system components | 125-1 |
| Access to circuit boards | 110-6 | Heater components | 125-2 |
| Access to electronic control unit | 110-8 | Compressor | 125-4 |
| Access to relay and diode board | 110-8 | Refrigerant level | 125-4 |
| Sockets | 110-9 | Low pressure switch | 125-5 |
| Storage module | 110-10 | High pressure switch | 125-5 |
| Electronic system boards | 110-11 | Cleaning the condenser | 125-6 |
| Fuse board — fuses | 110-12 | Cab air filters | 125-6 |
| Fuse board — relays | 110-14 | Air intake opening | 125-8 |
| Shift relays | 110-15 | Condensed water drain hose | 125-8 |
| Relay and diode board | 110-16 | | |
| Solenoids | 110-17 | Storage | |
| Electronic control unit | 110-19 | After the season | 130-1 |
| Engine speed adjustment | 110-20 | Taking forage harvester out of storage | 130-3 |
| Sending unit for electronic control unit | 110-21 | | |
| Service codes, automatic function control . . | 110-23 | Specifications | 135-1 |
| Self-test of engine electronic system | 110-43 | | |
| Service codes, Cummins engine | 110-44 | Serial Numbers | |
| Work lights | 110-54 | Serial number plates | 140-1 |
| Headlights | 110-55 | Serial numbers | 140-2 |
| Clearance and turn signal lights, front | 110-56 | | |
| Tail, stop and turn signal lights, rear | 110-56 | Index | |
| Dome light | 110-56 | | |
| Switch lighting | 110-57 | | |
| Indicator light bulbs | 110-57 | | |

Identification Views



ZX012524

ZX012524 -UN-20AUG97



ZX012525


ZX012525 -UN-21AUG97

Safety

RECOGNIZE SAFETY INFORMATION

This is the safety-alert symbol. When you see this symbol on your machine or in this manual, be alert to the potential for personal injury.

Follow recommended precautions and safe operating practices.

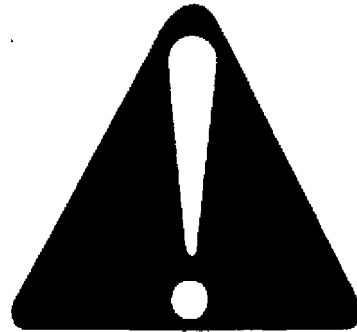

DX,ALERT -19-29SEP98

T81389 -UN-07DEC68


FOLLOW SAFETY INSTRUCTIONS

Carefully read all safety messages in this manual and on your machine safety signs. Keep safety signs in good condition. Replace missing or damaged safety signs. Be sure new equipment components and repair parts include the current safety signs. Replacement safety signs are available from your John Deere dealer.

Learn how to operate the machine and how to use controls properly. Do not let anyone operate without instruction.

Keep your machine in proper working condition. Unauthorized modifications to the machine may impair the function and/or safety and affect machine life.

If you do not understand any part of this manual and need assistance, contact your John Deere dealer.

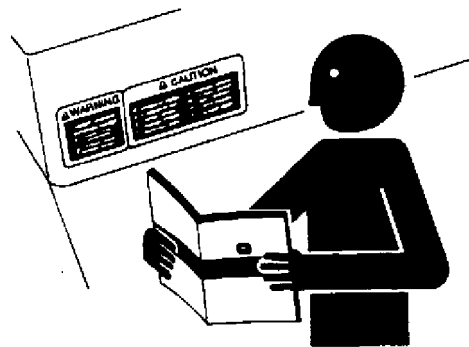

DX,READ -19-03MAR93

T5201 -UN-23AUG88

UNDERSTAND SIGNAL WORDS

A signal word—DANGER, WARNING, or CAUTION—is used with the safety-alert symbol. DANGER identifies the most serious hazards.

DANGER or WARNING safety signs are located near specific hazards. General precautions are listed on CAUTION safety signs. CAUTION also calls attention to safety messages in this manual.



DX,SIGNAL -19-03MAR93

T5187 -19-30SEP88



OBSERVE ROAD TRAFFIC REGULATIONS

Always observe local road traffic regulations when using public roads.



H28930
-UN-30JUN89

FX,ROAD -19-01MAY91



CAUTION: Avoid possible injury or death from machinery runaway.

Do not start engine by shorting across starter terminals. Machine will start in gear if normal circuitry is bypassed.


NEVER start engine while standing on ground. Start engine only from operator's seat, with transmission in neutral or park.

DX,BYPAS -19-26JAN90

USE SAFETY LIGHTS AND DEVICES

Prevent collisions between other road users, slow moving tractors with attachments or towed equipment, and self-propelled machines on public roads. Frequently check for traffic from the rear, especially in turns, and use hand signals or turn signal lights.

Use headlights, flashing warning lights, and turn signals day and night. Follow local regulations for equipment lighting and marking. Keep lighting and marking visible and in good working order. Replace or repair lighting and marking that has been damaged or lost.

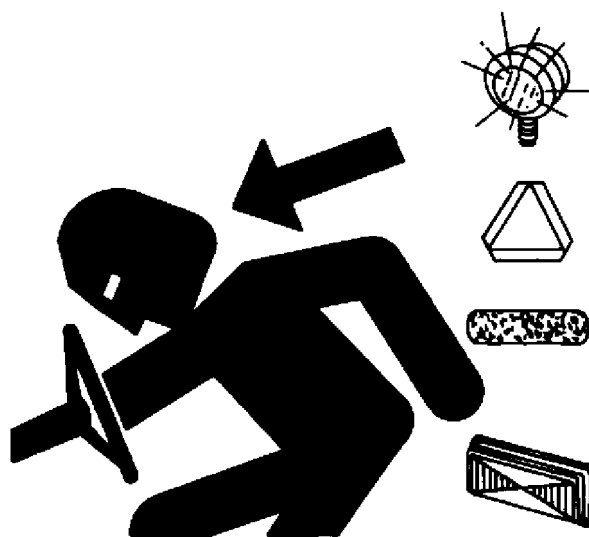

TS951
-UN-12APR90

DX,FLASH -19-04FEB99




PREPARE FOR EMERGENCIES

Be prepared if a fire starts.

Keep a first aid kit and fire extinguisher handy.

Keep emergency numbers for doctors, ambulance service, hospital, and fire department near your telephone.

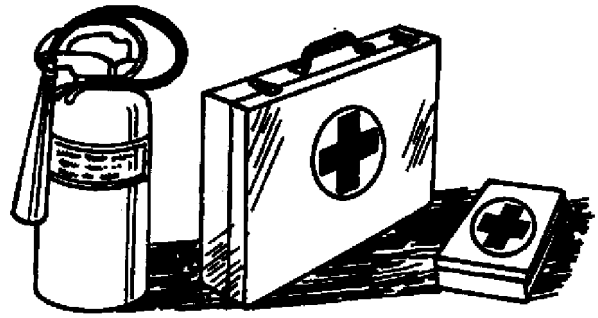

DX.FIRE2 -19-03MAR93

TS291 -UN-23AUG88


WEAR PROTECTIVE CLOTHING

Wear close fitting clothing and safety equipment appropriate to the job.

Prolonged exposure to loud noise can cause impairment or loss of hearing.

Wear a suitable hearing protective device such as earmuffs or earplugs to protect against objectionable or uncomfortable loud noises.

Operating equipment safely requires the full attention of the operator. Do not wear radio or music headphones while operating machine.

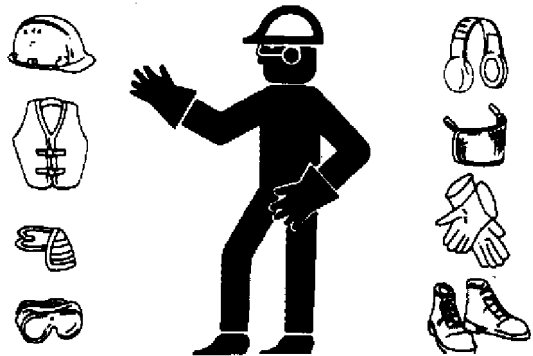

DX.WEAR -19-10SEP90

TS206 -UN-23AUG88

HANDLE FUEL SAFELY—AVOID FIRES

Handle fuel with care: it is highly flammable. Do not refuel the machine while smoking or when near open flame or sparks.

Always stop engine before refueling machine. Fill fuel tank outdoors.

Prevent fires by keeping machine clean of accumulated trash, grease, and debris. Always clean up spilled fuel.



DX.FIRE1 -19-03MAR93


TS202 -UN-23AUG88



STORE ATTACHMENTS SAFELY

Stored attachments such as dual wheels, cage wheels, and loaders can fall and cause serious injury or death.

Securely store attachments and implements to prevent falling. Keep playing children and bystanders away from storage area.

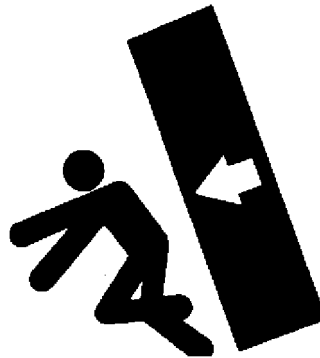

DX,STORE -19-03MAR93

TS219 -UN-23AUG68

HANDLE STARTING FLUID SAFELY

Starting fluid is highly flammable.

Keep all sparks and flame away when using it. Keep starting fluid away from batteries and cables.

To prevent accidental discharge when storing the pressurized can, keep the cap on the container, and store in a cool, protected location.

Do not incinerate or puncture a starting fluid container.



DX,FIRE3 -19-16APR92


TS1356 -UN-18MAR92

FIRE EXTINGUISHER

A 6 kg (13 lb) general purpose fire extinguisher complying with legal regulations must be installed on the left-hand side of the operator's platform.

Make sure that the fire extinguisher is always ready for operation.

Keep the engine clean and free of dust, chaff and straw to prevent the possibility of a fire.

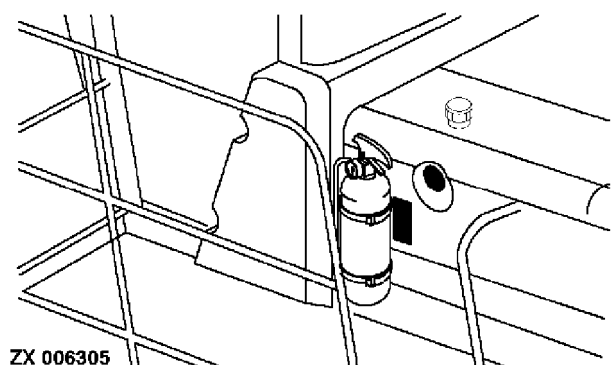

ZX 006305

ZX,FIRESPFH -19-01JUN94

ZX006305 -UN-03APR95




CHECK MACHINE SAFETY

Always check the road and general operating safety of the machine before using.

FX,READY -19-28FEB91

MOUNT AND DISMOUNT SAFELY

Use handrail when mounting or dismounting the harvester.

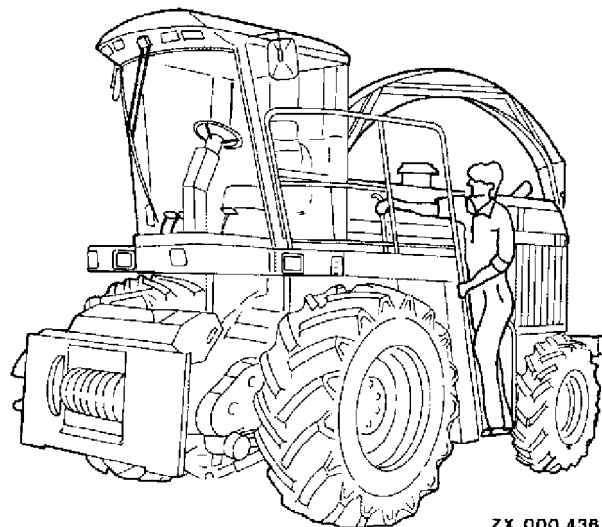

ZX 000 436

-UN-03APR95
ZX000436

ZX,HANDLE -19-01OCT91

OPERATE SAFELY

All machinery should only be operated by responsible adults who have been properly instructed and delegated to do so.

Never stand in the discharge spout path while cutterhead and fan are turning.

Never open cutterhead or fan housing doors while cutterhead is turning.

Always operate machine at rated speed.



-UN-23AUG88
TS263

ZX,CAUTION -19-01OCT91



RIDERS

Only allow the operator and one rider on the machine.

Other riders are subject to injury such as being thrown off the machine and obstruct the operator's view resulting in the machine being operated in an unsafe manner.

One rider is permitted, since the machine is equipped with a factory-approved passenger seat.




ZX,PASSENGER -19-02OCT91

TS253
-UN-23AUG68

ROAD SAFETY SWITCH

IMPORTANT: Before driving forage harvester on public roads, make sure that the road safety switch is in the road position.

This ensures that all the hydraulic functions with the exception of the steering are switched off.

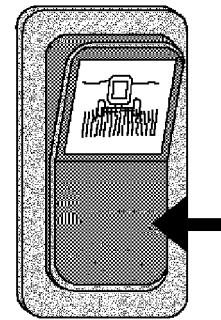

ZX 002418

ZX,SWITCH -19-01MAY94

ZX002418
-UN-16JUN95



DRIVING THE FORAGE HARVESTER

Operate machine only when all guards are correctly installed.

Before moving away, always check immediate vicinity of machine (e.g. for children). Ensure adequate visibility. Use the horn as a warning immediately before moving away.


Always adapt ground speed to road or field conditions. Avoid making sharp turns when driving up or down slopes or when driving across a slope.

Attach harvesting units and other implements to forage harvester with extreme care.

When making turns, always take into consideration the width of the attachment and the fact that the rear end of the forage harvester swings out. Attachments and ground conditions affect the driving characteristics of the harvester.

Reduce ground speed when driving on slopes or over uneven ground and before making sharp turns. Before descending a steep hill, shift to a lower gear.

Avoid holes, ditches and obstructions which may cause the forage harvester to tip, particularly on hillsides.

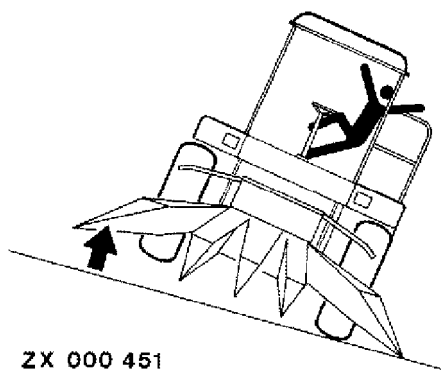

ZX 000 451

ZX000451 -JUN-05APR95


ZX,DRIVE -19-02OCT91

GUARDS AND SHIELDS

Keep guards and shields in place at all times. Ensure that they are serviceable and installed correctly.

Always disengage main clutch, shut off engine and remove key before removing any guards or shields.

Keep hands, feet and clothing away from moving parts.

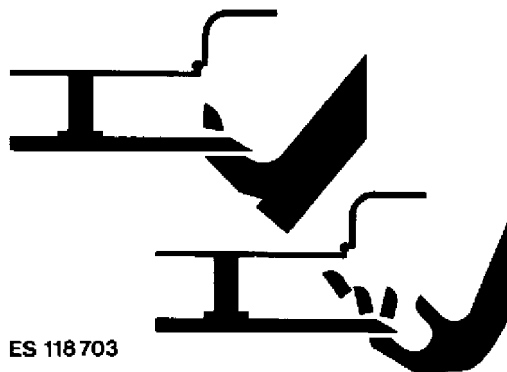

ES 118 703

ES118703 -JUN-21MAR95

FX,DEVICE -19-04DEC90



STAY CLEAR OF HARVESTING UNITS

Cutterbar, auger, reel and feed rolls cannot be completely shielded due to their function. Stay clear of these moving elements during operation. Always disengage main clutch, shut off engine and remove key before servicing or unclogging machine.



FX,CUT -19-21DEC90

ES118704 -UN-21MAR95

KEEP HANDS AWAY FROM KNIVES

Never attempt to clear obstructions in front of or on harvesting unit unless main clutch is disengaged, engine shut off and key removed.

Everyone must be clear of the forage harvester before starting the engine.



FX,KNIFE -19-21DEC90

TS254 -UN-23AUG88

STAY CLEAR OF ROTATING DRIVELINES

Entanglement in rotating driveline can cause serious injury or death.

Keep tractor master shield and driveline shields in place at all times. Make sure rotating shields turn freely.

Wear close fitting clothing. Stop the engine and be sure PTO driveline is stopped before making adjustments, connections, or cleaning out PTO driven equipment.




DX,PTO -19-12SEP95

TS1644 -UN-22AUG95

AVOID ENTANGLEMENT

To avoid entanglement, do not feed crop into machine by hand or attempt to manually unplug machine while it is running. The feed rolls can feed crop material in faster than you can release your grip on the material.

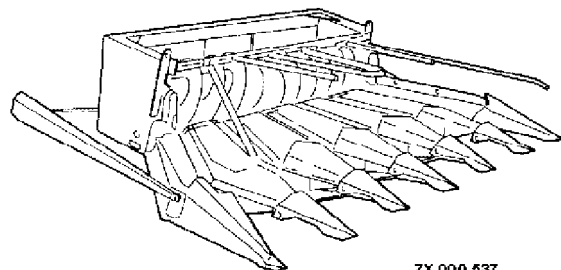


ZX,FEEDROLL -19-04DEC90

ZX000537 -UN-03APR95



TRANSPORT WITH HARVESTING UNIT INSTALLED

Before driving forage harvester on public roads, harvesting unit must be raised and secured in this position. It must not, however, obstruct operator's view of the road. Remove crop dividers (if equipped) and install protective cover.

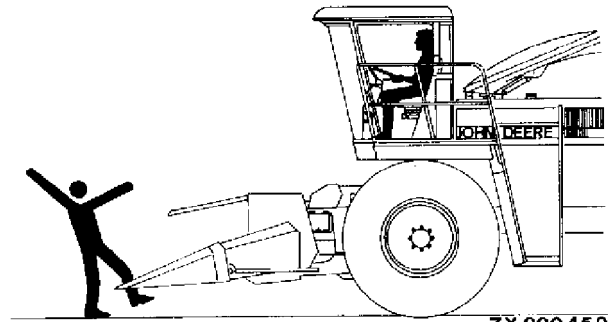


ZX 000 452

ZX,HEADER -19-04DEC90

-UN-03APR95
ZX000452

BALLASTING FOR SAFE GROUND CONTACT

Operating, steering and braking performance of forage harvester can be considerably affected by attachments which alter the center of gravity of the machine. To maintain safe ground contact, ballast the harvester at the rear end as necessary. Observe the maximum permissible axle loads and total weights.

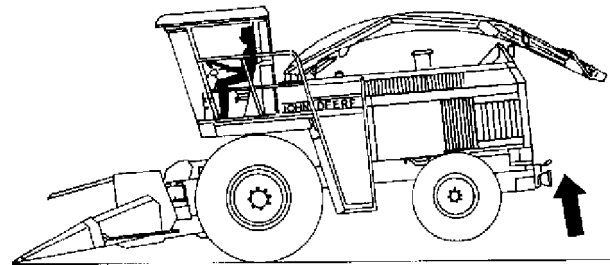

ZX 000 453

ZX,WEIGHT -19-02OCT91


-UN-03APR95
ZX000453

RADIO AERIAL

If radio aerial is not secured in its transport position before driving on public roads, it may come into contact with low-hanging electrical cables. This would result in the operator suffering a severe electrical shock.

To avoid electrical shock, no portion of the machine should be higher than 4 m (13 ft).

Before transporting machine, bend aerial or remove it.

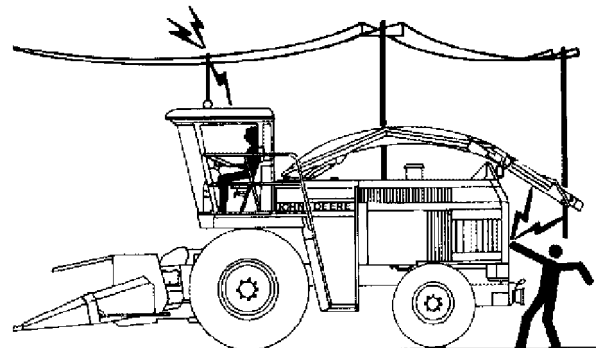

ZX 000 454

ZX,ANTENNA -19-01JAN93


-UN-03APR95
ZX000454



WORK IN VENTILATED AREA

Engine exhaust fumes can cause sickness or death. If it is necessary to run an engine in an enclosed area, remove the exhaust fumes from the area with an exhaust pipe extension.

If you do not have an exhaust pipe extension, open the doors and get outside air into the area.

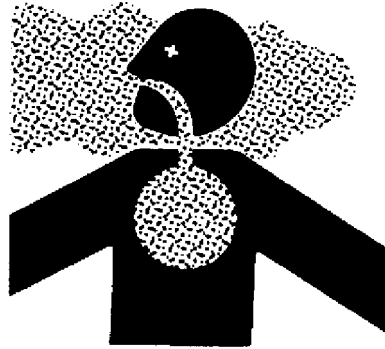


DX,AIR -19-04JUN90

TS220 -UN-23AUG88

EMERGENCY EXIT

The right-hand cab window may be used as an emergency exit. Disengage the gas-filled spring on the sidewall of the cab and open the window.

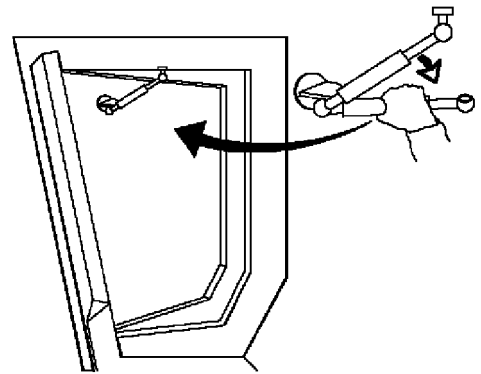

ZX 006004

ZX_OMSPFH003293-19-01MAY94

ZX006004 -UN-03APR95



PRACTICE SAFE MAINTENANCE

Understand service procedure before doing work. Keep area clean and dry.

Never lubricate, service, or adjust machine while it is moving. Keep hands, feet, and clothing from power-driven parts. Disengage all power and operate controls to relieve pressure. Lower equipment to the ground. Stop the engine. Remove the key. Allow machine to cool.

Securely support any machine elements that must be raised for service work.

Keep all parts in good condition and properly installed. Fix damage immediately. Replace worn or broken parts. Remove any buildup of grease, oil, or debris.

On self-propelled equipment, disconnect battery ground cable (-) before making adjustments on electrical systems or welding on machine.

On towed implements, disconnect wiring harnesses from tractor before servicing electrical system components or welding on machine.




DX,SERV -19-04FEB99

TSS218 -UN-23AUG88

SERVICE MACHINES SAFELY

Tie long hair behind your head. Do not wear a necktie, scarf, loose clothing, or necklace when you work near machine tools or moving parts. If these items were to get caught, severe injury could result.

Remove rings and other jewelry to prevent electrical shorts and entanglement in moving parts.

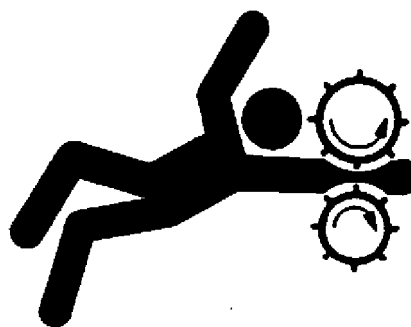

DX,LOOSE -19-04JUN90

TSS228 -UN-23AUG88




SUPPORT MACHINE PROPERLY

Always lower the attachment or implement to the ground before you work on the machine. If you must work on a lifted machine or attachment, securely support the machine or attachment. If left in a raised position, hydraulically supported devices can settle or leak down.

Do not support the machine on cinder blocks, hollow tiles, or props that may crumble under continuous load. Do not work under a machine that is supported solely by a jack. Follow recommended procedures in this manual.

When implements or attachments are used with a tractor, always follow safety precautions listed in the implement operator's manual.

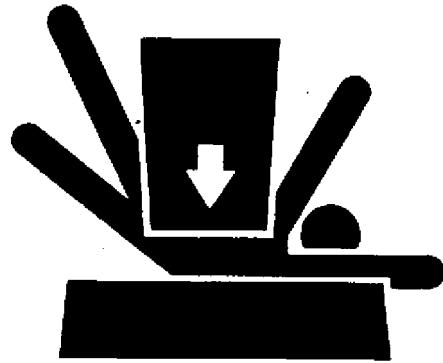


DX,LOWER -19-04FEB99

-UN-23AUG68
TS229

RETORQUE WHEEL NUTS

Retorque wheel nuts as specified in Sections "Wheels and Ballast" and "Lubrication, Periodic Services". Failure to do this could result in a wheel falling off during operation, causing the machine to tip over with serious injury to the operator and extensive damage to the machine.

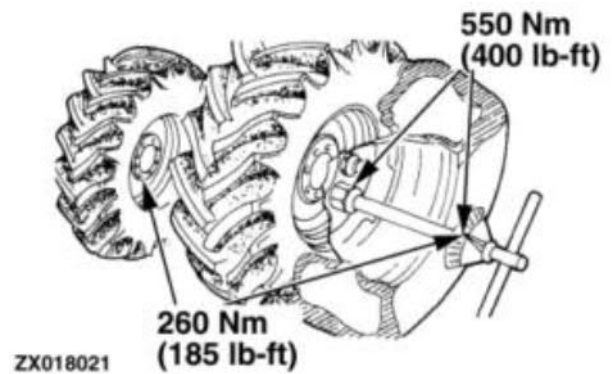

ZX.NUTSSPFH -19-01NOV99

-UN-29OCT99
ZX018021




AVOID HIGH-PRESSURE FLUIDS

Escaping fluid under pressure can penetrate the skin causing serious injury.

Avoid the hazard by relieving pressure before disconnecting hydraulic or other lines. Tighten all connections before applying pressure.

Search for leaks with a piece of cardboard. Protect hands and body from high pressure fluids.

If an accident occurs, see a doctor immediately. Any fluid injected into the skin must be surgically removed within a few hours or gangrene may result. Doctors unfamiliar with this type of injury should reference a knowledgeable medical source. Such information is available from Deere & Company Medical Department in Moline, Illinois, U.S.A.

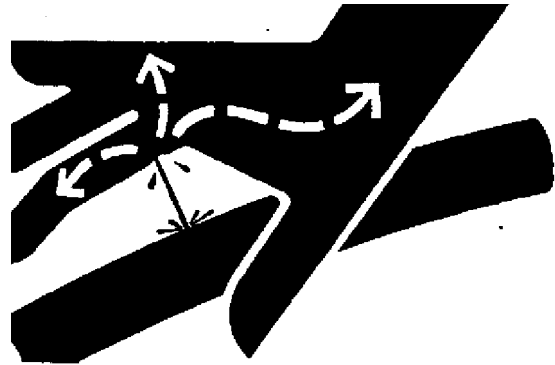

X9811 -UN-23AUG88

DX,FLUID -19-03MAR93

PREVENT BATTERY EXPLOSIONS

Keep sparks, lighted matches, and open flame away from the top of battery. Battery gas can explode.

Never check battery charge by placing a metal object across the posts. Use a volt-meter or hydrometer.

Do not charge a frozen battery; it may explode. Warm battery to 16°C (60°F).



TS204 -UN-23AUG88

DX,SPARKS -19-03MAR93



PREVENT ACID BURNS

Sulfuric acid in battery electrolyte is poisonous. It is strong enough to burn skin, eat holes in clothing, and cause blindness if splashed into eyes.

Avoid the hazard by:

1. Filling batteries in a well-ventilated area.
2. Wearing eye protection and rubber gloves.
3. Avoiding breathing fumes when electrolyte is added.
4. Avoiding spilling or dripping electrolyte.
5. Use proper jump start procedure.

If you spill acid on yourself:

1. Flush your skin with water.
2. Apply baking soda or lime to help neutralize the acid.
3. Flush your eyes with water for 15—30 minutes. Get medical attention immediately.

If acid is swallowed:

1. Do not induce vomiting.
2. Drink large amounts of water or milk, but do not exceed 2 L (2 quarts).
3. Get medical attention immediately.



DX,POISON -19-21APR93

TSS203 -UN-23AUG88

Thank you so much for reading.
Please click the “Buy Now!”
button below to download the
complete manual.



After you pay.

You can download the most
perfect and complete manual in
the world immediately.

Our support email:

ebooklibonline@outlook.com