

5020 Tractor



TECHNICAL MANUAL 5020 Tractor

TM1022 (01JAN73) English



John Deere Tractor TM1022 (01JAN73)

> LITHO IN U.S.A. ENGLISH

5020 TRACTOR TECHNICAL MANUAL TM-1022 (JAN-73)

1

CONTENTS

1

SECTION 10 - GENERAL Group 5 - Specifications Group 10 - Predelivery, Delivery, and After-Sale Services Group 15 - Tune-Up and Adjustment Group 20 - Lubrication Group 25 - Separation SECTION 20 - ENGINE Group 5 - General Information, Diagnosis, and Tests Group 10 - Cylinder Head, Valve Train, and Camshaft Group 15 - Cylinder Block, Liners, Pistons, and Rods Group 20 - Crankshaft, Main Bearings, and Flywheel Group 25 - Lubrication System Group 30 - Cooling System SECTION 30 - FUEL SYSTEM Group 5 - Diagnosing Malfunctions Group 10 - Fuel Injection System Group 15 - Air Intake System Group 20 - Speed Control Linkage SECTION 40 - ELECTRICAL SYSTEM Group 5 - Information and Wiring Diagrams Group 10 - Charging Circuit Group 15 - Starting Circuit Group 20 - Lighting and Accessory Circuits SECTION 50 - POWER TRAIN Group 5 - Clutch Group 10 - Syncro-Range Transmission Group 15 - Differential Group 20 - Final Drive Group 25 - Power Take-Off SECTION 60 - STEERING AND BRAKES Group 5 - General Information SECTION 70 - HYDRAULIC SYSTEM Group 5 - General Information, Diagnosis, and Tests Group 10 - Reservoir, Filters, Valves, and Oil Cooler Group 15 - Hydraulic Pumps Group 20 - Power Steering Group 25 - Power Brakes Group 30 - Rockshaft and Implement Hitches Group 35 - Selective Control Valve, Breakaway Couplers, and Remote Cylinders

SECTION 80 - MISCELLANEOUS Group 5 - Front Axle Copyright 1969 DEERE & COMPANY Moline, Illinois All rights reserved Thank you so much for reading. Please click the "Buy Now!" button below to download the complete manual.



After you pay.

You can download the most perfect and complete manual in the world immediately.

Our support email:

ebooklibonline@outlook.com