 


# John Deere JD302-A Loader and Backhoe Loader

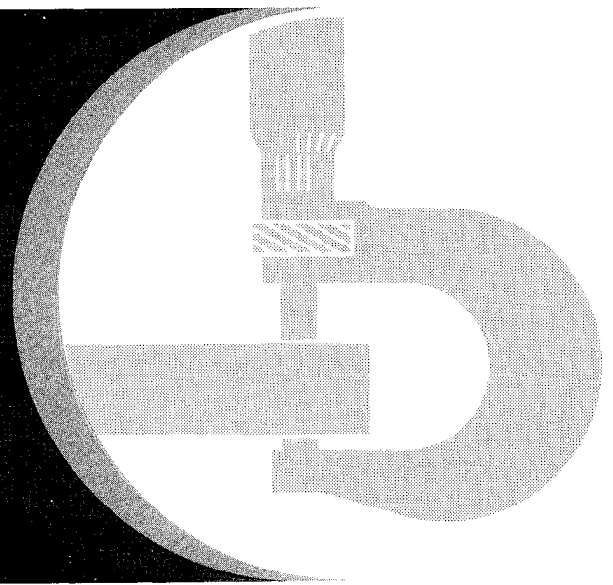

## TECHNICAL MANUAL

John Deere Dubuque Works

TM-1090

LITHO IN U.S.A.

# JD302-A LOADER AND BACKHOE LOADER

Technical Manual  
TM-1090 (Dec-78)


## CONTENTS

- |   |   |
|---|---|
| Section 10 - GENERAL                                    | Section 50 - HYDRAULIC SYSTEM                               |
| Group 5 Specifications                                  | Group 5 Transmission Pump                                   |
| Group 10 Predelivery, Delivery, and After-Sale Services | Group 10 Main Hydraulic Pump                                |
| Group 15 Lubrication                                    | Group 15 Reverser Clutch Control Valve                      |
| Section 20 - ENGINE                                     | Group 20 Pressure Control Valve                             |
| Group 5 Engine Removal and Installation                 | Group 25 Steering Valve                                     |
| Group 10 Basic Engine                                   | Group 30 Brake Valve  |
| Group 15 Engine Lubrication System                      | Group 35 Loader Control Valve                               |
| Group 20 Engine Cooling System                          | Group 40 9250 Backhoe Control Valve                         |
| Group 25 Fuel System                                    | Group 41 9250-A Backhoe Control Valve                       |
| Group 30 Speed Control Linkage                          | Group 45 Selective Control Valve                            |
| Group 35 Air Intake System                              | Group 50 Rockshaft System                                   |
| Group 40 Specifications and Special Tools               | Group 55 Miscellaneous Hydraulic Components                 |
| Section 30 - ELECTRICAL SYSTEM                          | Group 60 Hydraulic Cylinders                                |
| Group 5 Batteries                                       | Group 65 Specifications and Special Tools                   |
| Group 10 Charging System                                | Section 60 - MISCELLANEOUS COMPONENTS                       |
| Group 15 Starting System                                | Group 5 Front End Assembly                                  |
| Group 20 Ignition System                                | Group 10 Loader Frame, Boom and Bucket                      |
| Group 25 Gauges and Switches                            | Group 15 9250 Backhoe Frame, Boom, Dipperstick and Bucket   |
| Group 30 Specifications and Special Tools               | Group 16 9250-A Backhoe Frame, Boom, Dipperstick and Bucket |
| Section 40 - POWER TRAIN                                | Group 20 Three-Point Hitch                                  |
| Group 5 Clutch Assemblies                               | Group 25 Specifications and Special Tools                   |
| Group 10 Transmission                                   | Section 70 - SYSTEM TESTING                                 |
| Group 15 Reverser                                       | Group 5 General Information                                 |
| Group 20 PTO's  | Group 10 Engine   |
| Group 25 Differential and Parking Brake                 | Group 15 Electrical System                                  |
| Group 30 Final Drives                                   | Group 20 Power Train  |
| Group 35 Specifications and Special Tools               | Group 25 Hydraulic System                                   |
|   | Group 26 Hydraulic System (Analyzer)                        |
|   | Group 30 Miscellaneous Components                           |
|   | Group 35 Specifications and Special Tools                   |

 
## MAINTENANCE WITHOUT ACCIDENT WORK SAFELY



T27966N

 This safety alert symbol identifies important safety messages in this manual and on the loader and loader backhoe. When you see this symbol, be alert to the possibility of personal injury and carefully read the message that follows.

**EVERY EMPLOYER HAS A  
SAFETY PROGRAM. KNOW  
WHAT IT IS!**

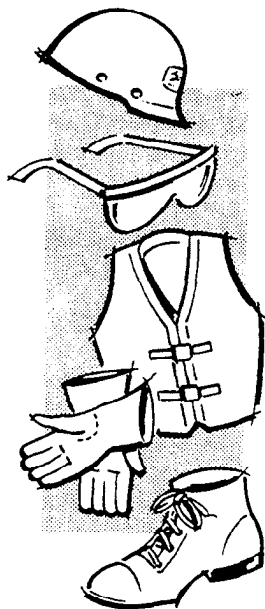


T27501N

Consult your shop foreman for specific instructions on a job, and the safety equipment required.

For instance, you may need: Hard hat, safety shoes, safety goggles, heavy gloves, reflector vests, ear protectors, respirators.

 
Litho in U.S.A.

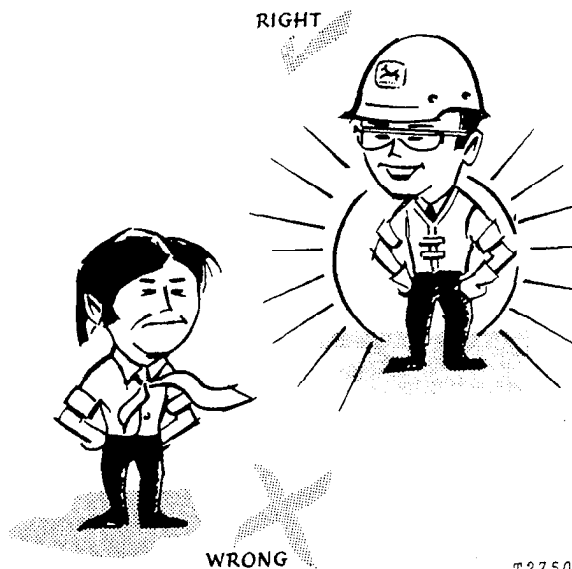

T27502N

### BE ALERT!

 Plan ahead—work safely—know how to use a first-aid kit and a fire extinguisher—and where to get aid and assistance.

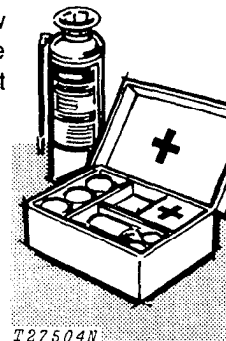

T27504N

### Maintenance Area

Make sure the maintenance area is adequately vented.

 
Keep maintenance area **CLEAN AND DRY**. Oily and wet floors are slippery; greasy rags are a fire hazard; wet spots are dangerous when working with electrical equipment.

Store starting aids in a cool and well-ventilated place, out of the reach of unauthorized personnel.

## MAINTENANCE WITHOUT ACCIDENT

### AVOID FIRE HAZARDS—

#### Fuel Is Dangerous!

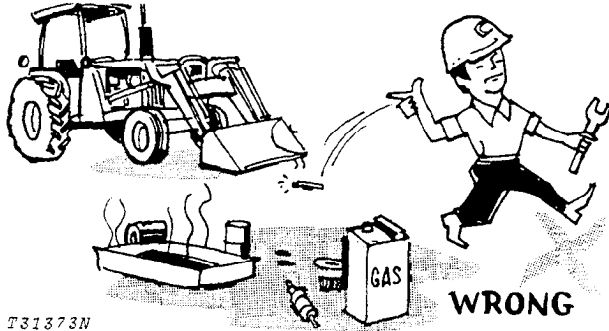

T31373N

Don't smoke while refueling.

Don't smoke while handling highly flammable material.


Engine should be shut off when refueling.

Use care in refueling if the engine is hot.

Don't use open pans of gasoline or diesel fuel for cleaning parts. Good commercial, nonflammable solvents are preferred.

#### Battery Gas Is Highly Flammable!

 Provide adequate ventilation when charging batteries.

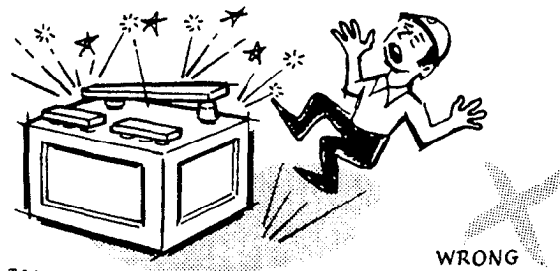

T27506N

Don't check battery charge by placing metal objects across the posts.

Don't allow sparks or open flame near batteries.

Don't smoke near battery.

#### Flame Is Not a Flashlight!

**NEVER USE OPEN FLAME AROUND THE MACHINE.**

**KNOW WHERE FIRE EXTINGUISHERS ARE KEPT!**

### UNDER ALL MAINTENANCE CONDITIONS—

 
Do not perform any work on the equipment unless authorized to do so. Then be sure you know the safe and proper procedure.

Follow recommended procedures.

Never service the equipment while it is being operated.

Avoid working on equipment with the engine running.

### RIGHT

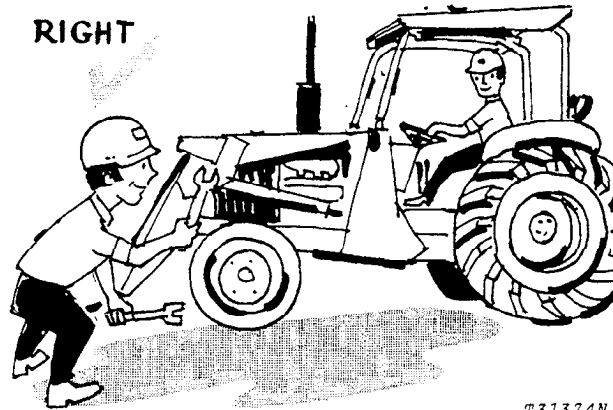

T31374N

If it is necessary to make checks with the engine running, **ALWAYS USE TWO** service technicians—one, the operator, at the controls, the other checking within sight of the operator.

### KEEP HANDS AWAY FROM MOVING PARTS

Support all raised equipment.

Never work under raised bucket or backhoe.

Lower bucket and backhoe to ground.

If the machine is on an incline, block it securely.

Use hoisting equipment for lifting heavy parts.

### TAKE CARE! WATCH OUT FOR OTHER PEOPLE IN THE VICINITY

Wear safety glasses when drilling, grinding, or hammering metal.

Thank you so much for reading.  
Please click the “Buy Now!”  
button below to download the  
complete manual.



After you pay.

You can download the most  
perfect and complete manual in  
the world immediately.

Our support email:

[ebooklibonline@outlook.com](mailto:ebooklibonline@outlook.com)