



# 7440 and 7445 Cotton Strippers



JOHN DEERE

## TECHNICAL MANUAL 7440 and 7445 Cotton Strippers

 
TM1282 (03AUG94) English

FOR COMPLETE SERVICE INFORMATION ALSO SEE:

6359 ENGINE.....	CTM4
6059 ENGINE.....	CTM8
RADIAL PISTON PUMP.....	CTM7
STARTING MOTORS AND ALTERNATORS .....	CTM77

**John Deere Des Moines Works**  
**TM1282 (03AUG94)**

LITHO IN U.S.A.  
ENGLISH



# Contents

## SECTION 10—GENERAL

- Group 05—Safety
- Group 10—General Specifications
- Group 15—Fuels and Lubricants

## SECTION 20—ENGINE REPAIR

- Group 05—Remove and Install Engine
- Group 10—Cooling System

## SECTION 30—FUEL AND AIR REPAIR

- Group 05—Diesel Fuel System

## SECTION 40—ELECTRICAL REPAIR

- Group 05—MOTOROLA Charging Circuit Repair
- Group 06—NIPPONDENSO Charging Circuit Repair
- Group 07—BOSCH Charging Circuit Repair
- Group 10—Starting Circuit Repair
- Group 15—Monitor System Repair
- Group 20—Tachometer and Gauges
- Group 25—Lights and Accessory Circuit Repair
- Group 30—Connector Repair

## SECTION 50—POWER TRAIN REPAIR

- Group 05—EATON Hydrostatic Drive
- Group 06—SUNSTRAND Hydrostatic Drive
- Group 10—Transmission
- Group 15—Differential
- Group 20—Final Drive

## SECTION 60—STEERING AND BRAKES REPAIR

- Group 05—Remove and Install Steering Components
- Group 06—Steering Column Repair
- Group 07—Steering Metering Pump Repair
- Group 08—Steering Cylinder Repair
- Group 10—Brake Repair

## SECTION 70—HYDRAULIC REPAIR

- Group 05—Hydraulic Pump
- Group 10—Main Control Valve—7440 Stripper
- Group 11—Main Control Valve—7445 Stripper
- Group 15A—Basket Lift Cylinder

- Group 15B—Rockshaft Lift Cylinders
- Group 15C—Height Control Cylinder
- Group 15D—Boll Box Cylinder
- Group 15G—Axle Stabilizer Cylinder
- Group 15H—Vane Compactor Cylinder
- Group 20—Hydraulic Motors
- Group 25—Height Control
- Group 30—Basket Interlock Valve—7445
- Group 35—Stabilizer Valve

## SECTION 80—AXLES AND WHEEL REPAIR

- Group 05—Guide Wheel Axle—7440 and 7445 (S.N. —4000)
- Group 10—Guide Wheel Axle—7445 (S.N. 4001— )

## SECTION 90—OPERATOR STATION REPAIR

- Group 05—DELCO R-12 Air Conditioning System
- Group 06—NIPPONDENSO R-12 Air Conditioning System
- Group 07—R-12 Air Conditioning System
- Group 08—NIPPONDENSO R-134 Air Conditioning System
- Group 10—Heating System
- Group 15—Seat Repair
- Group 20—Cab Repair

## SECTION 100—STRIPPING UNITS REPAIR

- Group 05—Unit Removal and Installation
- Group 10—Unit Repair
- Group 15—Cross Augers and Slip Clutch
- Group 20—Input Shafts and Slip Clutches—7440 Stripper
- Group 21—Input Shafts and Slip Clutches—7445 Stripper

## SECTION 110—AIR SYSTEM REPAIR

- Group 05—Air System

## SECTION 120—CLEANER REPAIR

- Group 05—Cleaner Repair

Continued on next page

*All information, illustrations and specifications in this manual are based on the latest information available at the time of publication. The right is reserved to make changes at any time without notice.*

TM1282-19-03AUG94

COPYRIGHT© 1994  
DEERE & COMPANY  
Moline, Illinois  
All rights reserved  
A John Deere ILLUSTRATION™ Manual  
Previous Editions  
Copyright© 1992, 1986, 1985, 1983 Deere & Company

**SECTION 210—OPERATIONAL CHECKOUT  
PROCEDURE**

Group 05—Machine Operational Checkout

**SECTION 220—ENGINE OPERATION AND TESTS**

Group 05—Engine

**SECTION 230—FUEL/AIR OPERATION AND  
TESTS**

Group 05—Air Intake System  
Group 10—Diesel Fuel System

**SECTION 240—ELECTRICAL OPERATION AND  
TESTS**

Group 05—System Information  
Group 10—Electrical System Diagnosis  
Group 10A—Starting Circuit  
Group 10B—Charging Circuit (7440; 7445, P.I.N.  
-12000)  
Group 10C—Charging Circuit (7445, P.I.N.  
12001- )  
Group 10D—Gauge Cluster  
Group 10E—Lighting Circuit  
Group 10F—Accessory Circuit  
Group 11—Monitor System Diagnosis  
Group 15—Battery  
Group 20—Charging Circuit  
Group 25—Starting Circuit  
Group 30—Tachometer  
Group 35—Monitor System  
Group 40—Lights, Instruments, and Accessory  
Circuits

**SECTION 250—POWER TRAIN OPERATION AND  
TESTS**

Group 05—Eaton Hydrostatic Drive  
Group 06—Sundstrand Hydrostatic Drive  
Group 10—Transmission  
Group 15—Final Drive

**SECTION 260—STEERING/BRAKES OPERATION  
AND TESTS**

Group 05—Steering  
Group 10—Brakes

**SECTION 270—HYDRAULIC SYSTEM  
OPERATION AND TEST**

Group 05—Hydraulic System  
Group 10—Hydraulic Pump  
Group 15—7440 Main Control Valve  
Group 16—7445 Main Control Valve  
Group 20—Hydraulic Cylinders  
Group 25—Hydraulic Motors  
Group 30—Height Control

**SECTION 290—OPERATORS STATION  
OPERATION AND TESTS**

Group 05—Operator's Station Operational Checks  
Group 10—Operator's Station Diagnostics  
Group 15A—Air Conditioning Tests - R12  
Group 15B—Air Conditioning Testing - R134a  
Group 15C—Operator's Station Tests  
Group 20—Operator's Station Adjustments  
Group 25—Operator's Station Theory of  
Operation

**SECTION 300—STRIPPING UNIT OPERATION  
AND TESTS**

Group 05—Stripping Unit System

**SECTION 310—AIR SYSTEM OPERATION AND  
TESTS**

Group 05—Air System

**SECTION 320—CLEANER OPERATION AND  
TESTS**

Group 05—Cleaner

**SECTION 399—SPECIAL TOOLS**

Group 05—Fabricated Tools

**Index**

Thank you so much for reading.  
Please click the “Buy Now!”  
button below to download the  
complete manual.



After you pay.

You can download the most  
perfect and complete manual in  
the world immediately.

Our support email:

[ebooklibonline@outlook.com](mailto:ebooklibonline@outlook.com)