
John Deere 493D Feller-Buncher

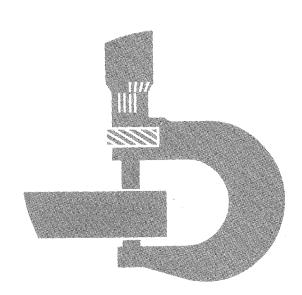

TECHNICAL MANUAL

493D FELLER-BUNCHER TECHNICAL MANUAL TM-1415 (JUN-88)

SECTION AND GROUP CONTENTS

NOTE: This manual covers 493D Feller–Buncher Repair/Operation and Test, use with TM– 1389 490D Excavator Operation and Test and TM–1390 490D Excavator Repair.

SECTION I—GENERAL INFORMATION

Group I-Safety Information

Group II—General Specifications

Group III-Torque Values

Group IV—Fuels and Lubricants

Group V—Inspection Procedures

SECTION 01—TRACKS

Group 0130—Track System

Lower Track Roller, Track Sag

SECTION 05—ENGINE AUXILIARY SYSTEMS

Group 0510—Cooling System Group 0520—Intake System

SECTION 16—ELECTRICAL

Group 1674—Wiring Harness and Switches
Controller Switches

SECTION 18—OPERATOR'S STATION

Group 1800—Removal and Installation FOPS, Cab Group 1810—Operator Enclosure FOPS

SECTION 33—EXCAVATOR

Group 3340—Frames
Arm, Boom
Group 3360—Hydraulic System

Main Control Valve, Forestry Package Control Valve, Reservoir, Oil Cooler Bypass Valve, Controllers and Valve, Solenoid Valves, Pressure Control Valve, Pilot Filter, Pilot Shut-Off Valve

SECTION 9005—OPERATIONAL CHECK-OUT PROCEDURE

Group 10—Operational Checkout Procedure

SECTION 9015—ELECTRICAL SYSTEM

Group 05—Theory of Operation Group 15—Diagnostic Information

SECTION 9020—POWER TRAIN

Group 20—Adjustments

SECTION 9025—HYDRAULIC SYSTEM

Group 05—Theory of Operation Group 15—Diagnostic Information Group 25—Tests Thank you so much for reading. Please click the "Buy Now!" button below to download the complete manual.



After you pay.

You can download the most perfect and complete manual in the world immediately.

Our support email: ebooklibonline@outlook.com