

335, 375, 385, 435 and 535 Round Balers



TECHNICAL MANUAL

335, 375, 385, 435 and 535 Round Balers

TM1472 (06NOV95) English



John Deere Ottumwa Works TM1472 (06NOV95)

> LITHO IN U.S.A. ENGLISH

FOREWORD

This manual is written for an experienced technician. Essential tools required in performing certain service work are identified in this manual and are recommended for use.

Live with safety: Read the safety messages in the introduction of this manual and the cautions presented throughout the text of the manual.



This is the safety-alert symbol. When you see this symbol on the machine or in this manual, be alert to the potential for personal injury.

Technical manuals are divided in two parts: repair and operation and tests. Repair sections tell how to repair the components. Operation and tests sections help you identify the majority of routine failures quickly. Information is organized in groups for the various components requiring service instruction. At the beginning of each group are summary listings of all applicable essential tools, service equipment and tools, other materials needed to do the job, service parts kits, specifications, wear tolerances, and torque values.

Technical Manuals are concise guides for specific machines. They are on-the-job guides containing only the vital information needed for diagnosis, analysis, testing, and repair.

Fundamental service information is available from other sources covering basic theory of operation, fundamentals of troubleshooting, general maintenance, and basic type of failures and their causes.

DX,TMIFC -19-22MAY92

Contents

SECTION 51—SURFACE WRAP SYSTEM

Group 05-General Information

Group 15-Surface Wrap Repair

Group 05-General Information

Group 10-Diagnosing Malfunctions

Group 20-Tests and Adjustments

Group 05-Diagnosing Malfunctions

Group 16-385 Tension Arm Repair

Group 25-Electrical Diagrams

Group 15-435/535 Electrical Diagnostics

Group 15-335 and 375 Tension Arm Repair

Group 20-435 and 535 Tension Arm Repair

SECTION 60-ELECTRICAL

SECTION 70-PICKUP

Group 10-Pickup Repair

Group 05---Wheel Repair

Group 10-Gate Repair

Group 25-Tongue

Index

Group 30-Belt Repair

Group 35-Main Frame Repair

SECTION 80-MISCELLANEOUS

Group 10—Diagnosing Malfunctions

SECTION 10-GENERAL

Group 05—Safety Group 10—Specifications Group 15—General Information Group 20—Lubrication

SECTION 20—Drive Train

Group 05—General Information Group 10—Diagnosing Malfunctions Group 15—Drive Train Protection Group 20—PTO Hookup Group 25—Gear Case Repair Group 30—Rolls and Roll Drives

SECTION 30-HYDRAULICS

Group 05—General Information

Group 10-Diagnosing Malfunctions

- Group 15-335, 375 and 385 Hydraulic System and Tests
- Group 20---335, 375 and 385 Tensioning Valve Repair
- Group 25—335, 375 and 385 Hydra-Selector Valve
- Group 30-435 and 535 Hydraulic System and Tests
- Group 35-435 and 535 Single Spool Valve Group 40-Cylinders

SECTION 40-TWINE MECHANISM

- Group 05-Diagnosing Malfunctions
- Group 10-335, 375 and 385 Twine Wrap System
- Group 15-435 and 535 Automatic Twine Wrap System

SECTION 50—SURFACE WRAP SYSTEM (SERIAL NO. —CC010000)

- Group 05—Diagnosing Malfunctions
- Group 05-Diagnosing Manuncions
- Group 10—Diagnosing Malfunctions
- Group 15-Surface Wrap Repair

All information, illustrations and specifications in this manual are based on the latest information available at the time of publication. The right is reserved to make changes at any time without notice.

TM1472-19-06NOV95

COPYRIGHT© 1995 DEERE & COMPANY Moline, Illinois All rights reserved A John Deere ILLUSTRUCTION™ Manual Previous Editions Copyright 1993, 1992, 1989 Deere & Company 1

20

U

40





TM1472 (06NOV95)

Thank you so much for reading. Please click the "Buy Now!" button below to download the complete manual.



After you pay.

You can download the most perfect and complete manual in the world immediately.

Our support email:

ebooklibonline@outlook.com