

2750 Tractor



JOHN DEERE

TECHNICAL MANUAL 2750 Tractor

TM4405 (01Aug86) English

TM4405 (01Aug86)

LITHO IN U.S.A.
ENGLISH



D C G



T M 4 4 0 5
0 1 A U G 8 6

2750 TRACTOR TECHNICAL MANUAL TM-4405 (Apr-86)

CONTENTS

For engine information, refer to engine component technical manual, CTM-4, 3179, 4239, and 6359 Engines. The component manual covers basic repair of the engines.

SECTION 10 - GENERAL

- Group 00 - Specifications and Special Tools
- Group 05 - Predelivery, Delivery, and After-Sales Inspections
- Group 10 - Lubrication and Periodic Service
- Group 15 - Tune-Up
- Group 20 - Tractor Separation

SECTION 20 - ENGINE

- Group 00 - Specifications
- Group 05 - Radiator

SECTION 30 - FUEL AND AIR INTAKE SYSTEM

- Group 00 - Specifications and Special Tools
- Group 05 - General Information, Diagnosing Malfunctions
- Group 10 - Fuel Tank and Water Trap
- Group 15 - Cold Weather Starting Aids
- Group 20 - Speed Control Linkage
- Group 25 - Air Cleaner

SECTION 40 - ELECTRICAL SYSTEM

- Group 00 - Specifications and Special Tools
- Group 05 - Description, Diagnosing Malfunctions and Tests
- Group 06 - Connector Repair
- Group 10 - Wiring Harnesses
- Group 15 - Controls and Instruments
- Group 20 - Lighting Systems
- Group 25 - Wiring Diagrams
- Group 30 - Starting Motor
- Group 35 - Alternator

SECTION 50 - POWER TRAIN

- Group 00 - Specifications and Special Tools
- Group 05 - Description, Operation and Lubricating System
- Group 10 - Clutch Operating Linkages
- Group 15 - Engine Clutch
- Group 20 - Hi-Lo Shift Unit
- Group 21 - Creeper Transmission
- Group 25 - Transmission Shift Linkage
- Group 30 - Synchronized Transmission and Transmission Oil Pump
- Group 31 - Collar Shift Transmission and Transmission Oil Pump
- Group 35 - Differential
- Group 40 - Final Drives
- Group 45 - Independent PTO Shafts
- Group 50 - Mechanical Front Wheel Drive

Continued on next page

All information, illustrations and specifications contained in this technical manual are based on the latest information available at the time of publication. The right is reserved to make changes at any time without notice.

COPYRIGHT® 1986
DEERE & COMPANY
Moline, Illinois
All rights reserved
Previous Edition
Copyright® 1982
Copyright® 1984
Copyright® 1985
Deere & Company

CONTENTS (Continued)

SECTION 60 - STEERING SYSTEM AND BRAKES

- Group 00 - Specifications and Special Tools
- Group 05 - Steering
- Group 10 - Brakes

SECTION 70 - HYDRAULIC SYSTEM

- Group 00 - Specifications and Special Tools
- Group 05 - Description, Diagnosing Malfunctions and Pressure Tests
- Group 10 - Oil Reservoir, Filter, Valves and Oil Cooler
- Group 15 - Hydraulic Pumps
- Group 20 - Rockshaft
- Group 25 - Selective Control Valve (Poppet Valve Type) and Breakaway Coupler
- Group 26 - Selective Control Valves (Spool Type) and Quick Coupler
- Group 30 - Remote Cylinder

SECTION 80 - MISCELLANEOUS

- Group 00 - Specifications
- Group 05 - Front Axle
- Group 10 - Front and Rear Wheels

SECTION 90 - OPERATOR'S STATION

- Group 00 - Specifications and Special Tools
- Group 05 - Air Conditioning System
- Group 10 - Cab Ventilation and Heating
- Group 15 - Seats
- Group 20 - Sound-Gard Body
- Group 25 - Roll-Gard Protective Structure

Thank you so much for reading.
Please click the “Buy Now!”
button below to download the
complete manual.



After you pay.

You can download the most
perfect and complete manual in
the world immediately.

Our support email:

ebooklibonline@outlook.com