

# Workshop Service Manual

---


## *Combine Range*

*FENDT 8400 P*

*FENDT 8370 P*

*+ Auto Level*

*+ Rotary Separator*

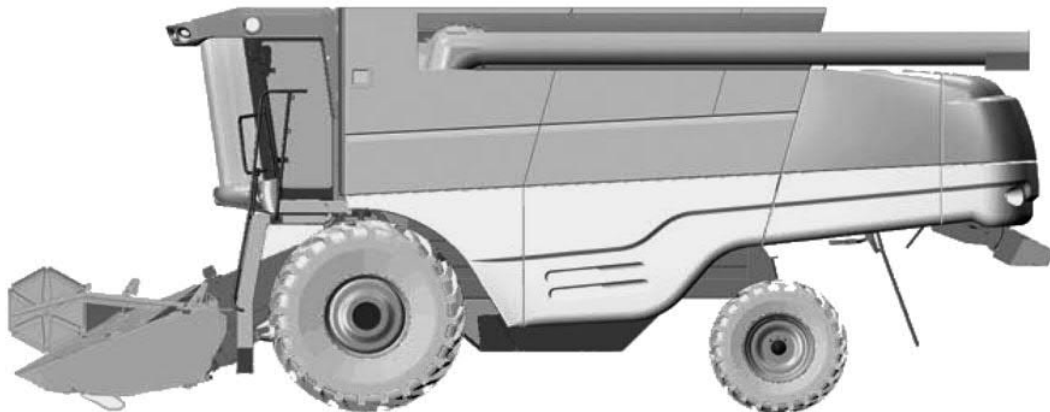

- 0 Introduction - Specifications**
- 1 Cutting table**
- 2 Reel**
- 3 Main crop elevator**
- 4 Threshing unit**
- 5 Straw walkers**
- 6 Shaker shoe - Fanning mill**
- 7 Elevators**
- 8 Engine**
- 9 Unloading auger - Grain tank**
- 10 Drive unit**
- 11 Transmissions**
- 12 Undercarriage**
- 13 Cab**
- 14 Hydraulics**
- 15 Machine housing**
- 16 Electrical system**
- 17 Straw chopper**
- 18 General assembly instructions**
- 19 Miscellaneous data**

# Contents

---

# Contents

<b>0: Introduction - Specifications</b> .....	<b>1</b>
0.1 Using the manual .....	3
0.2 General specifications .....	4
0.2.1 Tyre pressure .....	9
0.3 Dimensions and weight .....	11
0.4 Safety precautions .....	13
0.4.1 Safety in the workshop .....	13
0.4.2 Safety - a word to the mechanic .....	13
0.4.3 Safety - danger, warning and caution .....	13
0.4.4 Safety decals .....	13
0.4.5 General .....	13
0.4.6 Personal safety .....	13
0.4.7 Considerations with regard to equipment .....	14
0.4.8 General considerations .....	14
0.4.9 Operational considerations .....	15
0.4.10 Maintenance techniques .....	16
0.5 Practical advice .....	17
0.6 Start-up instructions .....	21
0.6.1 General .....	21
0.6.2 Pre-delivery checks .....	21
0.6.3 Instruction of combine operator .....	22
0.7 Conversion tables .....	25
0.7.1 Conventional units of measurement .....	25
0.8 Locking and sealing agents .....	27
0.9 Wheel nut torques .....	28
0.9.1 Wheels .....	28
0.9.2 Bolts with metric threads .....	29
0.9.3 Nuts with metric threads .....	30
<b>1: Cutting table</b> .....	<b>31</b>
1.1 General .....	33
1.2 Knife drive - wobble box .....	34
1.2.1 Removal .....	34
1.2.2 Assembly .....	35
1.2.3 Reconditioning the wobble box .....	36
1.2.4 Positioning the double fingers, knife and crop lifters .....	42
1.3 Table auger .....	43
1.3.1 Removal .....	43
1.3.2 Assembly .....	43
1.3.3 Replacing the shaft on the right-hand side .....	44
1.3.4 Replacing the shaft on the left-hand side .....	45
1.3.5 Replacing the crankshaft .....	45
1.3.6 Replacing the feathering fingers, bearings and bushes .....	46
1.3.7 Adjusting the table auger and feathering fingers .....	47
1.4 Table body .....	48
1.4.1 Adjusting the cut-off strips .....	48
1.4.2 Adjusting and positioning the ground sensor - PowerFlow .....	49
1.5 Slip clutch and chain drive .....	51
1.5.1 Removal .....	51
1.5.2 Assembly .....	51
1.5.3 Replacing the bearings and sprockets .....	52
1.6 Countershaft .....	53
1.6.1 Removal .....	53
1.6.2 Assembly .....	54
1.7 PowerFlow table .....	55
1.7.1 Removal, belts .....	56
1.7.2 Assembly, belts .....	58
1.7.3 Replacing the front rollers and bearings, scraper adjustment .....	60

# Contents

1.7.4	Replacing the rear rollers and bearings, scraper adjustment . . . . .	62
1.7.5	Replacing and aligning the bearing housing, rear rollers . . . . .	62
1.7.6	Belt tensioning and running-in . . . . .	64
<b>2:</b>	<b>Reel . . . . .</b>	<b>67</b>
2.1	Reel . . . . .	69
2.1.1	Removal . . . . .	69
2.1.2	Assembly . . . . .	70
2.1.3	Replacing the reel tine bar and plastic bearings . . . . .	71
2.1.4	Replacing the guide rollers, eccentric, guide ring and bearings . . . . .	72
2.1.5	Replacing the reel plates . . . . .	73
2.1.6	Replacing the reel tube, bearings . . . . .	73
2.2	Oil motor and chain drive . . . . .	74
2.2.1	Replacing the oil motor . . . . .	74
2.2.2	Replacing the flow divider . . . . .	75
2.3	Hydraulic cylinders . . . . .	78
2.3.1	Replacing the cylinder – reel up/down . . . . .	78
2.3.2	Replacing the cylinder – reel forward/back . . . . .	79
2.3.3	Reconditioning the hydraulic cylinders . . . . .	79
<b>3:</b>	<b>Main crop elevator . . . . .</b>	<b>85</b>
3.1	General . . . . .	87
3.2	Main crop elevator . . . . .	88
3.2.1	Removal . . . . .	88
3.2.2	Assembly . . . . .	89
3.2.3	Bearing block on machine frame . . . . .	90
3.2.4	Replacing the lifting ram . . . . .	90
3.2.5	Reconditioning the hydraulic cylinder . . . . .	91
3.2.6	Replacing the cutting height preset sensor . . . . .	92
3.3	Crop elevator chain . . . . .	93
3.3.1	Removal . . . . .	93
3.3.2	Assembly . . . . .	93
3.3.3	Replacing the slats . . . . .	94
3.3.4	Replacing the slide rails in the crop elevator . . . . .	94
3.3.5	Replacing the intermediate plate . . . . .	94
3.4	Elevator chain top shaft . . . . .	95
3.4.1	Removal . . . . .	95
3.4.2	Assembly . . . . .	95
3.4.3	Replacing the bearings . . . . .	96
3.4.4	Replacing sprockets . . . . .	97
3.4.5	Replacing the shaft protection tube . . . . .	98
3.5	Elevator chain front shaft . . . . .	99
3.5.1	Removal . . . . .	99
3.5.2	Assembly . . . . .	99
3.5.3	Replacing the shaft, bearings and plate wheels . . . . .	100
3.6	Elevator countershaft . . . . .	101
3.6.1	Removal . . . . .	101
3.6.2	Assembly . . . . .	102
3.6.3	Replacing the bearings and sprockets . . . . .	102
3.7	Table clutch and chain drive . . . . .	103
3.7.1	Removal . . . . .	103
3.7.2	Assembly . . . . .	103
3.7.3	Reconditioning the clutch . . . . .	103
3.8	Adapter . . . . .	104
3.8.1	Removal . . . . .	104
3.8.2	Assembly . . . . .	105
3.8.3	Replacing the cylinder/connecting rod . . . . .	105
3.8.4	Reconditioning the hydraulic cylinder . . . . .	106
3.8.5	Replacing the angle sensor . . . . .	107

# Contents

3.9	Hydraulic reversing .....	108
3.9.1	Removal .....	108
3.9.2	Assembly .....	108
<b>4:</b>	<b>Threshing unit.....</b>	<b>109</b>
4.1	General .....	111
4.2	Stone trap .....	112
4.2.1	Removal .....	112
4.2.2	Assembly .....	112
4.3	Concave .....	113
4.3.1	Removal .....	113
4.3.2	Assembly .....	113
4.3.3	Adjusting the concave laterally .....	114
4.3.4	Concave setting - initial setting .....	114
4.3.5	Replacing the actuator .....	115
4.3.6	Replacing the lead-in plate .....	115
4.3.7	Replacing the shaft for concave setting .....	116
4.4	Threshing cylinder .....	117
4.4.1	Removal .....	117
4.4.2	Assembly .....	118
4.4.3	Replacing the bearings .....	119
4.4.4	Replacing the rasp bars and backing bars .....	120
4.4.5	Replacing the shaft and cylinder spiders .....	120
4.5	Cylinder variator – table clutch .....	121
4.5.1	Removal, hydraulic variator .....	121
4.5.2	Assembly, hydraulic variator .....	121
4.5.3	Reconditioning the hydraulic variator pulley .....	122
4.5.4	Removal, mechanical variator .....	124
4.5.5	Assembly, mechanical variator .....	124
4.5.6	Reconditioning the mechanical variator pulley .....	125
4.5.7	Removal, magnetic clutch .....	126
4.5.8	Assembly, magnetic clutch .....	127
4.5.9	Reconditioning the magnetic clutch .....	128
4.6	Bracket for counter drive .....	130
4.6.1	Removal .....	130
4.6.2	Assembly and alignment .....	130
4.7	Rear beater .....	131
4.7.1	Removal .....	131
4.7.2	Assembly .....	132
4.7.3	Replacing the bearings .....	133
4.8	Rear beater concave .....	134
4.8.1	Removal .....	134
4.8.2	Assembly .....	134
4.9	Rotary separator cylinder .....	135
4.9.1	Removal .....	135
4.9.2	Assembly .....	136
4.9.3	Replacing the bearings .....	137
4.9.4	Replacing the rasp bars .....	137
4.10	Rotary separator concave .....	138
4.10.1	Removal .....	138
4.10.2	Assembly .....	139
4.10.3	Concave setting - initial setting .....	139
4.10.4	Replacing the shaft for concave setting .....	140
<b>5:</b>	<b>Straw walkers.....</b>	<b>141</b>
5.1	General .....	143
5.2	Straw walkers .....	144
5.2.1	Removal .....	144
5.2.2	Assembly .....	144

# Contents

---

5.3	Crank - front .....	145
5.3.1	Removal .....	145
5.3.2	Assembly .....	146
5.3.3	Replacing the bearings .....	146
5.4	Crank - rear .....	147
5.4.1	Removal .....	147
5.4.2	Assembly .....	147
5.4.3	Replacing the bearings .....	147
<b>6:</b>	<b>Shaker shoe - Fanning mill .....</b>	<b>149</b>
6.1	General .....	151
6.2	Fanning Mill .....	152
6.2.1	Removal .....	152
6.2.2	Assembly .....	153
6.2.3	Replacing the fan blades .....	154
6.2.4	Replacing the fanning mill deflectors .....	154
6.2.5	Replacing the seals .....	155
6.3	Main grain pan .....	156
6.3.1	Removal .....	156
6.3.2	Assembly .....	157
6.3.3	Replacing the swivel arm and bearings .....	157
6.3.4	Replacing the seals .....	158
6.4	Second grain pan .....	159
6.4.1	Removal .....	159
6.4.2	Assembly .....	159
6.4.3	Replacing the swivel arm and bearings .....	160
6.4.4	Adjusting second grain pan .....	161
6.5	Top shaker shoe .....	163
6.5.1	Removal .....	163
6.5.2	Assembly .....	164
6.5.3	Replacing the swivel arm and bearings .....	165
6.5.4	Replacing the seals .....	165
6.5.5	Replacing and calibrating the actuator - sieves .....	166
6.6	Bottom shaker shoe .....	167
6.6.1	Removal .....	167
6.6.2	Assembly .....	168
6.6.3	Replacing the swivel arm and bearings .....	168
6.6.4	Replacing the seals .....	169
6.6.5	Electric sieve setting – initial setting .....	169
6.7	Bottom augers .....	170
6.7.1	Removal .....	170
6.7.2	Assembly .....	170
6.8	Eccentric drive .....	171
6.8.1	Removal .....	171
6.8.2	Assembly .....	172
6.8.3	Adjusting the connecting rod / aligning the shaker shoes .....	173
6.8.4	Replacing the connecting rod bearing .....	174
6.8.5	Replacing the bearings and eccentric shaft .....	175
6.9	Transmissions .....	176
6.9.1	Replacing and reconditioning the fanning mill variator .....	176
6.9.2	Adjusting the fanning mill variator .....	177
6.9.3	Replacing and reconditioning the counter drive .....	178
<b>7:</b>	<b>Elevators .....</b>	<b>179</b>
7.1	Tank filling elevator .....	181
7.1.1	Removal .....	181
7.1.2	Assembly .....	182
7.1.3	Replacing the top shaft, bearings and sprockets .....	182
7.1.4	Replacing the bottom sprocket .....	183

# Contents

7.1.5	Replacing the elevator chain	183
7.1.6	Moisture sensor	184
7.1.7	Yieldmeter sensor	184
<b>7.2</b>	<b>Returns elevator</b>	<b>185</b>
7.2.1	Removal	185
7.2.2	Assembly	185
7.2.3	Replacing the top shaft, bearings and sprockets	186
7.2.4	Replacing the bottom sprocket	186
7.2.5	Replacing the elevator chain	186
7.2.6	Returns volume sensor	186
<b>7.3</b>	<b>Returns thresher</b>	<b>187</b>
7.3.1	Removal	187
7.3.2	Assembly	187
7.3.3	Replacing the sprockets	187
7.3.4	Replacing the threshing cylinder	187
7.3.5	Reconditioning the right-angle gear	188
<b>7.4</b>	<b>Tank filling auger</b>	<b>190</b>
7.4.1	Removal	190
7.4.2	Assembly	190
7.4.3	Replacing the top bearing	190
7.4.4	Reconditioning the right-angle gear	191
<b>7.5</b>	<b>Transmission</b>	<b>192</b>
7.5.1	Replacing the shaft, bearings and sprockets	192
<b>8:</b>	<b>Engine</b>	<b>193</b>
8.1	General	195
8.2	Replacing the engine	196
8.2.1	Removing the engine assembly	196
8.2.2	Fitting the engine assembly	199
<b>9:</b>	<b>Unloading auger - Grain tank</b>	<b>201</b>
9.1	Unloading auger - horizontal	203
9.1.1	Removal	203
9.1.2	Assembly	203
9.2	Unloading auger - vertical	204
9.2.1	Removal	204
9.2.2	Assembly	204
9.2.3	Reconditioning the right-angle gear	205
9.3	Unloading tube - horizontal	206
9.3.1	Removal	206
9.3.2	Assembly	206
9.4	Unloading tube - vertical	207
9.4.1	Removal	207
9.4.2	Assembly	207
9.4.3	Replacing the swivel bearing	208
9.4.4	Replacing the hydraulic cylinder	209
9.4.5	Reconditioning the hydraulic cylinder	210
9.5	Unloading tube elbow	211
9.5.1	Removal	211
9.5.2	Assembly	211
9.5.3	Reconditioning the right-angle gear	211
9.6	Bottom auger and cover plate	213
9.6.1	Removal	213
9.6.2	Assembly	213
9.6.3	Replacing the bearings, safety clutch	214
9.7	Transmission	215
9.7.1	Replacing the unloading auger shaft, bearings	215
9.7.2	Replacing and reconditioning the magnetic clutch	215



# Contents

---

9.8	Grain tank covers . . . . .	218
9.8.1	Removal . . . . .	218
9.8.2	Assembly . . . . .	218
<b>10:</b>	<b>Drive unit . . . . .</b>	<b>219</b>
10.1	Radiator - Intercooler . . . . .	221
10.1.1	Removal . . . . .	221
10.1.2	Assembly . . . . .	221
10.2	Oil cooler . . . . .	222
10.2.1	Removal . . . . .	222
10.2.2	Assembly . . . . .	222
10.3	Condenser – air conditioning . . . . .	223
10.3.1	Removal . . . . .	223
10.3.2	Assembly . . . . .	223
10.4	Rotary screen . . . . .	224
10.4.1	Removal . . . . .	224
10.4.2	Assembly . . . . .	225
10.4.3	Adjusting the rotary screen and cleaning blade . . . . .	226
10.4.4	Replacing the drive shaft and clutch . . . . .	227
10.5	Dust aspirator . . . . .	230
10.5.1	Removal . . . . .	230
10.5.2	Assembly . . . . .	230
10.6	Hydrostatic pump . . . . .	231
10.6.1	Removal . . . . .	231
10.6.2	Assembly . . . . .	232
10.6.3	Tensioning device . . . . .	233
10.7	Auxiliary hydraulic pump . . . . .	234
10.7.1	Removal . . . . .	234
10.7.2	Assembly . . . . .	234
10.8	Hydraulic oil tank . . . . .	235
10.8.1	Removal . . . . .	235
10.8.2	Assembly . . . . .	235
10.9	Fuel tank . . . . .	236
10.9.1	Removal . . . . .	236
10.9.2	Assembly . . . . .	236
10.9.3	Tank gauge . . . . .	236
10.10	Compressor – air conditioning . . . . .	237
10.10.1	Removal . . . . .	237
10.10.2	Assembly . . . . .	237
10.11	Power take-off . . . . .	238
10.11.1	Removal . . . . .	238
10.11.2	Assembly . . . . .	239
10.11.3	Replacing the clutch disc . . . . .	240
10.11.4	Replacing the output shaft, bearing and hub . . . . .	241
<b>11:</b>	<b>Transmissions . . . . .</b>	<b>243</b>
11.1	General . . . . .	245
11.2	Countershaft . . . . .	246
11.2.1	Removal . . . . .	246
11.2.2	Assembly . . . . .	247
11.2.3	Replacing the bearings . . . . .	248
11.2.4	Reconditioning the safety clutch . . . . .	248
11.3	Replacing the belts, right-hand side . . . . .	249
11.3.1	Rear beater - counter drive, cylinder variator . . . . .	249
11.3.2	Counter drive, variator - threshing cylinder . . . . .	250
11.3.3	Rear beater - rotary separator . . . . .	251
11.3.4	Fanning mill - fanning mill variator . . . . .	251
11.3.5	Rear beater - fanning mill variator . . . . .	252

# Contents

11.3.6	Unloading auger shaft - unloading auger	253
11.3.7	Unloading auger shaft - rotary screen clutch	254
11.3.8	Unloading auger shaft - dust aspirator	255
11.3.9	Countershaft - counter drive, elevators	256
<b>11.4</b>	<b>Replacing the chains, right-hand side</b>	<b>257</b>
11.4.1	Counter drive, elevators - returns elevator	257
11.4.2	Counter drive, elevators - tank filling elevator	257
11.4.3	Counter drive, elevators - tank filling auger	257
11.4.4	Returns elevator - returns thresher	258
11.4.5	Reel drive	258
<b>11.5</b>	<b>Replacing the belts, left-hand side</b>	<b>259</b>
11.5.1	Countershaft - rear beater	259
11.5.2	Countershaft - counter drive, straw chopper	259
11.5.3	Counter drive - straw chopper	260
11.5.4	Engine - countershaft	261
11.5.5	Rear beater - countershaft, shaker shoe drive	262
11.5.6	Countershaft, shaker shoe drive - eccentric shaft	263
11.5.7	Countershaft, shaker shoe drive - straw walker crank	263
11.5.8	Rear beater - elevator chain top shaft	264
11.5.9	Engine - unloading auger shaft	264
11.5.10	Engine - hydrostatic pump	265
11.5.11	PTO shaft – table countershaft	266
11.5.12	Table countershaft - knife drive	267
11.5.13	Countershaft - hydraulic pump, chaff spreader	267
<b>11.6</b>	<b>Replacing the chains, left-hand side</b>	<b>268</b>
11.6.1	Table countershaft - table auger	268
11.6.2	Elevator chain top shaft - elevator countershaft	268
11.6.3	Table auger - belt rollers (PowerFlow)	269
11.6.4	Hydraulic motor, reversing - elevator countershaft	270
11.6.5	Bottom auger – unloading auger	271
<b>12: Undercarriage</b>		<b>273</b>
<b>12.1</b>	<b>Auto Level final drive bracket</b>	<b>275</b>
12.1.1	Removal	275
12.1.2	Assembly	276
12.1.3	Replacing the bushing	278
12.1.4	Replacing the hydraulic cylinder	279
12.1.5	Reconditioning the hydraulic cylinder	280
12.1.6	Adjusting the AutoLevel potentiometer	281
<b>12.2</b>	<b>Final drives</b>	<b>282</b>
12.2.1	Removal	282
12.2.2	Assembly	282
12.2.3	Reconditioning the final drives	284
<b>12.3</b>	<b>Gearbox</b>	<b>287</b>
12.3.1	Removal	287
12.3.2	Assembly	288
12.3.3	Replacing the shifter cylinders and sensor	289
12.3.4	Adjusting the shifter cylinders and sensor	290
12.3.5	Replacing the lubrication pump	294
12.3.6	Replacing the shifter forks	295
12.3.7	Reconditioning the differential	296
12.3.8	Reconditioning the gearbox	300
<b>12.4</b>	<b>Hydrostatic motor</b>	<b>303</b>
12.4.1	Removal	303
12.4.2	Assembly	303
<b>12.5</b>	<b>Brakes</b>	<b>304</b>
12.5.1	Replacing the brake blocks	304
12.5.2	Replacing the brake discs	305
12.5.3	Bleeding the brakes	307
12.5.4	Brake pedals and main cylinder	308

# Contents

---

12.5.5	Replacing the handbrake shoes	311
12.5.6	Adjusting the hydraulic handbrake	312
<b>12.6</b>	<b>Rear axle</b>	<b>313</b>
12.6.1	General	313
12.6.2	Removal	313
12.6.3	Assembly	313
12.6.4	Replacing the king pins and bushings	314
12.6.5	Replacing the steering cylinder	315
12.6.6	Reconditioning the hydraulic cylinder	315
12.6.7	Adjusting the toe-in and steering deflection	316
<b>13:</b>	<b>Cab</b>	<b>319</b>
<b>13.1</b>	<b>Multi-function lever and control panel</b>	<b>320</b>
13.1.1	Control panel	320
13.1.2	Armrest	321
13.1.3	Multi-function lever	322
<b>13.2</b>	<b>Replacing the windscreen</b>	<b>324</b>
<b>13.3</b>	<b>Control panel in roof</b>	<b>325</b>
<b>13.4</b>	<b>Roof</b>	<b>326</b>
13.4.1	Outer roof	326
13.4.2	Inspection doors	326
13.4.3	Replacing the windscreen wiper	327
13.4.4	Replacing the blower	327
13.4.5	Replacing the heating element/tap	328
13.4.6	Replacing evaporator	328
<b>13.5</b>	<b>Troubleshooting – Climate control</b>	<b>329</b>
13.5.1	Climate control faults in general	329
13.5.2	ECS – Electronic control unit	329
13.5.3	Troubleshooting table	330
<b>14:</b>	<b>Hydraulics</b>	<b>333</b>
<b>14.1</b>	<b>General</b>	<b>335</b>
14.1.1	Emptying and filling the hydrostatic system	338
14.1.2	Running in and bleeding the hydrostatic system	340
14.1.3	Running in and bleeding the auxiliary hydraulics	340
<b>14.2</b>	<b>Hydrostatic system</b>	<b>343</b>
14.2.1	Hydraulic pump	343
14.2.2	Oil motor	343
14.2.3	Oil cooler	343
14.2.4	Hydraulic oil filter	345
<b>14.3</b>	<b>Gearshift</b>	<b>347</b>
14.3.1	Hydraulic cylinders - gearshift	347
14.3.2	Hydraulic valves - gearshift	347
<b>14.4</b>	<b>Hand brake</b>	<b>349</b>
14.4.1	Hydraulic valve - hand brake	349
14.4.2	Hydraulic cylinder - hand brake	349
<b>14.5</b>	<b>Auxiliary hydraulics</b>	<b>351</b>
14.5.1	Hydraulic pump	351
14.5.2	Hydraulic oil tank and return oil filter	351
14.5.3	Oil cooler	351
14.5.4	Hydraulic valve - main valve	353
<b>14.6</b>	<b>Cutting table</b>	<b>355</b>
14.6.1	Hydraulic cylinders - table up/down	355
14.6.2	Pressure accumulators - cutting table	355
14.6.3	Hydraulic valve - table up/down (standard machine)	355
14.6.4	Hydraulic valve - table up/down (Auto Level machine)	357
14.6.5	Hydraulic cylinder - table levelling	359
14.6.6	Pressure accumulators - levelling	359
14.6.7	Hydraulic valve – levelling	359

# Contents

<b>14.7</b>	<b>Auto Level</b> .....	<b>361</b>
14.7.1	Hydraulic cylinders - machine levelling .....	361
14.7.2	Hydraulic valve - machine up/down/levelling .....	363
<b>14.8</b>	<b>Reel</b> .....	<b>365</b>
14.8.1	Hydraulic cylinders - reel up/down .....	365
14.8.2	Hydraulic valve - reel up/down .....	365
14.8.3	Hydraulic cylinders - reel fore/aft .....	367
14.8.4	Hydraulic valve - reel fore/aft .....	367
14.8.5	Oil motor .....	369
14.8.6	Flow divider .....	369
14.8.7	Rape auger .....	369
<b>14.9</b>	<b>Steering</b> .....	<b>371</b>
14.9.1	Hydraulic cylinders - steering .....	371
14.9.2	Orbitrol steering valve .....	371
<b>14.10</b>	<b>Cylinder variator</b> .....	<b>373</b>
14.10.1	Cylinder variator .....	373
14.10.2	Hydraulic valve - variator .....	373
<b>14.11</b>	<b>Unloading auger</b> .....	<b>375</b>
14.11.1	Hydraulic cylinder - unloading auger .....	375
14.11.2	Hydraulic valve - unloading auger .....	375
<b>14.12</b>	<b>Reversing</b> .....	<b>377</b>
14.12.1	Oil motor .....	377
14.12.2	Hydraulic valve - reversing .....	377
<b>14.13</b>	<b>Chaff spreader</b> .....	<b>379</b>
14.13.1	Hydraulic pump .....	379
14.13.2	Oil motors .....	379
<b>14.14</b>	<b>Maxi Spreader</b> .....	<b>381</b>
14.14.1	Hydraulic pump .....	381
14.14.2	Solenoid valves .....	381
14.14.3	Hydraulic motor .....	381
<b>14.15</b>	<b>Troubleshooting - hydrostatic transmission</b> .....	<b>382</b>
14.15.1	Hydrostatic transmission faults in general .....	382
14.15.2	Pump and motor specifications .....	382
14.15.3	Functional diagram, HPV pump - HMF motor .....	384
14.15.4	Connecting test equipment .....	386
14.15.5	Troubleshooting table .....	387
14.15.6	Checking the charge pump .....	388
14.15.7	Checking the high pressure valves .....	388
14.15.8	Checking the high pressure valve .....	389
14.15.9	Checking the servo control .....	389
14.15.10	Checking the hydraulic pump .....	390
14.15.11	Checking the hydraulic motor .....	391
<b>15:</b>	<b>Machine housing</b> .....	<b>393</b>
15.1	General .....	395
<b>16:</b>	<b>Electrical system</b> .....	<b>397</b>
16.1	General .....	399
16.2	Description of FIELDSTAR .....	400
16.3	Electric box .....	401
16.3.1	Replacing the terminal .....	401
16.3.2	Replacing the job computers .....	401
16.4	Calibrations .....	404
16.4.1	Speed calibration .....	404
16.4.2	Calibrating the concave .....	405
16.4.3	Shaft alarm calibration .....	405
16.4.4	Calibrating the electrical sieves .....	405
16.4.5	Calibrating the electrical straw deflectors .....	406
16.4.6	Calibrating Auto Level Combine .....	407

# Contents

---

16.4.7	Table Calibration	407
16.5	Diagrams overview	409
16.6	Wiring diagrams	412
16.7	Diagrams - computer input/output	422
16.8	Connectors	425
16.9	W-connecting points	430
16.10	Components	431
16.11	Key to symbols	493
16.12	Wiring overview	494
<b>17:</b>	<b>Straw chopper</b>	<b>539</b>
17.1	General	540
17.1.1	Replacing and calibrating the electric actuator – straw deflectors	540
<b>18:</b>	<b>General assembly instructions</b>	<b>541</b>
18.1	Fitting gib-head keys	543
18.2	Fitting tightening pins	544
18.3	Fitting hydraulic pipes and screw connections	545
18.4	Fitting a flanged bearing with locking collar	547
18.5	Fitting sliding bushings	548
18.6	Removing the revolution sensor	549
18.7	Fitting tightening rings	550
<b>19:</b>	<b>Miscellaneous data</b>	<b>551</b>
19.1	General	553
19.2	Speeds - adjustment values	554
19.3	Maintenance	555
19.3.1	Lubrication chart	555
19.3.2	Lubrication points, left-hand machine side	562
19.3.3	Lubrication points, right-hand machine side	576
19.3.4	Recommended lubricants	588
19.3.5	Gear	589
19.3.6	Air Conditioning	590

Thank you so much for reading.  
Please click the “Buy Now!”  
button below to download the  
complete manual.



After you pay.

You can download the most  
perfect and complete manual in  
the world immediately.

Our support email:

[ebooklibonline@outlook.com](mailto:ebooklibonline@outlook.com)