

OPERATORS MANUAL

INTERNATIONAL

955

AND

1055

DIESEL TRACTORS

1091 316 R3

INTERNATIONAL HARVESTER COMPANY M.B.H., NEUSS, WEST GERMANY

11 / 79 (Reprinted U.K. 10 / 85)

TO THE OWNER

Operating safety and ready and efficient performance are the qualities required of any machine, if it is to fulfill its essential function of replacing manpower, and rationalizing economy.

Properly operated and maintained, your International machine will meet these requirements to your satisfaction.

Proper adjustment, sufficient lubrication, the use of good quality oil, and close observation of the machine in operation will safeguard you against unnecessary trouble.


The operating and maintenance instructions assembled in this book will provide you with a better understanding of the correct care and efficient operation of your machine.

For special servicing jobs on your machine rely on the expert knowledge of the servicemen, and the service facilities at your dealer's workshop.

Before attempting to operate the machine, be sure that you have studied the instructions in this book which we recommend you to keep at hand for checking over particular items.



**INTERNATIONAL
Diesel Tractors**

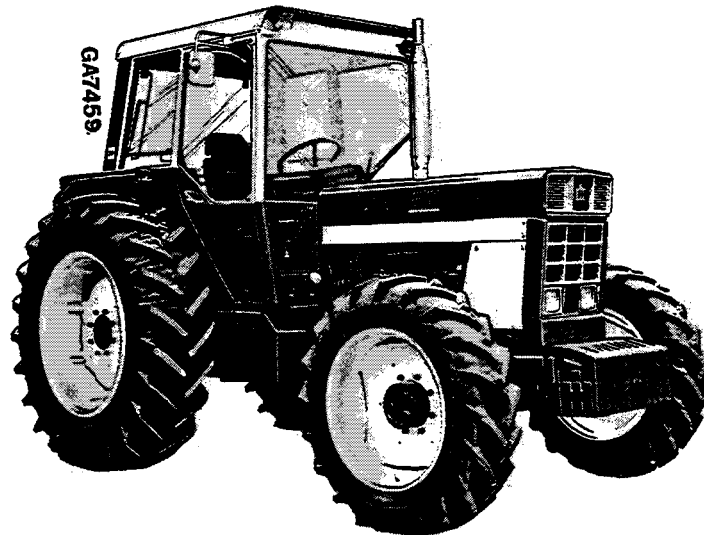

Right-side view



Left-side view

FOR THE ATTENTION OF DEALER SERVICE PERSONNEL:

**PRE-DELIVERY AND DELIVERY SERVICES,
TRACTOR DELIVERY AND WARRANTY REGISTRATION FORM**

PRE- DELIVERY SERVICE

Prior to delivery of the above tractor the following items are to be checked:

- | | | |
|---|--|--|
| <input type="checkbox"/> Shotage or damaged in shipment | <input type="checkbox"/> Rear axle oil level | <input type="checkbox"/> Torques of front and rear wheel nuts and bolts and clamping bolts, front axle extensions refer to "Special Torques" |
| <input type="checkbox"/> Attachments and special equipment as ordered | | |
| <input type="checkbox"/> Tyre pressure | <input type="checkbox"/> Engine cooling system (anti-freeze) | |
| | <input type="checkbox"/> Electrolyte level and charge condition of battery | |
| <input type="checkbox"/> Hydrostatic steering oil level | | |
| <input type="checkbox"/> Crankcase oil level | | |
| <input type="checkbox"/> Brake oil level | | |
| <input type="checkbox"/> Transmission and hydraulic system oil level | <input type="checkbox"/> Lighting equipment | <input type="checkbox"/> Air conditioning refrigerant level * |

DELIVERY SERVICE

At the time of delivery the importance of the Operator's Manual it is to be explained and, with it as a guide, instruction is to be given as indicated by check marks:

- | | | |
|---|--|--|
| <input type="checkbox"/> Precautions with new machine | <input type="checkbox"/> Purpose of turbo clutch warning light(* | <input type="checkbox"/> Brakes |
| <input type="checkbox"/> Safety precautions | <input type="checkbox"/> Cooling system | <input type="checkbox"/> Pneumatic tyres , pressure, wheel weights |
| <input type="checkbox"/> Use of good quality fuels and lubrication oils and storage of same | <input type="checkbox"/> V-belt tension | <input type="checkbox"/> Cold weather precautions |
| <input type="checkbox"/> Lubrication of entire machine according to service guide | <input type="checkbox"/> Fuel system | <input type="checkbox"/> Storing and housing the tractor |
| <input type="checkbox"/> Checking oil levels | <input type="checkbox"/> Hydraulic system | <input type="checkbox"/> Starting engine after storage |
| <input type="checkbox"/> Periodical oil changes | <input type="checkbox"/> Use of engine clutch, gearshift lever and pto shifter lever | <input type="checkbox"/> Retightening nuts and bolts |
| <input type="checkbox"/> Air cleaner | <input type="checkbox"/> Use of differential lock | <input type="checkbox"/> Cleaning the tractor |
| <input type="checkbox"/> Oil filter | <input type="checkbox"/> Electrical equipment | <input type="checkbox"/> Operation and maintenance of front loader (* |
| <input type="checkbox"/> Starting, stopping and general operation, instruments and controls | <input type="checkbox"/> Alternator, charge control, pre-heater coil, lights, fuses ect. | <input type="checkbox"/> Purpose of air conditioner warning light (* |
| <input type="checkbox"/> Purpose of thermostat | <input type="checkbox"/> Hitching loads | |
| <input type="checkbox"/> Purpose of instrument cluster | <input type="checkbox"/> Wheel tread adjustment | |

(* if so equipped)

Tractor Delivery and Warranty Claim Registration Form

The Machine Delivery and Warranty Claim Registration Form will be received by Dealers at approximately the same time as the Machine Invoice and will already show basic data. The Dealer is required to complete the Form with Registration, Ownership and Market Planning information. Completed top copies of the form are to be mailed to the I.H. address quoted on the form immediately after retail sale. No warranty is authorized or given by manufacturer otherwise.

**FOR THE ATTENTION OF THE TRACTOR OWNER
SERVICE**

Careful completion of the Delivery and Warranty Registration Form provides Customer and Dealer with valuable information for subsequent servicing of the tractor during the entire period of its life.

Contact your local I.H. Dealer frequently to discuss adjustment, maintenance or any service problem that might crop up.

A close contact with your Dealer can be beneficial, for the better you are kept informed on the latest service procedures and the more you take advantage of your Dealer's experience the higher will be your chances of enjoying the full benefits of your machine.

WARRANTY

Warranty contracts stipulate a strict inspection schedule. Dealer's are required to vouch with their signatures that inspections have been carried out in time.

	<i>Dealer</i>		<i>Customer</i>	
	<i>Date</i>	<i>Signature</i>	<i>Date</i>	<i>Signature</i>
1. Inspection				
2. Inspection				
3. Inspection				
Further inspections				

MAJOR SECTION CONTENTS



This Operator's Manual consists of the following major sections:

	page:
1. INTRODUCTION (Index, General Instructions, Safety Precautions)	6 – 9
2. TECHNICAL DATA (Capacities, Dimensions, Travelling Speeds, Recommended Lubricants)	10 – 14
3. PREPARING FOR EACH DAY'S WORK	15
4. INSTRUMENTS AND CONTROLS	16 – 22
5. OPERATING THE TRACTOR (Breaking-in Period, Starting and Stopping the Engine)	23 – 24
6. OPERATING ADJUSTMENTS (Weights, Tread Width)	25 – 29
7. OPERATING EQUIPMENT (PTO, Trailer Hitch, Drawbar, Three-point Suspension Hitch, Hydraulic Lift, Front Loader)	30 – 39
8. MAINTENANCE	40 – 69
9. STORING AND HOUSING	70
10. TROUBLE SHOOTING	71 – 74

Maintenance operations as described in this manual can, as a rule, be made by the operator himself

Caution: It is, however, strongly recommended to let your dealers serviceman take care of such operations as repair and adjustments on fuel injection system, brake system, hydraulic system, steering gear, drive shafts, electrical system and mounting of tires.



Safety rules are given for your protection, it pays to observe them.



INDEX

A	page	E	page
Accelerator pedal	19	Electrical equipment	64
Accidents, prevention	9	Engine breather filter	45
Adjusting belt tension	53	Engine clutch	59
Adjusting parking brake	61	Engine hood	44
Adjusting service brakes	61	Engine lubricant	14
Air cleaner	45	Engine oil filter	45
Air conditioner	62	Engine oil pressure	17
Air conditioning	21	Engine speed control	19
Air pressure gauge	21		
Alternator	64		
All-wheel drive	28, 58		
Anti-Freeze	26		
Auxilliary control valve	38		
		F	
B		Fast hitch	34
Battery	64	Feed pump	51
Brake adjustment	60	Filling tires	25
Brake oil	60	Filter element	46
Brake pedals	19	Float position	36
Brakes	60	Four-wheel drive	20, 58
Break-in period	23	Front wheel drive lever	20
Break-away coupling	38	Front drive axle	58
Bulbs	65	Front loader	38
		Front wheel bearings	63
		Frost precautions	26, 52
C		Fuel	15, 48
Capacities	10	Fuel additive	48
Changing fuel filters	50	Fuel filters	49
Changing hydraulic oil	56	Fuel gauge	15
Changing engine oil	45	Fuel injection pump	49
Changing oil in differential and wheel hubs	58	Fuel tank	49
Changing transmission oil	55	Fuses	65
Charge control lamp	17		
Checking belt tension	53	G	
Checking crankcase oil level	45	Gearshift lever	20
Checking transmission oil	55	General instructions and precautions	8
Clutch pedal	16, 59	Greasing	41, 43
Cold weather precautions	52	Ground speed pto	31
Control levers	17 - 20		
Control valves	38		
Coolant	51		
Cooling system	51		
Crankcase oil	15		
		H	
D		Hazard warning light	17
Differential lock	21	Head lamps	65
Directional signal lights	18	Hear indicator, sender	53
Draft control	35	Heating	21
Drawbar	32	Hitches	31
Dual clutch	59	Hitching plows	37
Dust unloader	48	Hydraulic controls	35
		Hydraulic fluid	56

Buy Now



Our support email:

ebooklibonline@outlook.com