



Service Repair Manual

Models

318B, 318B L and 318B LN
Excavator

Product: EXCAVATOR

Model: 318B EXCAVATOR ADC

Configuration: 318B L and 318B LN Excavators ADC00001-UP (MACHINE) POWERED BY 3046 Engine

Disassembly and Assembly 3046 Engine For Caterpillar Built Machines

Media Number -SEN6458-05

Publication Date -01/04/2004

Date Updated -22/04/2004

i01027796

Crankshaft Front Seal - Remove

SMCS - 1160-011

Removal Procedure

Table 1

Required Tools			
Tool	Part Number	Part Description	Qty
A	1U-7600	Slide Hammer Puller	1

Start By:

- A. Remove the vibration damper and the crankshaft pulley. Refer to Disassembly and Assembly, "Vibration Damper and Pulley - Remove and Install".

NOTICE

Keep all parts clean from contaminants.

Contaminants may cause rapid wear and shortened component life.

NOTICE

Care must be taken to ensure that fluids are contained during performance of inspection, maintenance, testing, adjusting and repair of the machine. Be prepared to collect the fluid with suitable containers before opening any compartment or disassembling any component containing fluids.

Refer to Special Publication, NENG2500, "Caterpillar Tools and Shop Products Guide", for tools and supplies suitable to collect and contain fluids in Caterpillar machines.

Dispose of all fluids according to local regulations and mandates.

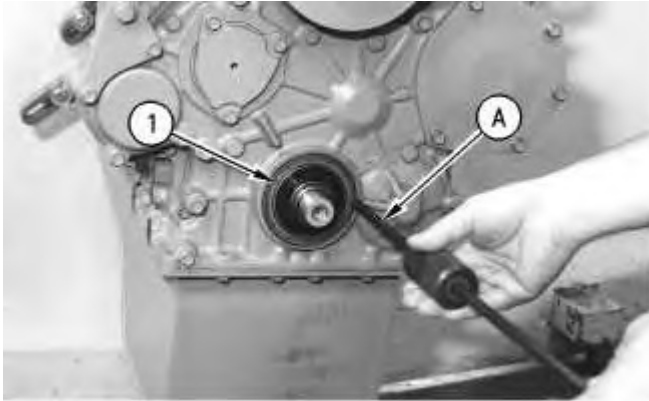


Illustration 1

g00529162

1. Drill three evenly spaced 3 mm (.12 inch) holes in crankshaft front seal (1) .
2. Use Tool (A) and remove crankshaft front seal (1) .

Product: EXCAVATOR

Model: 318B EXCAVATOR ADC

Configuration: 318B L and 318B LN Excavators ADC00001-UP (MACHINE) POWERED BY 3046 Engine

Disassembly and Assembly 3046 Engine For Caterpillar Built Machines

Media Number -SEN6458-05

Publication Date -01/04/2004

Date Updated -22/04/2004

i01027827

Crankshaft Front Seal - Install

SMCS - 1160-012

Installation Procedure

Table 1

Required Tools			
Tool	Part Number	Part Description	Qty
A	4C-6376	Seal Installer Stud	1
	4C-6377	Seal Installer Washer	1
	4C-6378	Seal Installer Sleeve	1

NOTICE

Keep all parts clean from contaminants.

Contaminants may cause rapid wear and shortened component life.

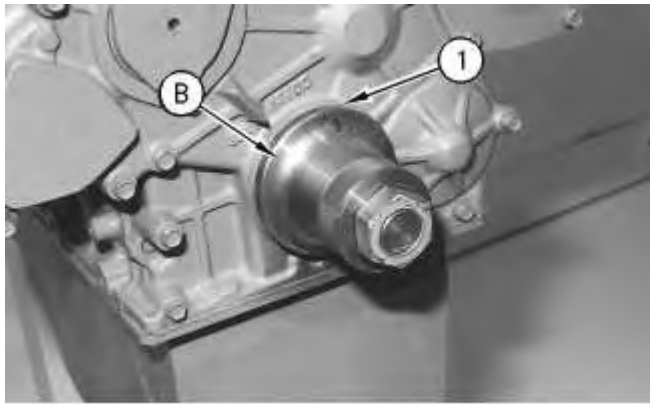


Illustration 1

g00529163

1. Clean the faces of all the mating parts. Apply a thin coat of clean engine oil to a new crankshaft front seal.
2. Install new crankshaft front seal (1) with Tool (A) .
3. Remove Tool (A) and check crankshaft front seal (1) for correct installation.
4. Apply clean engine oil to the face of the crankshaft pulley that will be in contact with the new crankshaft front seal.

End By: Install the vibration damper and the pulley. Refer to Disassembly and Assembly, "Vibration Damper and Pulley - Remove and Install".

Thank you so much for reading.
Please click the “Buy Now!”
button below to download the
complete manual.



After you pay.

You can download the most
perfect and complete manual in
the world immediately.

Our support email:

ebooklibonline@outlook.com