

**KOBELCO**

**SERVICE MANUAL**

Crawler Excavator

**SK55SRX Tier 4**

S5PS0001E01

Issued September 2011

APPLICABLE:

SK55SRX . . . . . PS02-00101 and higher ~

# HYDRAULIC EXCAVATOR

## SHOP MANUAL      model      **SK55SRX**

### INDEX

1	SPECIFICATIONS SECTION
2	MAINTENANCE SECTION
3	SYSTEM SECTION
4	DISASSEMBLY SECTION
5	TROUBLESHOOTING
6	ENGINE SECTION
7	PROCEDURE OF INSTALLING OPTIONS SECTION

MAINTENANCE SPECIFICATIONS

SYSTEM

DISASSEMBLING

TROUBLESHOOTING

E/G

OPT.

Book Code No. Distribution Year–Month			Title	Index No.
S5PA0105E01 2010-09		<b>SPECIFICATIONS</b>	OUTLINE	1
S5PS0201E01 2010-09			SPECIFICATIONS	2
S5PS0301E01 2010-09			ATTACHMENT DIMENSIONS	3
S5PJ1131E02 2010-09		<b>MAINTENANCE</b>	TOOLS	11
S5PS1201E01 2010-09			STANDARD MAINTENANCE TIME TABLE	12
S5PS1301E01 2010-09			MAINTENANCE STANDARD AND TEST PROCEDURE	13
—		<b>SYSTEM</b>		
S5PS2201E01 2010-09			HYDRAULIC SYSTEM	22
S5PS2301E01 2010-09			ELECTRIC SYSTEM	23
S5PS2401E01 2010-09			COMPONENTS SYSTEM	24
S5PS2501E01 2010-09			AIR-CONDITIONER SYSTEM	25
—		<b>DISASSEMBLING</b>		
S5PA3105E01 2010-09			GENERAL DISASSEMBLY & ASSEMBLY	31
S5PS3201E01 2010-09			ATTACHMENT	32
S5PS3301E01 2010-09			UPPER SLEWING STRUCTURE	33
S5PS3401E01 2010-09		TRAVEL SYSTEM	34	
—		<b>TROUBLESHOOTING</b>		
S5PS4201E01 2010-09			HYDRAULIC SYSTEM	42
S5PS4301E01 2010-09			ELECTRICAL SYSTEM	43
S5PW4431E02 2010-09		ENGINE	44	
S5PW5131E02 2010-09		<b>E/G</b>	ENGINE	51
—				
—				
—				
PS02-00101~			APPLICABLE MACHINES	

33 25 1

42 34 2

51 43 11 3

44 12

13

22

31 23

32 24

---

## NOTE:

This Manual is prepared as a technical material in which the information necessary for the maintenance and repairing services of our hydraulic excavators are collected, and is categorized into 7 Chapters, Specification, Maintenance, System, Disassembly, Troubleshooting, Engine, and Installation Procedures for Optional Attachment.

- The Chapter "Specification" describes the specifications for entire machine and material, which are instructive for replacement and repairing of attachments.
- The Chapter "Maintenance" describes the material, which is helpful for maintenance service and adjustments for entire machine.
- The Chapter "System" describes the operating system like hydraulic system, electric system, components, and so on.
- The Chapter "Disassembly" describes the removal and installing of assembly mounted on the upper structure and undercarriage, and the assembling and disassembling of the associated hydraulic equipment.
- The Chapter "Troubleshooting" describes how to find the fault equipment.
- The Chapter "Engine" describes the engines making use of the "Maintenance Manual" provided by the suppliers.
- The Chapter "Installation Procedures for Optional Attachment" describes the supplements added on request as required.

This Manual may be properly revised due to the improvement of products, modification of specifications, etc. And there are cases where the system on actual machine and a part of the contents of this manual may differ due to the variations of specification by countries. For the section in which the description is hardly understood, contact our distributor.

A number is assigned to every part handled in this Manual on account of the description, but the parts cannot be supplied as service parts. Therefore, the order must be placed with respective formal number with due confirmation on the Parts Manual for applicable machine.

# 1. OUTLINE

## TABLE OF CONTENTS

1.1	GENERAL PRECAUTIONS FOR REPAIRS .....	1-3
1.1.1	PREPARATION BEFORE DISASSEMBLING .....	1-3
1.1.2	SAFETY IN DISASSEMBLING AND ASSEMBLING .....	1-3
1.1.3	DISASSEMBLING AND ASSEMBLING HYDRAULIC EQUIPMENT .....	1-4
1.1.4	ELECTRICAL EQUIPMENT .....	1-6
1.1.5	HYDRAULIC PARTS .....	1-7
1.1.6	WELDING REPAIR .....	1-7
1.1.7	ENVIRONMENTAL MEASURE .....	1-7
1.2	INTERNATIONAL UNIT CONVERSION SYSTEM (Based on MARKS' STANDARD HANDBOOK FOR MECHANICAL ENGINEERS) .....	1-8

# 1. OUTLINE

Issue	Date of Issue	Applicable Machines	Remarks
First Edition	June, 2009	E10SR: PA03-05001~	S5PA0105E01 (NHK-EUR)
↑	March, 2010	CX27B: PV13-33292~	↑ (CASE-NA)
↑	↑	E27B: PV13-33292~	↑ (NH-NA)
↑	April, 2010	SK50SR-5: PJ06-09807~	↑ (KCM North America)
↑	↑	CX50B: PJ06-09807~	↑ (CASE-NA)
↑	↑	E50B: PJ06-09807~	↑ (NH-NA)
↑	↑	SK30SR-5: PW14-46519~ SK35SR-5: PX15-21105~	↑ (KCM S.E.ASIA&OCE)
↑	↑	CX31B: PW14-46519~ CX36B: PX15-21105~	↑ (CASE-AUS)
↑	↑	E30B: PW14-46519~ E35B: PX15-21105~	↑ (NH-AUS)
↑	↑	CX27B: PV13-33001~	↑ (CASE-Australia)
↑	↑	E27B: PV13-33001~	↑ (NH-AUS)
↑	May, 2010	SK40SR-5: PH07-06609~ SK50SR-5: PJ06-09807~	↑ (KCM S.E.ASIA&OCE)
↑	↑	E50B: PJ06-09807~	↑ (NH-AUS)
↑	↑	CX50B: PJ06-09807~	↑ (CASE-AUS)
↑	↑	SK27SR-5: PV13-33453~	↑ (NA)
↑	↑	CX27B: PV13-33453~	↑ (CASE-NA)
↑	↑	E27B: PV13-33453~	↑ (NH-NA)
↑	↑	SK20SR-5: PM10-10609~ SK27SR-5: PV13-33453~	↑ (KCM S.E.ASIA&OCE)
↑	↑	CX27B: PV13-33453~	↑ (CASE-Australia)
↑	↑	E27B: PV13-33453~	↑ (NH-AUS)
↑	September, 2010	SK55SRX: PS02-00101~	↑ (KCM North America)
↑	↑	CX55B: PS02-00101~	↑ (CASE-NA)
↑	↑	E55B: PS02-00101~	↑ (NH-NA)

## 1.1 GENERAL PRECAUTIONS FOR REPAIRS

### 1.1.1 PREPARATION BEFORE DISASSEMBLING



#### (1) Understanding operating procedure

Read OPERATOR'S MANUAL carefully to understand the operating procedure.

#### (2) Cleaning machines

Remove soil, mud, and dust from the machine before the machine enters the service shop to prevent loss of work efficiency, damage of parts, and difficulty in rust prevention and dust protection while reassembling.

#### (3) Inspecting machines

Identify the parts to be disassembled before starting work, determine the disassembling procedure and the workshop situations etc., and request procurement of necessary parts in advance.

#### (4) Recording

Record the following items for communication and prevention of recurring malfunctions.

1. Inspection date and place.
2. Model name, applicable machine number, and hour meter read.
3. Trouble condition, place and cause.
4. Visible oil leakage, water leakage and damage.
5. Clogging of filters, oil level, oil quality, oil contamination and loosening of connections.
6. Result of consideration if any problem exists based on the operation rate per month calculated from the hour meter indication after the last inspection date.

#### (5) Arrangement and cleaning in service shop

1. Tools required for repair work.
2. Prepare space to place the disassembled parts.
3. Prepare oil containers for draining oil etc.

### 1.1.2 SAFETY IN DISASSEMBLING AND ASSEMBLING



- (1) Wear appropriate clothes with long sleeves, safety shoes, safety helmet and protective glasses.
- (2) Suspend warning tag "DO NOT OPERATE" from the doorknob or the operating lever, and have a preliminary meeting before starting work.
- (3) Stop the engine before starting inspection and maintenance to prevent personal injury.
- (4) Identify the location of a first-aid kit and a fire extinguisher, and also where to make contact in an emergency.
- (5) Choose a hard, level and safe place, and place the attachment on the ground securely.
- (6) Use a hoist or crane to remove heavy parts (20 kg [45 lbs] or more) from the machine.
- (7) Use proper tools, and replace or repair defective tools.
- (8) Support the machine and attachment with supports or blocks if the work is performed with any section of the machine raised off the ground.

## 1. OUTLINE

---

### 1.1.3 DISASSEMBLING AND ASSEMBLING HYDRAULIC EQUIPMENT



#### (1) Removing Hydraulic Equipment

1. Before disconnecting pipes, release the hydraulic pressure of the system, or open the return side cover and take out the filter.
2. Carefully drain oil from the removed pipes into containers without spilling on the floor.
3. Apply plugs or caps on the pipe and fitting ends to avoid oil spillage and dust intrusion.
4. Clean off the external surface of the equipment before disassembling, and drain hydraulic and gear oil before placing it on the workbench.

#### (2) Disassembling Hydraulic Equipment

1. Do not disassemble, reassemble or modify the hydraulic equipment without the permission of the manufacturer. The manufacturer is not responsible for the performance and function of the machine components after modification.
2. When disassembling and reassembling for unavoidable reason, refer the work to qualified personnel who have the specific knowledge or completed the parts service training.
3. Provide matching marks to facilitate reassembling work.
4. Before starting the work, read the manual for the disassembling procedure, if it is provided, and decide whether the work can be performed by yourself.
5. Always use the special jigs and tools if they are specified.
6. If it is hard to remove a part according to the procedure, do not try it by force, investigate the cause.
7. Place the removed parts in order and attach tags for easier reassembling.
8. Note the location and quantity of parts when disassembling.

#### (3) Inspecting Parts

1. Ensure the disassembled parts are free from seizure, interference and uneven contact.
2. Measure and record the wear condition of parts and clearance.
3. If the problem is found in a part, repair or replace it with a new one.


#### (4) Reassembling Hydraulic Equipment

1. Turn ON the ventilation fan or open windows to maintain good ventilation before cleaning parts.
2. Perform rough and finish cleaning before assembling.
3. Remove washing oil by with pressurized air and apply clean hydraulic or gear oil for assembling.
4. Always replace the removed O-rings, backup rings and oil seals with new ones by applying grease in advance.
5. Remove dirt and moisture from and perform degreasing on the surfaces where liquid gaskets are applied.
6. Remove rust preventive agent from the new parts before use.
7. Fit bearings, bushings, and oil seals using special jigs.
8. Assemble the parts utilizing matching marks.
9. Ensure all the parts are completely assembled after the work.



**(5) Installing Hydraulic Equipment**

1. Ensure hydraulic oil and lubricant are properly supplied.
2. Perform air bleeding when:
  - a. Hydraulic oil is changed.
  - b. Parts of suction side piping is replaced.
  - c. Hydraulic pumps are installed.
  - d. Slewing motor is installed.
  - e. Travel motor is installed.
  - f. Hydraulic cylinder is installed.
3. Perform air bleeding of the hydraulic pump and slewing motor after loosening the upper drain plug, starting the engine and running the engine at low idle.  
Complete the air bleeding when seeping of hydraulic oil is recognized, and then tightly plug.
4. Perform air bleeding of the travel motor and the hydraulic cylinders by running the engine for more than 5 minutes at low speed without load.
5. Perform air bleeding of the pilot line by performing a series of digging, slewing and travel.
6. Check hydraulic oil level after placing the attachment to the oil check position, and replenish oil if necessary.

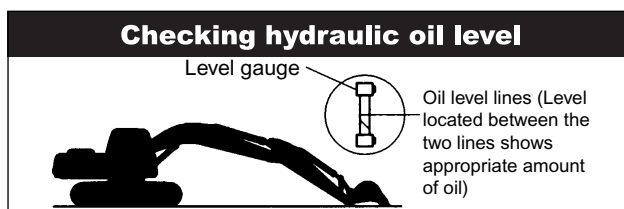**WARNING**

Operation of the hydraulic equipment without filling hydraulic oil or lubricant or without performing air bleeding will result in damage to the equipment.


**WARNING**

Do not allow the hydraulic cylinder to bottom out on the stroke end just after the maintenance.

## 1. OUTLINE

---

### 1.1.4 ELECTRICAL EQUIPMENT




- (1) Do not disassemble electrical equipment.
- (2) Handle electrical equipment carefully. Do not drop and/or shock electrical equipment.
- (3) Turn the key OFF prior to connecting and disconnecting work.
- (4) Disconnect the connector by holding it and pressing the lock. Do not pull the wire to apply force to the caulking portion.
- (5) Connect the connector and ensure it is completely locked.
- (6) Turn the key OFF prior to touching the terminal of the starter or generator.
- (7) Remove the ground (earth) terminal from the battery when handling tools around the battery or its relay.
- (8) Do not splash water on the electrical equipment and connectors during machine washing.
- (9) Check for moisture adhesion inside the waterproof connector after pulling it out, since it is hard to remove moisture from the connector.  
If moisture adhesion is found, dry it completely before the connection.



Battery electrolyte is hazardous.  
Battery electrolyte is dilute sulfuric acid. Exposure to skin or eyes from this liquid will cause burning or loss of eyesight.  
If the exposure occurs, take the following emergency measures and seek the advice of a medical specialist.  
When skin is exposed: Wash with water and soap sufficiently.  
When eyes are exposed: Immediately wash away with water continuously for more than 10 minutes.  
When a large amount of the liquid flows out: Neutralize with sodium bicarbonate or wash away with water.  
When swallowed: Drink a large amount of milk or water.  
When clothes are exposed: Immediately undress and wash.

### 1.1.5 HYDRAULIC PARTS



#### (1) O-ring

- Ensure O-rings have elasticity and are not damaged before use.
- Use the appropriate O-rings. O-rings are made of various kinds of materials having different hardness to apply to a variety of parts, such as the part for moving or fixed applications, subjected to high pressure, and exposed to corrosive fluid, even if the O-ring size is same.
- Fit the O-rings without distortion and bend.
- Always handle floating seals as a pair.

#### (2) Flexible Hose (F hose)

- Use the appropriate parts. Different parts are used depending on the working pressure even if the size of the fitting and the total length of the hose is same.
- Tighten the fitting at the specified torque.  
Ensure no kink, tension, interference or oil leakage is recognized.

### 1.1.6 WELDING REPAIR

- (1) Refer repair welding to qualified personnel according to the appropriate procedure.
- (2) Disconnect the ground (earth) cable of the battery before starting the repair.  
Failure to do so will cause damage to the electrical equipment.
- (3) Move away the articles in advance that may cause fire if exposed to sparks.
- (4) Before starting the repair of the attachment, do not fail to cover the plated surface of the piston rod with a flameproof sheet to prevent it from being exposed to sparks.

### 1.1.7 ENVIRONMENTAL MEASURE

- (1) Run the engine in a place that is sufficiently ventilated.
- (2) Industrial waste disposal  
Dispose of the following parts according to the relevant regulations:  
Waste oil and waste container  
Battery
- (3) Precautions for handling hydraulic oil  
Exposure of eyes to hydraulic oil will cause inflammation. Wear protective glasses before handling to avoid an accident. If an eye is exposed to the oil, take the following emergency measures:  
When an eye is exposed: Immediately wash away with city water sufficiently till stimulative feeling vanishes.  
When swallowed: Do not vomit, and receive medical treatment immediately.  
When skin is exposed: Wash with water and soap sufficiently.
- (4) Others  
Use replacement parts and lubricants authorized as the manufacturer's genuine parts.

# 1. OUTLINE

## 1.2 INTERNATIONAL UNIT CONVERSION SYSTEM (Based on MARKS' STANDARD HANDBOOK FOR MECHANICAL ENGINEERS)

### Introduction

Although this manual includes the International System of Units and Foot-Pound System of Units, if you need SI unit, refer to the following international system of units.


Given hereinafter is an excerpt of the units that are related to this manual.

#### 1. Etymology of SI Unites

French: Le Systeme International d' Unites

English: International System of Units

#### 2. Construction of SI Unit System

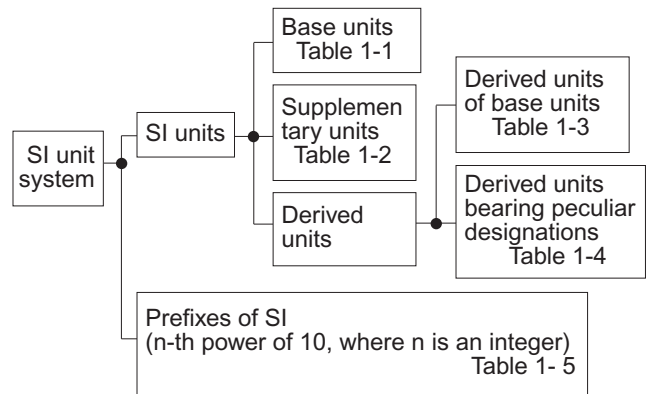

#### (1) Base units

Table 1-1

QUANTITY	UNIT	SYMBOL
Length	meter	m
Mass	kilogram	kg
Time	second	s
Electric current	ampere	A
Thermodynamic temperature	kelvin	K
Amount of substance	mol	mol
Luminous intensity	candela	cd

#### (2) Supplementary units

Table 1-2

QUANTITY	UNIT	SYMBOL
Plane angle	radian	rad
Solid angle	steradian	sr

#### (3) Derived Units

Table 1-3

QUANTITY	UNIT	SYMBOL
Area	square meter	m <sup>2</sup>
Volume	cubic meter	m <sup>3</sup>
Velocity	meter per second	m/s
Acceleration	meter per second squared	m/s <sup>2</sup>
Density	kilogram per cubic meter	kg/m <sup>3</sup>

#### (4) Derived Units bearing Peculiar Designations

Table 1-4

QUANTITY	UNIT	SYMBOL	FORMULA
Frequency	hertz	Hz	1/s
Force	newton	N	kg • m/s <sup>2</sup>
Pressure and Stress	pascal	Pa	N/m <sup>2</sup>
Energy, Work and Quantity of heat	joule	J	N•m
Power	watt	W	J/s
Quantity of electricity	coulomb	C	A•s
Electric potential difference, Voltage, and Electromotive force	volt	V	W/A
Quantity of static electricity and Electric capacitance	farad	F	C/V
Electric resistance	ohm	Ω	V/A
Celcius temperature	celcius degree or degree	°C	(t+273.15)K
Illuminance	lux	lx	l m/m <sup>2</sup>

## (5) Prefixes of SI

Table 1-5

PREFIX	SYMBOL	MULTIPLICATION FACTORS
giga	G	$10^9$
mega	M	$10^6$
kilo	k	$10^3$
hecto	h	$10^2$
deca	da	10
deci	d	$10^{-1}$
centi	c	$10^{-2}$
milli	m	$10^{-3}$
micro	$\mu$	$10^{-6}$
nano	n	$10^{-9}$
pico	p	$10^{-12}$

## (6) Unit Conversion

Table 1-6

QUANTITY	Gravitational	SI	CONVERSION FACTOR
Mass	kg	kg	
Force	kgf	N	1 kgf=9.807 N
Torque	kgf•m	N•m	kgf•m=9.807 N•m
Pressure	kgf/cm <sup>2</sup>	MPa	1 kgf/cm <sup>2</sup> =0.09807 MPa
Motive Power	PS	kW	1 PS=0.7355 kW
Revolution	rpm	min <sup>-1</sup>	r/min *1

\*1 Units that are allowed to use.



# 2. SPECIFICATIONS

## TABLE OF CONTENTS

- 2.1 COMPONENTS NAME .....2-3
- 2.2 MACHINE DIMENSIONS .....2-4
- 2.3 SPECIFICATIONS AND PERFORMANCE .....2-6
- 2.4 MACHINE & COMPONENTS WEIGHT (DRY) .....2-8
- 2.5 TRANSPORTATION .....2-10
- 2.6 TYPE OF CRAWLER SHOES .....2-13
- 2.7 TYPE OF BUCKET .....2-14
- 2.8 ENGINE SPECIFICATIONS .....2-15
  - 2.8.1 SPECIFICATIONS .....2-15
  - 2.8.2 ENGINE PERFORMANCE CURVE .....2-16

## 2. SPECIFICATIONS

---

Issue	Date of Issue	Applicable Machines	Remarks
First Edition	September, 2010	SK55SRX: PS02-00101~	S5PS0201E01 (KCM North America)



Thank you so much for reading.  
Please click the “Buy Now!”  
button below to download the  
complete manual.



After you pay.

You can download the most  
perfect and complete manual in  
the world immediately.

Our support email:

[ebooklibonline@outlook.com](mailto:ebooklibonline@outlook.com)