

K9_K4919_01_0-A-001


XL 150.4 T4I HI-LEVEL

Section: B0 - ENGINE

ENGINE

Ref: B0.00.1 (1)

Fig.	P/n	QTY	Name
Notes: [XL 150.4 T	4I HI-LEVEL]		
1	25009838	1	engine ON ORDERING PLEASE ENGINE NO. REQUIRED

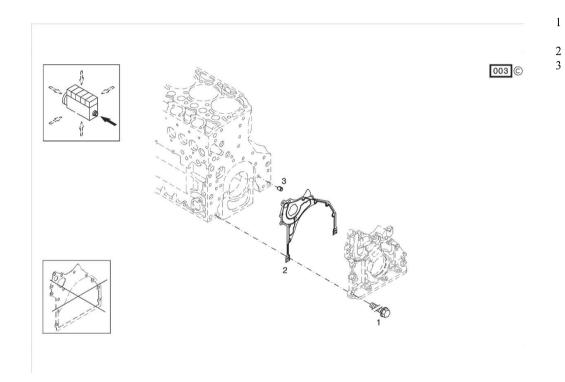

Section: B0 - ENGINE

FASTENINGS


Ref: B0.01.0

Fig.	P/n	QTY	Name
			/

Notes:

[XL 150.4 T4I HI-LEVEL]

01183645	12	screw EN 1662 -F-M8X35-10.9-ZNAL-A
04504325	1	gasket
01181406	1	bushing H 2341 -B11X8-FE/ZN12C*

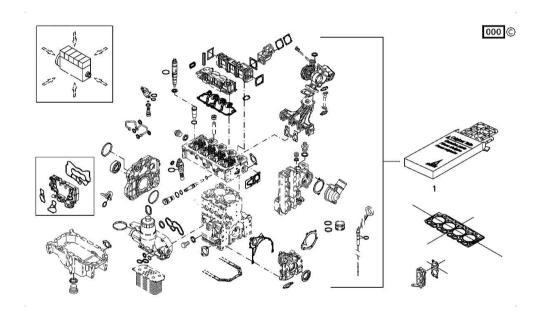

Section: B0 - ENGINE

SERIE GUARNIZIONI

Ref: B0.01.2

Fig.	P/n	QTY	Name
N			

Notes:

[XL 150.4 T4I HI-LEVEL]


Engine serial number: 22000507 22000508 22000573

02937845

gasket set

1

Il kit guarnizioni non contiene Il kit guarnizioni non contiene Il kit guarnizioni non contiene guarnizione, vedi SIT 0199-90-0403 II kit guarnizioni non contiene II kit guarnizioni non contiene Il kit guarnizioni non contiene Il kit guarnizioni non cont

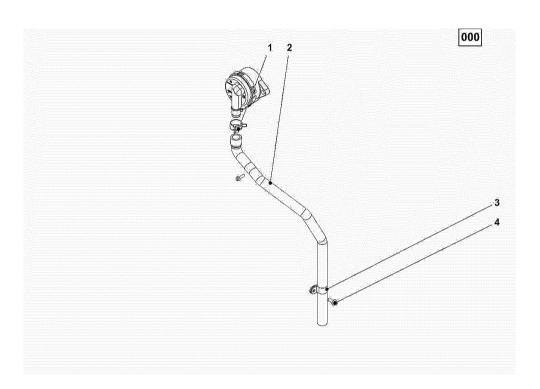

Section: B0 - ENGINE **BLEEDING TUBE**

Ref: B0.01.3

Fig.	P/n	QTY	Name

Notes:

[XL 150.4 T4I HI-LEVEL]

1	01178750	1	clamp DIN 3021 -A-29X15
2	04504657	1	tube
3	01173523	2	fascia DIN 3016 -1-A1-25X20-W1-2
4	01181433	1	screw 20 Nm EN 1662 -F-M8X20-LG2,5-10.9-ZNAL-A

Section: B0 - ENGINE Ref: B0.01.4


CRANKCASE BREATHER

Eig D/m OTV Name	
Fig. P/n QTY Name	

Notes:

[XL 150.4 T4I HI-LEVEL]

	1	01181442	1	screw m6x12
000				13 Nm
				EN 1662 -F-M6X12-10.9-ZNAL-A
	2	01181433	1	screw
				13 Nm
				EN 1662 -F-M8X20-LG2,5-10.9-ZNAL-A
	5	04298547	1	rubber plug
8	6	04905110	1	breather
				WITH POS (5)
52	7	01181432	2	screw m8x30
16				21 Nm
				EN 1662 -F-M8X30-10.9-ZNAL-A
7	8	04504866	1	tube
				WITH POS 11-13 20 Nm
18	11	02144961	2	fascia
	12	04291246	1	rubber tube
12				H 3407 -F8X14X72-EAM/ARAMID/EAM
13	13	01182878	1	fascia
				H 3461 -F-13,0/8
	14	01118737	1	oil seal 22 x 27
Congress of the second				DIN 7603 -A22X27-CU
	15	04505853	1	pipe union
				80 Nm
	16	04504828	1	support
	18	01182878	1	fascia
				H 3461 -F-13,0/8

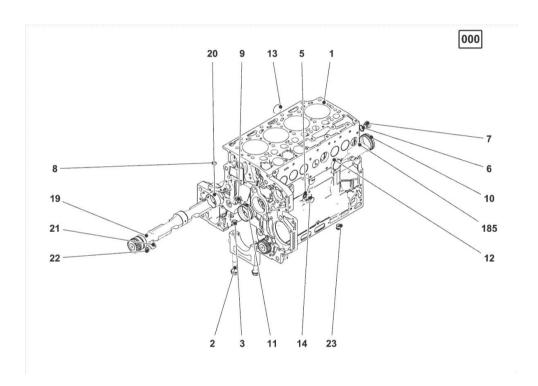

Ref: B0.01.5

Section: B0 - ENGINE

KURBELGEHAEUSE

Fig. P/n QTY Name

Notes:

[XL 150.4 T4I HI-LEVEL]

185	01319910	1	guard
1	04513899	1	crankcase
			MIT POS
			(2,3,5-14,19-24)
2	04254240	10	screw
			50 Nm , 90° , 90°
3	04160764	10	bushing
5	01148836	2	oil seal
			DIN 7603 -D14X20-CU-VERZINNT
6	01148863	1	rubber plug
			DIN 7603 -D22X27-CU-VERZINNT
7	04292706	1	plug
			80 Nm
8	01182031	2	screw
			35 Nm
			H 2812 -906-M14X1,5-ST-A3C-LOCTITE506
9	04226536	1	bottom
10	04507244	4	bushing
11	04507765	1	bushing
12	01148032	6	cover
			DIN 443 -A45-ZNPHR
13	01148031	4	plug
			DIN 443 -A36-ZNPHR
14	01100940	2	screw
			35 Nm
			DIN 7604 -AM14X1,5-ST-A4C
19	04298246	2	shaft
20	04252834	4	bush
21	04251810	2	plug
22	01181672	2	nut
			29 Nm
			H 2091 -4017-M8X16-10.9-GESCHW-MK-1.0
23	04255998	1	ring
24	04291215	1	tube

Section: B0 - ENGINE **ACCESSORIES**


XL 150.4 T4I HI-LEVEL


Ref: B0.01.8

Fig.	P/n	QTY	Name
Notes: [XL 150.4	4 T4I HI-LEVEL]		
	erial number: 22000508 22000573		
3	04288659	1	support
4	01148261	2	screw
			ISO 4017 -M16X40-10.9-ZNAL-A
5	01181400	2	washer

H 2308 -18X25X1,5-A4C



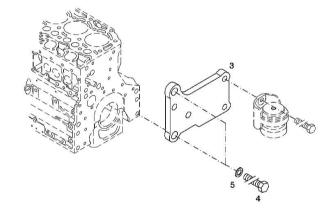

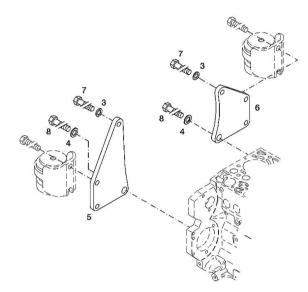


Section: B0 - ENGINE ACCESSODIES

Ref: B0.01.9

003 ©

Fig.	P/n	QTY	Name
Notes: [XL 150.4	T4I HI-LEVEL]		
	rial number: 22000508 22000573		
3	01182016	2	disc H 2308 -13X24X3-ZNAL-A
4	01181400	2	washer H 2308 -18X25X1,5-A4C
5	04206926	1	plate dx/rh/re
6	04206927	1	plate sx/lh/li
7	01148137	2	screw - UP TO MONTH OF ASSEMBLY (A) - FROM MONTH OF ASSEMBLY SEE POS. (B) A = 06.2009 B = POS. 950 DIN 931 -M12X75-10.9-ZNAL-A
8	01148037	2	screw UP TO MONTH OF ASSEMBLY (A) - FROM MONTH OF ASSEMBLY SEE POS. (B) A = 06.2009 B = POS. 951 ISO 4014 -M16X75-10.9-OELGESCHW
950	01149017	2	screw - FROM MONTH OF ASSEMBLY SEE POS. (B) - UP TO MONTH OF ASSEMBLY (A) FROM MONTH OF ASSEMBLY A = 07.2009 B = 7 DIN 34800 -BM12X75-10.9-ZNAL-A
951	01180235	2	screw - FROM MONTH OF ASSEMBLY SEE POS. (B) - UP TO MONTH OF ASSEMBLY (A) FROM MONTH OF

ASSEMBLY A = 07.2009 B= Pos.8 H 2032 -HBM16X75-10.9-GESCHW

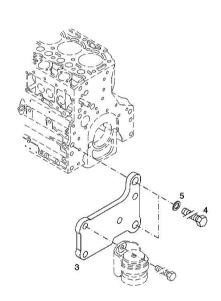

Section: B0 - ENGINE

ACCESSORIES

Ref: B0.01.10

Fig.	P/n	QTY	Name	
Notes:	I T4I HI-LEVEL]			
-	,			
_	rial number: 22000508 22000573			
3	04288660	1	support	
4	01148261	2	screw	
~	01101400	0	ISO 4017 -M16X40-10.9-ZNAL-A	
5	01181400	2	washer	

H 2308 -18X25X1,5-A4C

Section: B0 - ENGINE

OIL FILLER NECK

Ref: B0.01.11



Notes			


Notes:


[XL 150.4 T4I HI-LEVEL]

1	04207099	1	tube
2	01178421	1	gasket
3	01181433	2	screw
			30 Nm






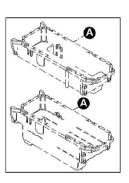

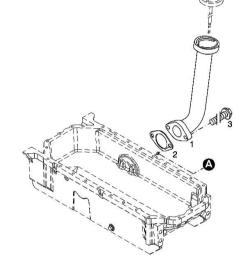



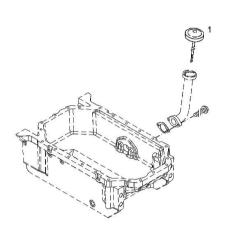

Section: B0 - ENGINE

FILLER CAP

Ref: B0.01.12

Fig.	P/n	QTY	Name
	'		/ '

Notes:

[XL 150.4 T4I HI-LEVEL]

Engine serial number: 22000507 22000508 22000573


01183278

1

plug H 2875 -B2-OL40-166X4-122X15





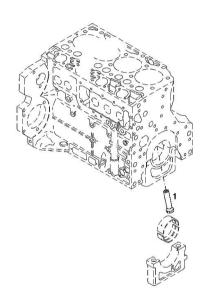

Section: B0 - ENGINE

PISTON COOL.NOZZLE

Ref: B0.01.14

Fig.	P/n	QTY	Name

Notes:

[XL 150.4 T4I HI-LEVEL]

Engine serial number: 22000507 22000508 22000573

04207521 sprayers




Section: B0 - ENGINE

FLANGE


000

Ref: B0.01.16

	Fig.	P/n	QTY	Name	
	Notes: [XL 150.4	T4I HI-LEVEL]			
	_	rial number: 22000508 22000573			
	1	04502446	1	oil pump WITH POS (2,3)	
ā.	2	04502202	1	special oil seal	
*	3	01133718	8	screw 8.5 Nm DIN 7991 -M6X16-8.8-A4C	

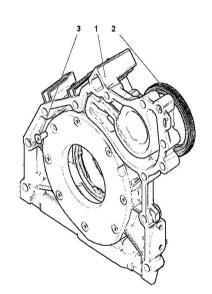



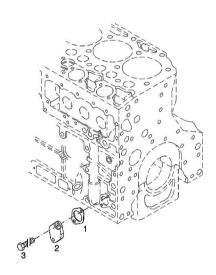

Section: B0 - ENGINE

COVER

000 ©

Ref: B0.01.17

Fig.	P/n	QTY	Name
Notes: [XL 150.4	T4I HI-LEVEL]		
_	rial number: 22000508 22000573		
1	01178421	1	gasket DIN 71511 -35X58X1,5-DEUTZFW31
2	04299461	1	flange
3	01148135	2	screw 30 Nm ISO 4017 -M8X20-10.9-ZNAL-A





Section: B0 - ENGINE

Ref: B0.02.0 (1)

V-BELT - FOR TRACTORS WITH AIR CONDITIONING

Fig.	P/n	QTY	Name	
Notes: [XL 150.4	T4I HI-LEVEL]			
27	2.4119.182.0	1	belt AV 13x1050 mm	

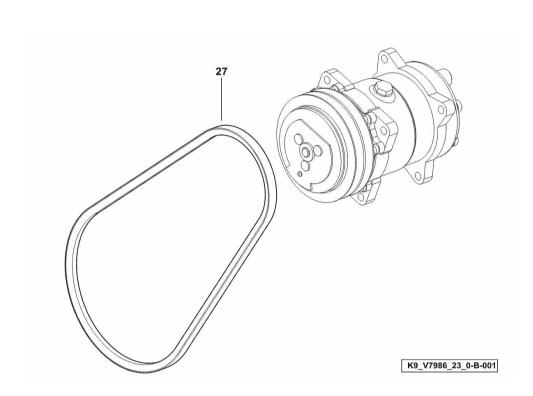

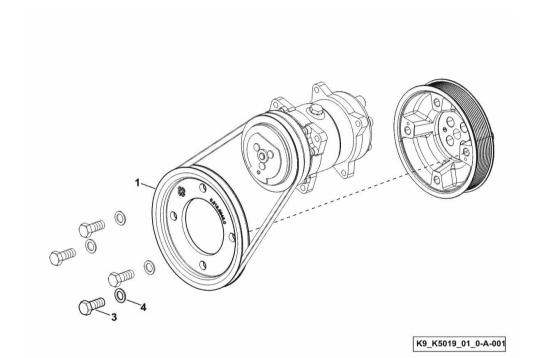


Section: B0 - ENGINE

Ref: B0.02.1 (1)

V-GROOVED PULLEY

Fig.	P/n	QTY	Name
Notes: [XL 150.4	T4I HI-LEVEL]		
1	0.018.5845.0	1	pulley
3	2.0112.513.2	4	screw m 14 p.2 x 35
4	2.1470.008.2	4	lock washer 14

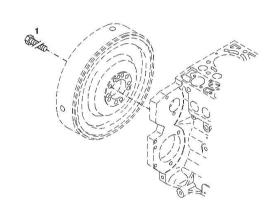

Section: B0 - ENGINE

FASTENINGS

Ref: B0.02.2

Fig.	P/n	QTY	Name
			/

Notes:

[XL 150.4 T4I HI-LEVEL]

Engine serial number: 22000507 22000508 22000573

04204128

10 screw m 10 p.1x35

M10X1X35



Thank you so much for reading.

Please click the "Buy Now!"

button below to download the complete manual.



After you pay.

You can download the most perfect and complete manual in the world immediately.

Our support email: ebooklibonline@outlook.com