

COMPUTER TRAK™ 100, 200, AND 300 PLANTER MONITORS



OPERATORS MANUAL

COMPUTER TRAK™ 100, 200, AND 300
PLANTER MONITORS

OMH135039 K6 English

JOHN DEERE HARVESTER WORKS OMH135039 K6

> LITHO IN THE U.S.A. ENGLISH



Contents

	Pá	age
Checklists		1
Safety Signs		3
Safety		4
Identification Views		5
Attaching and Detaching		_
Attaching to Tractor		
Operating the Monitor		_
COMPUTER TRAK 100 Monitor		11 25
Troubleshooting		40
Service		43
Crime Prevention Tips		47
Assembly Power Module	,	49 49 52 55
200 and 300 Monitors Two Wheel Drive Tractors		57 59 60 61 62 64
Small and Large Seed Tubes Low-Rate Milo/Sugar Beet Seed Tubes		64 68 69
Specifications Record Serial Number		71

Safety Signs

FOLLOW SAFETY INSTRUCTIONS

Carefully read all safety messages in this manual and on your machine safety signs. Follow recommended precautions and safe operating practices.

Keep safety signs in good condition. Replace missing or damaged safety signs.



AB6;TS188 053;SIGNS 071085

UNDERSTAND SIGNAL WORDS

A signal word—DANGER, WARNING, or CAUTION—is used with the safety-alert symbol. DANGER identifies the most serious hazards.

Safety signs with signal word DANGER or WARNING are typically near specific hazards.


General precautions are listed on CAUTION safety signs. CAUTION also calls attention to safety messages in this manual.

A DANGER

AWARNING ACAUTION

AB6;TS187 053;SIGNAL 071085

SAFETY SIGNS

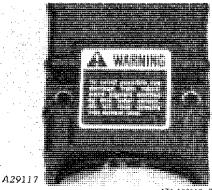

Radar Sensor

ATI;A29117 B05;;15SS A. 070886

PREVENT MACHINE RUNAWAY



Power Cable

A 32665

045;A32665 B05;;15\$\$ B. 031286

Safety

ELECTRICAL CONNECTIONS

Keep all sparks and flames away from battery, as gas given off by electrolyte is explosive. To avoid sparks, connect ground cable last and disconnect it first.

B05;;15SA A. 150886

DO NOT MODIFY THE MONITOR OR RADAR SENSOR

Unauthorized modifications to the machine may impair the function and/or safety and affect machine life.

B05;;15\$A B. 150886

PREVENT MACHINE RUNAWAY


Avoid possible injury or death from a tractor runaway.

Do not connect to starter terminals. Doing so can cause tractor to start in gear and move.

Connect directly to tractor battery only.

B05;;15SA C. 031286

Identification Views

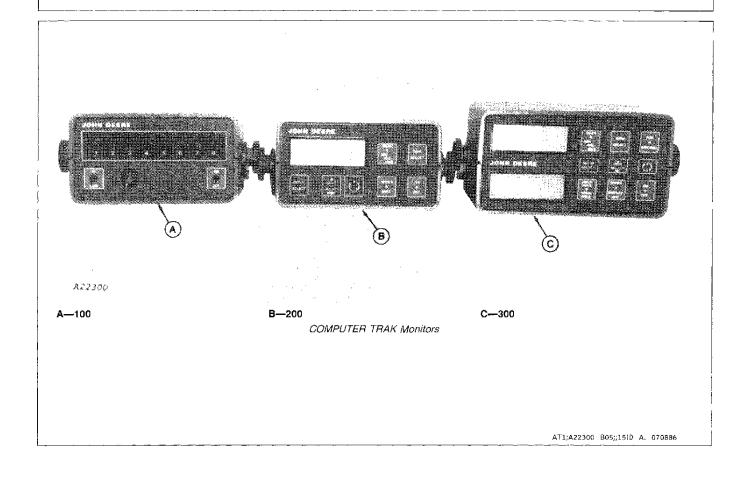


Attaching and Detaching

ATTACHING TO TRACTOR

Remove dust covers.


Line up grooves and tabs between connectors. Carefully push planter monitor harness connector onto power module connector and turn collar clockwise.

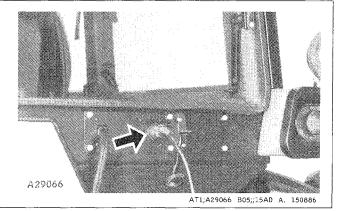


DETACHING FROM TRACTOR

(Not Illustrated) Turn collar counterclockwise. Pull connector straight back.

Secure dust cover onto power module connector.

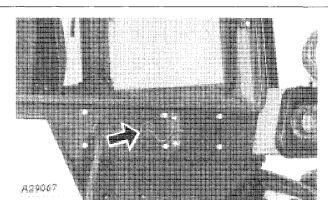

Secure dust cover onto planter harness connector.

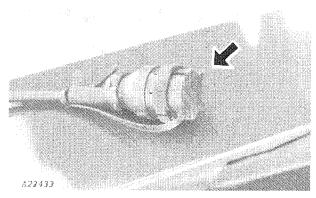


AT1;A29067 A22433 B05;;15AD B. 070886

Operating the Monitor

COMPUTER TRAK 100 MONITOR

NOTE: One monitor console is used for 10- and 12-row applications and another monitor console for 4-, 6- and 8-row applications.

The consoles come set up for either 8- or 12-row use. If a 4-, 6- or 10-row console is desired, remove the bezel.

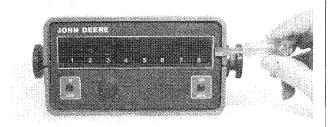


A22239

8-Row Console

NOTE: Push and twist lamps counterclockwise for removal.

Remove number 11 and 12 lamps for a 10-row monitor.

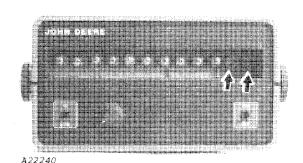

10-Row Console

AT1;A22239 A22240 B05;;150I A. 150886

Thank you so much for reading. Please click the "Buy Now!" button below to download the complete manual.



After you pay.

You can download the most perfect and complete manual in the world immediately.

Our support email: ebooklibonline@outlook.com