



---

# Shop Manual

## DX340LC-3/DX350LC-3 Excavator

---

Serial Number 1001 and Up  
Serial Number 10001 and Up (Europe Only)

DOOSAN and the DOOSAN logo are registered trademarks of DOOSAN Corporation in the United States and various other countries around the world.



950106-00225E

February 2012

# Table of Contents

## Safety

Track Excavator Maintenance Safety .....	SP002322
--	----------

## Specifications

Specification for DX340LC-3/DX350LC-3.....	SP002408
--	----------

## General Maintenance

General Maintenance Instructions.....	SP002454
Standard Torques.....	SP002404

## Upper Structure

Cabin .....	SP002324
Counterweight.....	SP002409
Fuel Tank.....	SP002410
Fuel Transfer Pump (Option) .....	SP002394
Swing Bearing.....	SP002329

## Lower Structure and Chassis

Track Assembly .....	SP002330
----------------------	----------

## Engine and Drivetrain

Engine Coolant Heater (Option) .....	SP002328
Drive Coupling (Main Pump).....	SP002411

## Hydraulics

Hydraulic System Troubleshooting, Testing and Adjustment .....	SP002412
Accumulator.....	SP002455
Center Joint (Swivel).....	SP002545
Cylinders.....	SP002422

Swing Device .....	SP002413
Travel Device .....	SP002414
Main Pump.....	SP002415
Gear Pump (Option) .....	SP002457
Fan Motor for Oil Cooler .....	SP002552
Fan Pump .....	SP002553
Main Control Valve .....	SP002416
PRV (Peak Reducing Valve).....	SP002459
Sensor Block.....	SP002460
Remote Control Valve (Work Lever / Joystick) .....	SP002450
Travel Control Valve (with Damper).....	SP002381
Solenoid Valve Assembly .....	SP002406
Breaker EPPR Valve (Option) .....	SP002458
Hydraulic Schematic .....	SP002417

## **Electrical System**

Electrical System .....	SP002418
Electrical Schematic .....	SP002419

## **Attachments**

Boom and Arm.....	SP002420
Bucket.....	SP002421

# Track Excavator Maintenance Safety

Edition 2

# SAFETY INSTRUCTIONS

---



## WARNING

---

### AVOID DEATH OR SERIOUS INJURY

Instructions are necessary before operating or servicing machine. Read and understand the Operation and Maintenance Manual and signs (decals) on machine. Follow warnings and instructions in the manuals when making repairs, adjustments or servicing. Check for correct function after adjustments repairs or service. Untrained operators and failure to follow instructions can cause death or serious injury.

---

## APPLICABLE MODELS

The contents of this section apply to the following models and serial number ranges.

MODEL	SERIAL NUMBER RANGE
DX140LC-3	1001 and Up, 50001 and Up
DX180LC-3	1001 and Up, 50001 and Up
DX225LC-3	1001 and Up, 50001 and Up
DX255LC-3	1001 and Up, 50001 and Up
DX300LC-3	1001 and Up, 50001 and Up
DX340LC-3	1001 and Up, 10001 and Up
DX350LC-3	1001 and Up, 10001 and Up
DX380LC-3	10001 and Up
DX420LC-3	10001 and Up
DX490LC-3	10001 and Up
DX530LC-3	10001 and Up

# SAFETY MESSAGES

Safety messages and safety decals included in this manual and on the machine provide instructions how to operate, service and maintain the machine. Safety messages and safety decals indicate potential hazards and describe safety precautions required to avoid hazards. Operator and maintenance personnel should read and understand these safety messages and decals before beginning operation or maintenance.

---

## SAFETY ALERT SYMBOL

---

**Be Prepared - Get to Know All Operating and Safety Instructions.**

**This is a Safety Alert Symbol. Wherever it appears in this manual or on safety decals on the machine, you should be alert to the potential for personal injury or accidents.**

**Always observe safety precautions and follow recommended procedures.**

---

## Signal Words

The signal words "DANGER", "WARNING", "CAUTION" are used throughout safety messages and safety decals in this manual or on the machine. They indicate an existence of, and the relative seriousness of, a hazard. All three indicate that a safety risk is involved. Observe the precautions indicated whenever a Safety Alert Symbol is present, no matter which signal word appears next to it.

---

## DANGER

---

**DANGER - This signal word is used on safety messages and safety labels and indicates an imminently hazardous situation which, if not avoided, will result in death or serious injury.**

---

## WARNING

---

**WARNING - This signal word is used on safety messages and safety labels and indicates a potentially hazardous situation which, if not avoided, could result in death or serious injury.**

---

## CAUTION

---

**CAUTION - This signal word is used on safety messages and safety labels and indicates a potentially hazardous situation which, if not avoided, could result in minor or moderate injury.**

---

# SAFETY DECALS

Location of safety labels (decals) can vary from unit to unit.

Refer to appropriate Operation and Maintenance Manual, and parts manual for your unit.

Always replace damaged or faded decals.

## GENERAL

### Safe Operation is Operator's Responsibility

Only trained and authorized personnel should operate and maintain the machine.

Follow all safety rules, regulations and instructions when operating or performing maintenance on machine.

- Do not operate machine if you are under the influence of drugs or alcohol. An operator who is taking prescription drugs must get medical advice to determine if he or she can safely operate a machine.
- When working with other personnel on a worksite, be sure that all personnel know nature of work and understand all hand signals that are to be used.
- Be sure that all guards and shields are installed in their proper location. Have guards and shields repaired or replaced immediately if damaged.
- Be sure that you understand the use and maintenance of all safety features such as safety lock lever and seat belt. Use them properly.
- Never remove, modify or disable any safety features. Always keep them in good operating condition.
- Always check for and know the location of underground and overhead utility lines before excavating.
- Failure to use and maintain safety features according to instructions in this manual, Safety Manual and Shop Manual can result in death or serious injury.

### Know Your Machine

Know how to operate your machine. Know the purpose of all controls, gauges, signals, indicators and monitor displays. Know the rated load capacity, speed range, braking and steering characteristics, turning radius and operating clearances. Keep in mind that rain, snow, ice, loose gravel, soft ground, slopes etc., can change operating capabilities of your machine.

# Track Assembly

Edition 2



# SAFETY INSTRUCTIONS

---



## WARNING

---

### AVOID DEATH OR SERIOUS INJURY

Instructions are necessary before operating or servicing machine. Read and understand the Operation and Maintenance Manual and signs (decals) on machine. Follow warnings and instructions in the manuals when making repairs, adjustments or servicing. Check for correct function after adjustments repairs or service. Untrained operators and failure to follow instructions can cause death or serious injury.

---

## APPLICABLE MODELS

The contents of this section apply to the following models and serial number ranges.

MODEL	SERIAL NUMBER RANGE
DX300LC-3	1001 and Up, 10001 and Up
DX340LC-3	1001 and Up, 10001 and Up
DX350LC-3	1001 and Up, 10001 and Up

# GENERAL DESCRIPTION

The track assembly is composed of the following major components:

1. Track
2. Front Idler Roller
3. Upper Roller
4. Lower Roller
5. Track Spring and Track Adjustment Cylinder

# TRACK TENSION



## WARNING

### AVOID DEATH OR SERIOUS INJURY


Measuring track tension requires two people. One person must be in the operator's seat, operating the controls while the other person makes dimensional checks. Block frame to make sure the machine won't move or shift position during service. Warm up the engine to prevent stalls, park the excavator in an area that provides level, uniform ground support and/or use support blocks when necessary.

The track adjusting mechanism is under very high-pressure. NEVER release grease pressure too fast. The track tension grease valve should never be loosened more than one (1) complete turn from the fully tightened down position. Bleed off grease pressure slowly. Keep your body away from the valve at all times. Always wear eye and face protection when adjusting track tension.

Track shoe link pins and bushings wear with normal usage, reducing track tension. Periodic adjustment is necessary to compensate for wear and it may also be required by working conditions.

1. Track tension is checked by jacking up one side of the excavator. See Figure 1. Place blocking under frame while taking measurement.

Turn the track backward by 1 - 2 turns.

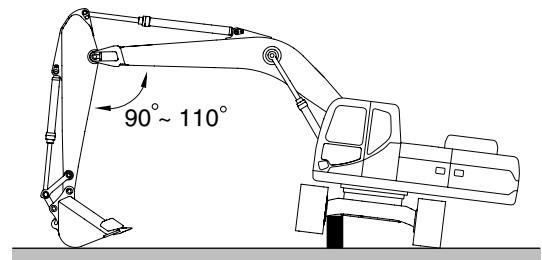


FG018383

Figure 1

2. Measuring the distance (A, Figure 2) between the bottom of the side frame and the top of the lowest crawler shoe. Recommended tension for operation over most types of terrain is distance "B" in below table.

**NOTE:** Clean off the tracks before checking clearance for accurate measurements.

3. Too little sag in the crawler track (less than clearance distance "B" in below table) can cause excessive component wear. The recommended adjustment can also be too tight causing accelerated stress and wear if ground conditions are wet, marshy or muddy.

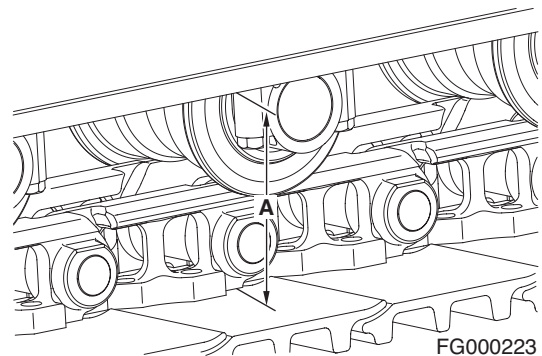

FG000223

Figure 2

4. The increased clearance recommended for muddy, sandy or snowy ground conditions is between distance "C" in below table.

Terrain Type	Recommended Distance "A"
Normal "B"	320 - 340 mm (12.60 - 13.39 in)
Muddy, Sandy or Snowy "C"	340 - 370 mm (13.39 - 14.57 in)



## WARNING

### AVOID DEATH OR SERIOUS INJURY

The track adjusting mechanism is under very high-pressure. **NEVER** release grease pressure too fast. The track tension grease valve should never be loosened more than one (1) complete turn from the fully tightened down position. Bleed off grease pressure slowly. Keep your body away from the valve at all times. Always wear eye and face protection when adjusting track tension.

5. Track tension adjustments are made through the grease fitting (1, Figure 3) in the middle of each side frame. Adding grease increases the length of an adjustment cylinder (2). Extending the adjustment cylinder, increases the pressure on the tension spring pushing the track idler wheel outward.
6. If there is not enough slack or clearance in the tracks and the adjustment is too tight, the idler wheel and adjusting cylinder can be retracted by bleeding off grease through hole in adjustment cylinder (2, Figure 3).

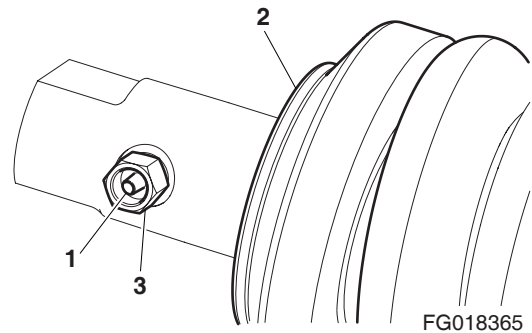


Figure 3

# CLEANING AND INSPECTION (WEAR LIMITS AND TOLERANCES)

---



## CAUTION

---

### AVOID INJURY

Refer to the "Welding Precautions and Guidelines" information in "General Maintenance Procedures" section for general recommendations and specific safety precautions, before starting any lower travel frame component rebuilding procedure.

---

The tables that follow provide factory specified dimensional limits (as new condition, recommended service and replacement limit) for lower travel frame components.

Recommended maintenance to replace most listed components requires welding on additional material and grinding off excess. Some components must be replaced before the service limit is exceeded. No maintenance or renewal is possible.

Compare the values in the tables with dimensions and profiles shown in the adjacent figures.

**Buy Now**



Our support email:

[ebooklibonline@outlook.com](mailto:ebooklibonline@outlook.com)