

VM RANGE - TIER II

Service Manual - VM RANGE - TIER II

[Section 1 - General Information](#)

[Section 2 - Care and Safety](#)

[Section 3 - Maintenance](#)

[Section B - Body and Framework](#)

[Section C - Electrics](#)

[Section E - Hydraulics](#)

[Section H - Steering](#)

[Section K - Engine](#)

[Section L - Vibration](#)



Publication No.
9803/9500-4



Copyright © 2004 JCB SERVICE. All rights reserved. No part of this publication may be reproduced, stored in a retrieval system, or transmitted in any form or by any other means, electronic, mechanical, photocopying or otherwise, without prior permission from JCB SERVICE.

Issued by JCB Technical Publications, JCB Aftermarket Training, Woodseat, Rocester, Staffordshire, ST14 5BW, England. Tel +44 1889 591300 Fax +44 1889 591400

World Class
Customer Support



Section 1 - General Information

Notes:



Section 1 - General Information

Contents	Page No.
Introduction	
About this Manual	1-1
Machine Model and Serial Number	1-1
Using the Service Manual	1-1
Section Numbering	1-1
Left Side, Right Side	1-1
Cross References	1-2
Identifying Your Machine	1-3
Machine Identification Plate	1-3
Component Identification Plates	1-4
Service Consumables	
Sealing and Retaining Compounds	1-5
Service Tools	
Numerical List	1-7
Tool Detail Reference	1-9
Section B - Body and Framework	1-9
Section C - Electrics	1-13
Section E - Hydraulics	1-14
Torque Settings	
Zinc Plated Fasteners and Dacromet Fasteners	1-19
Introduction	1-19
Bolts and Screws	1-19
Vibromax Specific Torque Settings	1-23
Hydraulic Connections	1-25
'O' Ring Face Seal System	1-25
'Torque Stop' Hose System	1-28



Section 1 - General Information

Contents

Page No.

Introduction

About this Manual

Machine Model and Serial Number

This manual provides information for the following model(s) in the JCB machine range:

- VM46D/PD from SN 1800000
- VM75D/PD from SN 1800000
- VM 115D/PD from SN 1800000
- VM 115H from SN 1800000
- VM 132D/PD from SN 1800000
- VM 146D/PD from SN 1800000
- VM 166D/PD from SN 1800000
- VM 200D/PD from SN 1800000

Using the Service Manual

This publication is designed for the benefit of JCB Distributor Service Engineers who are receiving, or have received, training by JCB Technical Training Department.

These personnel should have a sound knowledge of workshop practice, safety procedures, and general techniques associated with the maintenance and repair of hydraulic earthmoving equipment.

The illustrations in this publication are for guidance only. Where the machines differ, the text and/or the illustration will specify.

General warnings in Section 2 are repeated throughout the manual, as well as specific warnings. Read all safety statements regularly, so you do not forget them.

Renewal of oil seals, gaskets, etc., and any component showing obvious signs of wear or damage is expected as a matter of course. It is expected that components will be cleaned and lubricated where appropriate, and that any opened hose or pipe connections will be blanked to prevent excessive loss of hydraulic fluid and ingress of dirt.

Where a torque setting is given as a single figure it may be varied by plus or minus 3%. Torque figures indicated are for dry threads, hence for lubricated threads may be reduced by one third.

The manufacturer's policy is one of continuous improvement. The right to change the specification of the machine without notice is reserved. No responsibility will be accepted for discrepancies which may occur between specifications of the machine and the descriptions contained in this publication.

Finally, please remember above all else safety must come first!

Section Numbering

The manual is compiled in sections, the first three are numbered and contain information as follows:

- 1 General Information - includes torque settings and service tools.
- 2 Care and Safety - includes warnings and cautions pertinent to aspects of workshop procedures etc.
- 3 Maintenance - includes service schedules and recommended lubricants for all the machine.

The remaining sections are alphabetically coded and deal with Dismantling, Overhaul etc. of specific components, for example:

- A Attachments
- B Body and Framework, etc.

Section contents, technical data, circuit descriptions, operation descriptions etc. are inserted at the beginning of each alphabetically coded section.

Left Side, Right Side

In this manual, 'left' **A** and 'right' **B** mean your left and right when you are seated correctly in the machine.

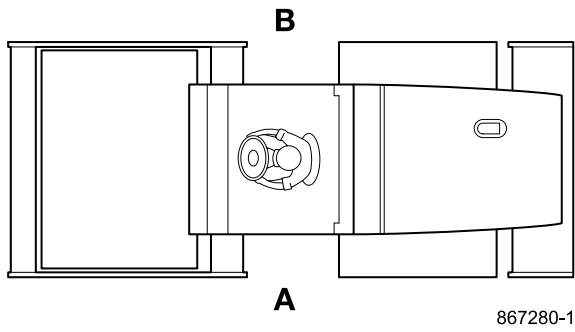


Fig 1.

Cross References

T1-004_2

In this publication, page cross references are made by presenting the subject title printed in bold, italic and underlined. It is preceded by the 'go to' symbol. The number of the page upon which the subject begins, is indicated within the brackets. For example: ➔ **Cross References** (1-2).

Identifying Your Machine

Machine Identification Plate

Your machine has an identification plate mounted as shown. → [Fig 2.](#) ([1-3](#)).

The machine and engine serial numbers can help identify exactly the type of equipment you have.

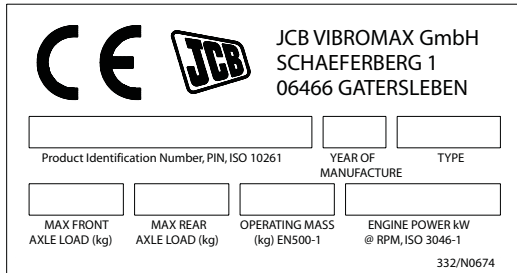


Fig 2.

T040760-16

Typical Product Identification Number (PIN)

1	2	3	4
JCB	VM115	C	01801240

- 1 World Manufacturer Identification (JCB)
- 2 Machine Type and Model (VM115 = VM115)
- 3 Randomly Generated Check Letter
- 4 Machine Serial Number (01801240)

Component Identification Plates

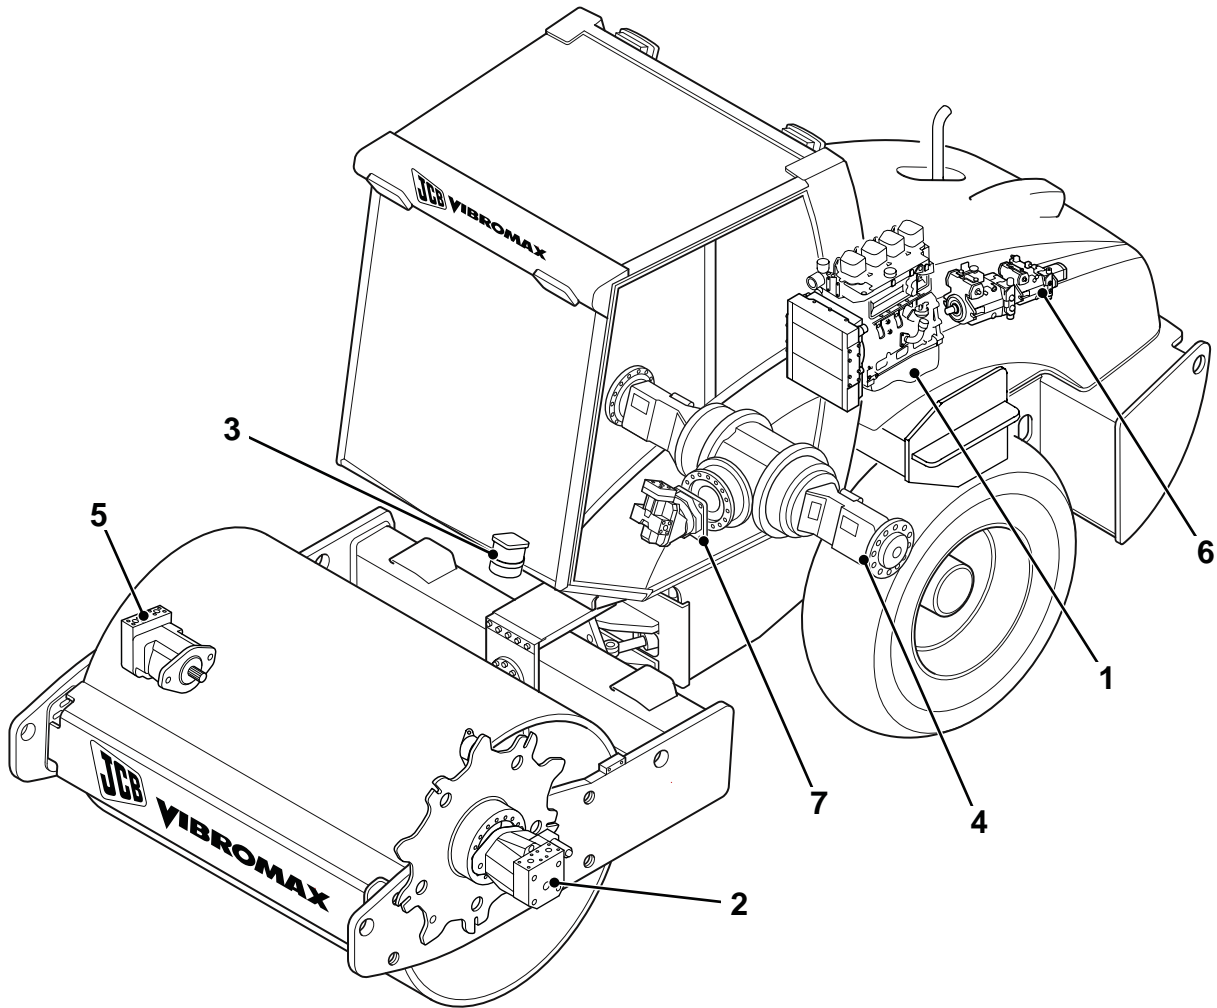


Fig 3.

844210-2

- 1 Engine serial number
- 2 Drum drive motor serial number
- 3 Steering unit serial number
- 4 Rear axle serial number
- 5 Vibration motor serial number
- 6 Hydraulic pump serial number
- 7 Axle hydraulic drive motor serial number



Service Consumables

Sealing and Retaining Compounds

T11-001_4

Table 1.

Type	Description	Part No.	Quantity
JCB Multi-Gasket	A medium strength sealant suitable for all sizes of gasket flanges, and for hydraulic fittings of 25-65 mm diameter.	4102/1212	50 ml
JCB High Strength Threadlocker	A high strength locking fluid for use with threaded components. Gasketing for all sizes of flange where the strength of the joint is important.	4102/0551	50 ml
JCB Retainer (High Strength)	For all retaining parts which are unlikely to be dismantled.	4101/0601	10 ml
		4101/0651	50 ml
JCB Threadlocker and Sealer	A medium strength locking fluid for sealing and retaining nuts, bolts, and screws up to 50 mm diameter, and for hydraulic fittings up to 25 mm diameter.	4101/0250	10 ml
		4101/0251	50 ml
JCB Threadlocker and Sealer (High Strength)	A high strength locking fluid for sealing and retaining nuts, bolts, and screws up to 50 mm diameter, and for hydraulic fittings up to 25 mm diameter.	4101/0550	10 ml
		4101/0552	200 ml
JCB Threadseal	A medium strength thread sealing compound.	4102/1951	50 ml
JCB Activator	A cleaning primer which speeds the curing rate of anaerobic products.	4104/0251	200 ml (Aerosol)
		4104/0253	1 ltr (Bottle)
JCB Cleaner/Degreaser	For degreasing components prior to use of anaerobic adhesives and sealants.	4104/1557	400 ml (Aerosol)
Direct Glazing Kit	For one pane of glass; comprises of: <ul style="list-style-type: none"> - 1 x Ultra Fast Adhesive (310 ml) - 1 x Active Wipe 205 (30 ml) - 1 x Black Primer 206J (30 ml) - plus applicator nozzle etc. 	993/55700	
Ultra Fast Adhesive	For direct glazing.	4103/2109	310 ml
Active Wipe 205	For direct glazing.	4104/1203	250 ml
Black Primer 206J	For direct glazing.	4201/4906	30 ml
Clear Silicone Sealant	To seal butt jointed glass.	4102/0901	
Plastic to Metal Bonder	To seal plastic to metal joints.	4103/0956	50 g
Black Polyurethane Sealant	To finish exposed edges of laminated glass.	4102/2309	310 ml

Buy Now



Our support email:

ebooklibonline@outlook.com