

**6510, 6610,  
6810 and 6910  
Tractors**  
(up to serial no. 266766)

**John Deere Werke Mannheim**  
**OMAL116300 Issue K9**  
**(This manual replaces OMAL116300 K8)**  
European Version  
Printed in Germany  
**ENGLISCH**

# Contents

	Page		Page
<b>Identification Views</b> . . . . .	00-1	<b>Operator's Station and Cab</b>	
<b>Safety</b> . . . . .	05-1	Roll-over protective structure . . . . .	25-1
<b>Safety Decals</b> . . . . .	10-1	Seat belt . . . . .	25-2
<b>Controls and Instruments</b>		Operator's seat . . . . .	25-3
Vehicle controls . . . . .	15-1	Windshield wiper . . . . .	25-8
PTO and creeper controls . . . . .	15-2	Blower and air louvers . . . . .	25-9
Attachment controls . . . . .	15-2	Heater . . . . .	25-10
Heater and air-conditioning controls . . . . .	15-2	Air-conditioning system . . . . .	25-10
Operating the digital display . . . . .	15-2	Cooling cans of drink . . . . .	25-12
Indicator lights . . . . .	15-3	Storage rack . . . . .	25-12
Fuel gauge . . . . .	15-4	Dome and console lights . . . . .	25-13
Coolant temperature gauge . . . . .	15-5	Adjusting the steering wheel . . . . .	25-13
Digital display . . . . .	15-6	Beacon light . . . . .	25-13
Travel speed . . . . .	15-7	Adjusting the access step . . . . .	25-13
Engine speed . . . . .	15-7	Cool box . . . . .	25-14
PTO speed . . . . .	15-8	Monitor installation . . . . .	25-14
Time of day (clock) . . . . .	15-8	Cigarette lighter and ashtray . . . . .	25-16
Operating hours . . . . .	15-8	Roof hatch . . . . .	25-16
Gear . . . . .	15-9	<b>Break-In Period</b>	
Performance monitor . . . . .	15-10	After the first 4 and 8 hours of operation . . . . .	30-1
Data entry . . . . .	15-11	Within the first 100 hours of operation . . . . .	30-1
Operating . . . . .	15-12	After the first 100 hours of operation . . . . .	30-3
Calibration . . . . .	15-13	<b>Prestarting Checks</b> . . . . .	35-1
Wheel slip . . . . .	15-14	<b>Operating the Engine</b>	
Vehicle speed . . . . .	15-15	Starting the engine . . . . .	40-1
Service . . . . .	15-16	Electrical starting aid . . . . .	40-2
Backlight brightness . . . . .	15-17	Coolant heater . . . . .	40-3
<b>Lights</b>		Booster battery . . . . .	40-3
H4 farm headlights . . . . .	20-3	Fuel preheater . . . . .	40-3
Light switch . . . . .	20-3	Towing the tractor . . . . .	40-4
Hazard warning lights . . . . .	20-4	Parking the tractor . . . . .	40-5
Turn signals and horn . . . . .	20-5	Battery cut-off switch . . . . .	40-5
Work lights . . . . .	20-5	Stopping the engine . . . . .	40-5
Trailer socket . . . . .	20-6	Chock block . . . . .	40-6

Continued on next page

*All information, illustrations and specifications in this manual are based on the latest information available at the time of publication. The right is reserved to make changes at any time without notice.*

OMAL116300 K9-19-01SEP99

COPYRIGHT© 1999  
DEERE & COMPANY  
European Office Mannheim  
All rights reserved  
A John Deere ILLUSTRATION® Manual  
Previous Editions  
Copyright 1998, 1997 Deere & Company

Page	Page
<b>Operating the Tractor</b>	
Reduce fuel consumption . . . . .	45-1
Correct ground travel speed . . . . .	45-3
Travel speeds, 6510 and 6610 . . . . .	45-4
Travel speeds, 6810 and 6910 . . . . .	45-8
Shifting PowrQuad transmission . . . . .	45-11
Shift positions, PowrQuad transmission . . . . .	45-12
Shifting PowrQuad Plus transmission . . . . .	45-13
Shifting AutoQuad transmission . . . . .	45-14
Shifting AutoQuad II transmission . . . . .	45-15
Travel speeds with Powr Shift transmission . . . . .	45-16
Shifting Powr Shift transmission . . . . .	45-17
Engaging creeper transmission . . . . .	45-20
Engaging front-wheel drive . . . . .	45-21
Differential lock . . . . .	45-22
Foot brakes . . . . .	45-22
Hydraulic trailer brake . . . . .	45-23
Air brake on trailer . . . . .	45-24
<b>Rockshaft and Three-Point Hitch</b>	
Operating the rockshaft . . . . .	50-1
With Headland Management System (HMS) . . . . .	50-2
Remote control . . . . .	50-3
Height adjustment . . . . .	50-3
Transporting mounted implements . . . . .	50-3
Adjusting rate of implement drop . . . . .	50-4
Depth adjustment . . . . .	50-4
Load/depth adjustment . . . . .	50-5
Depth control . . . . .	50-5
Mixed control . . . . .	50-6
Load control . . . . .	50-6
Float position . . . . .	50-7
Direct actuation . . . . .	50-7
Three-point hitch . . . . .	50-8
Draft links . . . . .	50-8
Attaching implements . . . . .	50-10
Center link . . . . .	50-11
Lift links . . . . .	50-12
Sway blocks . . . . .	50-14
Stabilizer chain . . . . .	50-14
Stabilizer bar . . . . .	50-15
Stabilizing system . . . . .	50-15
Adjusting spreading dimension . . . . .	50-16
<b>Power Take-Off</b>	
PTO guard . . . . .	55-1
PTO options . . . . .	55-1
PTO speeds . . . . .	55-2
Operating the PTOs . . . . .	55-3
By remote control . . . . .	55-4
Reversing rear PTO shafts . . . . .	55-5
Changing speed of shiftable rear PTO . . . . .	55-6
Attaching PTO-driven equipment . . . . .	55-7
<b>Ballast</b>	
Ballast . . . . .	60-1
Ballasting rear wheels . . . . .	60-1
Measuring rear wheel slip . . . . .	60-2
Rear wheel weights . . . . .	60-2
Filling tires with liquid ballast . . . . .	60-3
Pre-assembling the pick-up weight . . . . .	60-4
Attaching to three-point hitch (rear-end attachment) . . . . .	60-6
Attaching to basic weight . . . . .	60-7
Attaching to three-point hitch (front-end attachment) . . . . .	60-9
Front weights . . . . .	60-10
Additional 180 kg (400 lb) weight package . . . . .	60-11
<b>Wheel Tread, Tires</b>	
Front-wheel tread adjustment . . . . .	65-1
Limiting the steering angle . . . . .	65-2
Tightening front-wheel attaching nuts . . . . .	65-3
Checking front-wheel toe-in . . . . .	65-3
Adjusting . . . . .	65-3
Adjusting the fenders . . . . .	65-4
Rear wheel tread adjustment . . . . .	65-8
Tread widths . . . . .	65-9
Tires . . . . .	65-11
Tire combinations . . . . .	65-12
<b>Additional Equipment</b>	
Selective control valves . . . . .	70-1
Pressure adjustment, 300 Series . . . . .	70-2
Control lever . . . . .	70-3
Multi-function lever . . . . .	70-4
Couplers . . . . .	70-5
Maximum permissible oil withdrawal . . . . .	70-6
Oil withdrawal with hydraulic motor . . . . .	70-7
Power Beyond couplers, 6510 and 6610 . . . . .	70-8
Pressure-free return circuit, 6510 and 6610 . . . . .	70-8
Additional oil reservoir, 6510 and 6610 . . . . .	70-8
Power Beyond application valve . . . . .	70-9
Remote hydraulic cylinder . . . . .	70-9
Swinging drawbar . . . . .	70-11
Lengthwise adjustment . . . . .	70-11

Continued on next page

Contents

	<b>Page</b>		<b>Page</b>
Tool bar for three-point hitch . . . . .	70-12	Checking oil level in FWD final drives . . . . .	95-5
Front jaw hitch . . . . .	70-12	Checking brake operation . . . . .	95-6
Height-adjustable trailer hitch . . . . .	70-13	Three-point hitch . . . . .	95-6
Pick-up hitch . . . . .	70-14	Pick-up hitch . . . . .	95-7
Lockable tank filler cap . . . . .	70-15	Checking neutral start circuit . . . . .	95-8
		Tightening wheel retaining bolts . . . . .	95-9
<b>Transport . . . . .</b>	<b>75-1</b>		
<b>Fuel, Lubricants, Hydraulic Oil and Coolant</b>		<b>Service / Every 500 Hours</b>	
Fuel . . . . .	80-1	Changing the fuel filter . . . . .	100-1
Engine break-in oil . . . . .	80-2	Lubricating rear axle . . . . .	100-1
Engine oil . . . . .	80-3	Lubricating draft link support . . . . .	100-1
Transmission/hydraulic oil . . . . .	80-4	Air intake hoses . . . . .	100-2
FWD axle oil . . . . .	80-4		
Grease . . . . .	80-5	<b>Service / Every 750 Hours</b>	
Coolant . . . . .	80-7	Checking engine speeds . . . . .	105-1
		Changing transmission oil filters . . . . .	105-1
		Changing filter on front PTO . . . . .	105-2
<b>Lubrication and Periodic Service</b>			
Service intervals . . . . .	85-1	<b>Service / Once Every Year</b>	
Opening hood . . . . .	85-2	Checking seat belt . . . . .	110-1
Removing grille screens . . . . .	85-2		
Removing fan guard . . . . .	85-2	<b>Service / Every 1500 Hours or 2 Years</b>	
Access to battery . . . . .	85-2	Changing oil in FWD axle . . . . .	115-1
Access to fuses . . . . .	85-3	Changing transmission oil . . . . .	115-3
Alternator . . . . .	85-4		
Service chart . . . . .	85-5	<b>Service / Every 3000 Hours or 3 Years</b>	
Service intervals - daily or every 10 hours. . . . .	85-6	Changing coolant . . . . .	120-1
After the first 100 hours . . . . .	85-7		
Every 250 hours . . . . .	85-8	<b>Service / As Required</b>	
Every 500 hours . . . . .	85-9	Cleaning cab air filter . . . . .	125-1
Every 750 hours . . . . .	85-10	Engine air cleaner . . . . .	125-1
Once every year . . . . .	85-10	Secondary (safety) element . . . . .	125-3
Every 1500 hours or every 2 years . . . . .	85-11	Cab air filters . . . . .	125-4
Every 3000 hours or every 3 years . . . . .	85-11	Radiator screen . . . . .	125-8
As required . . . . .	85-12	Service - air-conditioning system . . . . .	125-9
		Adjusting the handbrake . . . . .	125-9
<b>Service / Daily or Every 10 Hours</b>		Bleeding foot brakes, 6510 and 6610 . . . . .	125-10
Engine crankcase oil level . . . . .	90-1	Bleeding foot brakes, 6810 and 6910 . . . . .	125-12
Fuel filter . . . . .	90-1	Fuel filter . . . . .	125-14
Compressed air trailer brake system . . . . .	90-2	Bleeding the fuel system . . . . .	125-14
Checking the lights . . . . .	90-2	Operator's seat . . . . .	125-15
Other service jobs . . . . .	90-3	Checking specific gravity of battery . . . . .	125-15
		Starter motor . . . . .	125-16
<b>Service / Every 250 Hours</b>		Fuses . . . . .	125-16
Changing engine oil . . . . .	95-1	Replacing drive belt . . . . .	125-25
Changing engine crankcase filter element . . . . .	95-2		
Checking transmission oil level . . . . .	95-3	<b>Troubleshooting</b>	
Battery service . . . . .	95-3	Hydraulic system . . . . .	130-1
Lubricating front axle . . . . .	95-4	Engine . . . . .	130-2
Checking oil level in FWD axle . . . . .	95-5		

Continued on next page

Contents

	Page
Electrical system . . . . .	130-4
<b>Diagnostic Codes</b> . . . . .	135-1
<b>Storage</b>	
Storage for a lengthy period . . . . .	140-1
Taking tractor out of storage . . . . .	140-2
<b>Specifications</b>	
Engine . . . . .	145-1
PTO power output . . . . .	145-2
Transmission . . . . .	145-2
Hydraulic system . . . . .	145-2
Axle loads and weights . . . . .	145-3
Electrical system . . . . .	145-4
Capacities . . . . .	145-4
Sound level . . . . .	145-5
Tire loading limits . . . . .	145-5
Safety note regarding electrical appliances . . . . .	145-8
<b>Serial Numbers</b> . . . . .	150-1
<b>Index</b>	

# Identification Views



LX.OMTYPE017523-19-01OCT98

Identification Views



LX1016150

LX1016150 -UN-08SEP97



LX1016151

LX1016151 -UN-08SEP97

LX,OMTYPE011247-19-01SEP97

# Safety

## RECOGNIZE SAFETY INFORMATION

This is the safety-alert symbol. When you see this symbol on your machine or in this manual, be alert to the potential for personal injury.

Follow recommended precautions and safe operating practices.



DX,ALERT -19-29SEP98

T81389 -UN-07DEC68

## UNDERSTAND SIGNAL WORDS

A signal word—DANGER, WARNING, or CAUTION—is used with the safety-alert symbol. DANGER identifies the most serious hazards.

DANGER or WARNING safety signs are located near specific hazards. General precautions are listed on CAUTION safety signs. CAUTION also calls attention to safety messages in this manual.



DX,SIGNAL -19-03MAR93

TS187 -19-30SEP88


## FOLLOW SAFETY INSTRUCTIONS

Carefully read all safety messages in this manual and on your machine safety signs. Keep safety signs in good condition. Replace missing or damaged safety signs. Be sure new equipment components and repair parts include the current safety signs. Replacement safety signs are available from your John Deere dealer.

Learn how to operate the machine and how to use controls properly. Do not let anyone operate without instruction.

Keep your machine in proper working condition. Unauthorized modifications to the machine may impair the function and/or safety and affect machine life.

If you do not understand any part of this manual and need assistance, contact your John Deere dealer.

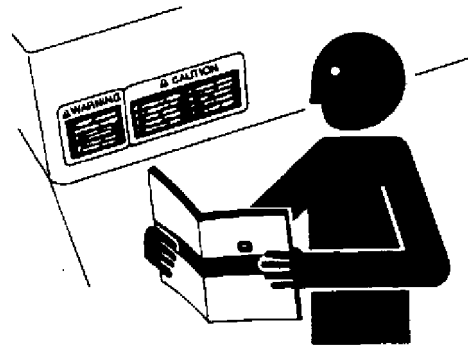

DX,READ -19-03MAR93

TS201 -UN-23AUG88






## PREVENT MACHINE RUNAWAY

Avoid possible injury or death from machinery runaway.

Do not start engine by shorting across starter terminals. Machine will start in gear if normal circuitry is bypassed.

NEVER start engine while standing on ground. Start engine only from operator's seat, with transmission in neutral or park.

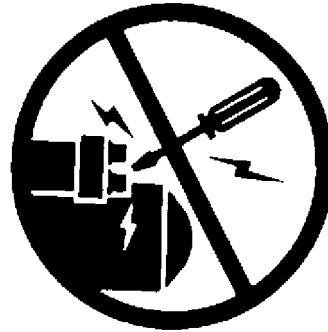

DX,BYPAS1 -19-29SEP98

TS177 -UN-11JAN89


## USE SEAT BELT PROPERLY

Use a seat belt when you operate with a roll-over protective structure (ROPS) or cab to minimize chance of injury from an accident such as an overturn.

Do not use a seat belt if operating without a ROPS or cab.

Replace entire seat belt if mounting hardware, buckle, belt, or retractor show signs of damage.

Inspect seat belt and mounting hardware at least once a year. Look for signs of loose hardware or belt damage, such as cuts, fraying, extreme or unusual wear, discoloration, or abrasion. Replace only with replacement parts approved for your machine. See your John Deere dealer.

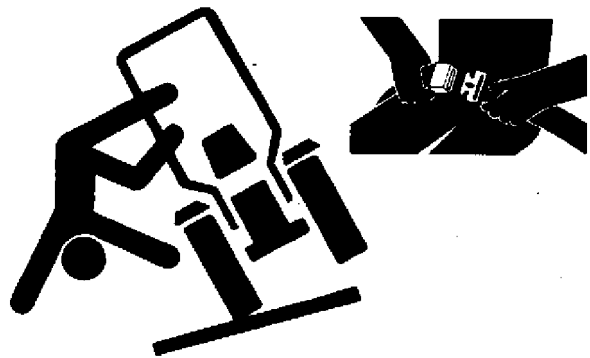


DX,ROPS1 -19-07JUL99

TS205 -UN-23AUG88

## WORK IN VENTILATED AREA

Engine exhaust fumes can cause sickness or death. If it is necessary to run an engine in an enclosed area, remove the exhaust fumes from the area with an exhaust pipe extension.

If you do not have an exhaust pipe extension, open the doors and get outside air into the area.

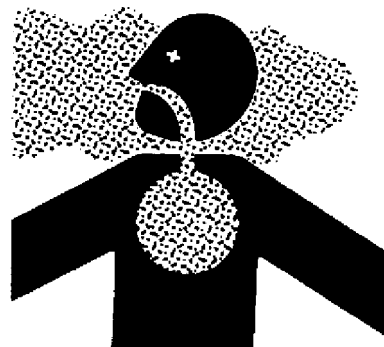

DX,AIR -19-04JUN90

TS220 -UN-23AUG88



## DRIVING THE TRACTOR SAFELY

Always check the road and general operating safety of the machine before using.

Operate tractor only when all guards are fitted and in their correct position.

Before moving away, always check immediate vicinity of machine (e.g. for children). Ensure adequate visibility.

Always adapt your ground speed to meet the ground conditions. Avoid making sharp turns when driving up or down slopes or when driving across the slope. Do not attempt to turn the machine with the differential lock engaged. When driving down slopes, never depress the clutch and change gear!

Attach implements and trailers to the tractor only using the prescribed drawbars or hitches. Attach trailers and implements correctly. Always ensure that trailers and implements cannot roll away.



When making turns with towed or mounted implements, always take into consideration the width and inertia of the implement.

Reduce your ground speed when driving the tractor on slopes or over uneven ground and before making sharp turns. Before descending a steep hill, shift to a lower gear. Never coast downhill!

Avoid holes, ditches and obstructions which may cause the tractor to tip, particularly on hillsides.

Front-wheel drive greatly increases traction. This means that the tractor can be driven on steeper slopes, increasing the possibility of a tip over. Driving forward out of a ditch or up a steep slope could cause tractor to tip over to the rear. Therefore reverse out of these situations whenever possible.

Never drive near the edge of a gully or steep embankment — it might cave in!

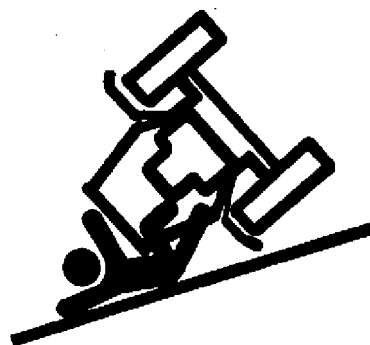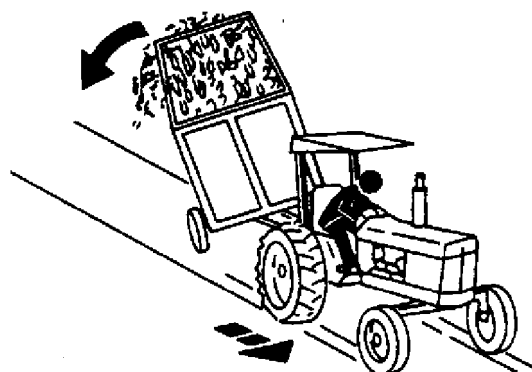

-UN-23AUG68

TS216

-UN-07DEC88

RW13093


LX,DRIVE -19-01JUN92



## OPERATING THE TRACTOR SAFELY



TS213 -JUN-23AUG88

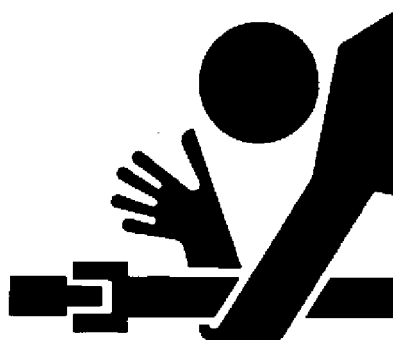

TS276 -JUN-23AUG88

Careless use of the tractor can result in unnecessary accidents. Be alert to hazards of tractor operation. Understand causes of accidents and take every precaution to avoid them. Most common accidents are caused from:

- Tractor roll-over
- Improper starting procedures
- Crushing and pinching during hitching
- Collisions with other motor vehicles
- Entanglement in PTO shafts
- Falling from tractor

Avoid accidents by taking the following precautions:

- Put transmission in PARK before dismounting. Leaving transmission in gear with engine stopped will NOT prevent the tractor from moving.
- Be sure everyone is clear of tractor and attached equipment before starting engine.
- Never try to get on or off a moving tractor.
- When tractor is left unattended, place in PARK, lower implements to the ground, stop the engine, and remove the key.
- Never go near an operating PTO or an operating implement.
- Always fasten your seat belt in a ROPS equipped tractor.

RX,HAZARD,S -19-20DEC95




## KEEP RIDERS OFF MACHINE

Only allow the operator on the machine. Keep riders off.

Riders on machine are subject to injury such as being struck by foreign objects and being thrown off the machine. Riders also obstruct the operator's view resulting in the machine being operated in an unsafe manner.

On machines equipped with a passenger seat, one rider is permitted.

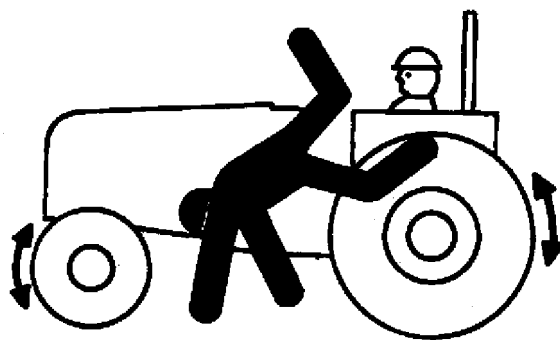

-UN-23AUG68

TS290

LX,OMITF 002146-19-01FEB92

## PARKING AND LEAVING THE TRACTOR

Lower mounted implement(s) or equipment to the ground before leaving the tractor.

When leaving the tractor and/or implements, shut off engine, engage range and gear shift levers as well as handbrake and parking lock, remove main switch key and lock the operator's cab (if equipped). Put chock blocks in position.

Never leave tractor unattended while the engine is still running.

Never leave the operator's platform/cab when driving.



LX002510


-UN-17JAN95

LX002510

LX,PARK -19-07DEC96

## AVOID EYE CONTACT WITH RADAR

Radar ground speed sensor emits a very low intensity microwave signal. It will not cause any ill effects during normal use. Although intensity is low, DO NOT look directly into face of sensor while in operation, to avoid any possible eye damage.

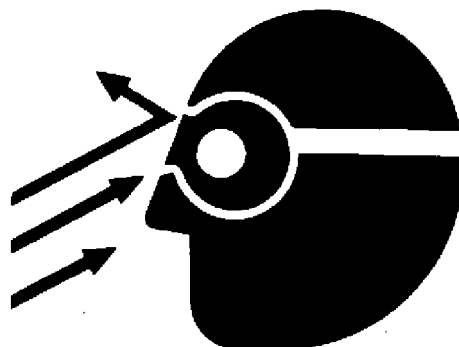

-UN-23AUG88

TS266

RX,SAFTY,RADAR1-19-21SEP92



## HANDLE FUEL SAFELY—AVOID FIRES

Handle fuel with care: it is highly flammable. Do not refuel the machine while smoking or when near open flame or sparks.

Always stop engine before refueling machine. Fill fuel tank outdoors.

Prevent fires by keeping machine clean of accumulated trash, grease, and debris. Always clean up spilled fuel.



DX,FIRE1 -19-03MAR93


TS202 -UN-23AUG88

## PREPARE FOR EMERGENCIES

Be prepared if a fire starts.

Keep a first aid kit and fire extinguisher handy.

Keep emergency numbers for doctors, ambulance service, hospital, and fire department near your telephone.

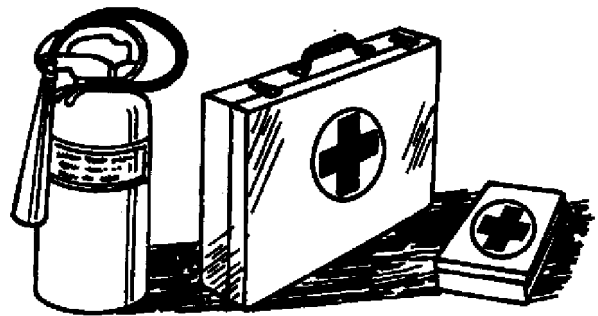

DX,FIRE2 -19-03MAR93

TS291 -UN-23AUG88


## WEAR PROTECTIVE CLOTHING

Wear close fitting clothing and safety equipment appropriate to the job.

Prolonged exposure to loud noise can cause impairment or loss of hearing.

Wear a suitable hearing protective device such as earmuffs or earplugs to protect against objectionable or uncomfortable loud noises.

Operating equipment safely requires the full attention of the operator. Do not wear radio or music headphones while operating machine.

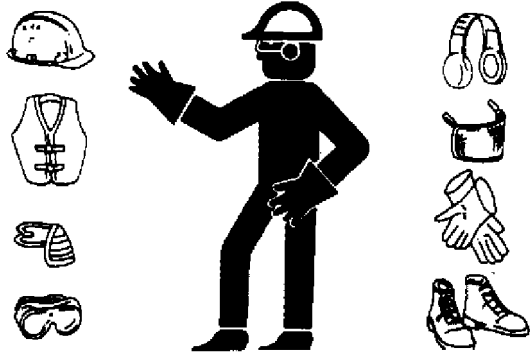

DX,WEAR -19-10SEP90

TS206 -UN-23AUG88





## AVOID CONTACT WITH PESTICIDES

This enclosed cab does not protect against inhaling harmful pesticides. If pesticide use instructions require respiratory protection, wear an appropriate respirator inside the cab.

Before leaving the cab, wear personal protective equipment as required by the pesticide use instructions. When re-entering the cab, remove protective equipment and store either outside the cab in a closed box or some other type of sealable container or inside the cab in a pesticide resistant container, such as a plastic bag.

Clean your shoes or boots to remove soil or other contaminated particles prior to entering the cab.

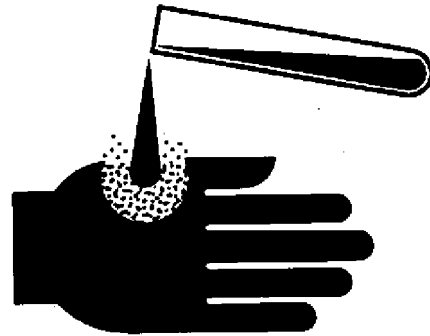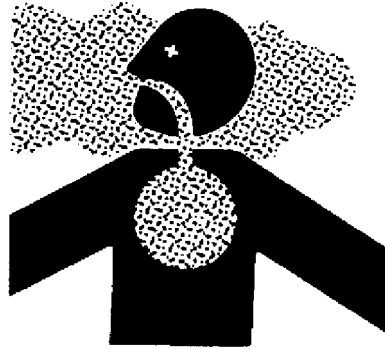

DX,CABS -19-03MAR93

-UN-23AUG68

TS220

-UN-23AUG68

TS272

## STAY CLEAR OF ROTATING DRIVELINES

Entanglement in rotating driveline can cause serious injury or death.

Keep tractor master shield and driveline shields in place at all times. Make sure rotating shields turn freely.

Wear close fitting clothing. Stop the engine and be sure PTO driveline is stopped before making adjustments, connections, or cleaning out PTO driven equipment.



DX,PTO -19-12SEP95

-UN-22AUG95


TS1644



## USE SAFETY LIGHTS AND DEVICES

Prevent collisions between other road users, slow moving tractors with attachments or towed equipment and self-propelled machines on public roads. Frequently check for traffic from the rear, especially in turns, and use turn signal lights.

Use headlights, flashing warning lights, and turn signals day and night. Follow local regulations for equipment lighting and marking. Keep lighting and marking visible, clean, and in good working order. Replace or repair lighting and marking that has been damaged or lost. An implement safety lighting kit is available from your John Deere dealer.

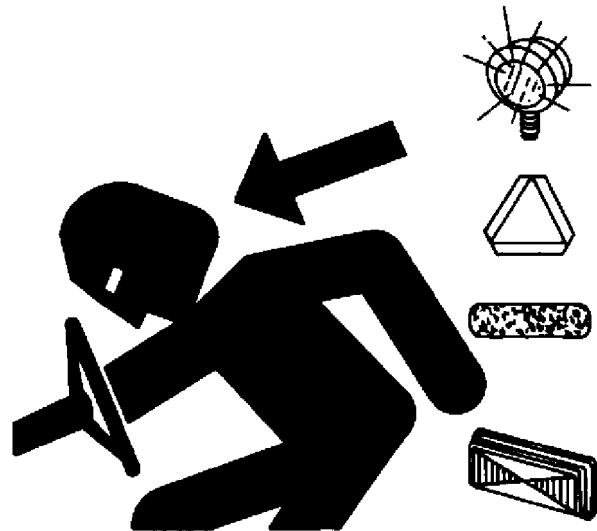


DX,FLASH -19-07JUL99

TS951 -UN-12APR90

## SAFELY TRANSPORTING THE TRACTOR

A disabled tractor is best transported on a flatbed carrier. Use chains to secure the tractor to the carrier.

Never tow a tractor at a speed greater than 16 km/h (10 mph). An operator must steer and brake the tractor under tow.

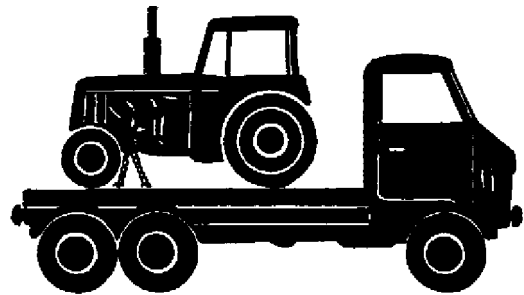

LX,OTRANS003525-19-01SEP92

RW13090 -UN-07DEC88




## TOW LOADS SAFELY

Stopping distance increases with speed and weight of towed loads, and on slopes. Towed loads with or without brakes that are too heavy for the tractor or are towed too fast can cause loss of control. Consider the total weight of the equipment and its load.

Observe these recommended maximum road speeds, or local speed limits which may be lower:

- If towed equipment does not have brakes, do not travel more than 32 km/h (20 mph) and do not tow loads more than 1.5 times the tractor weight.
- If towed equipment has brakes, do not travel more than 40 km/h (25 mph) and do not tow loads more than 4.5 times the tractor weight.

Ensure the load does not exceed the recommended weight ratio. Add ballast to recommended maximum for tractor, lighten the load, or get a heavier towing unit. The tractor must be heavy and powerful enough with adequate braking power for the towed load. Use additional caution when towing loads under adverse surface conditions, when turning, and on inclines.

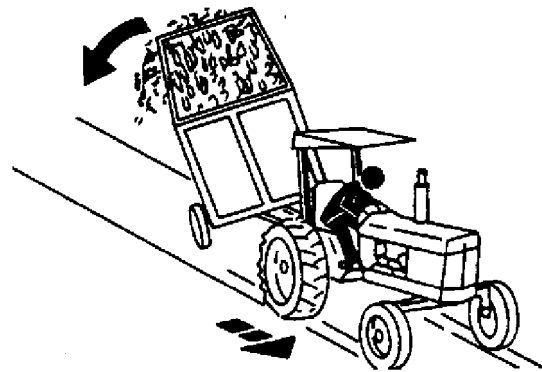

TS216 -UN-23AUG68

DX,TOW

-19-02OCT95






## FREEING A MIRED MACHINE

Attempting to free a mired machine can involve safety hazards such as the mired tractor tipping rearward, the towing tractor overturning, and the tow chain or tow bar (a cable is not recommended) failing and recoiling from its stretched condition.

Back your tractor out if it gets mired down in mud. Unhitch any towed implements. Dig mud from behind the rear wheels. Place boards behind the wheels to provide a solid base and try to back out slowly. If necessary, dig mud from the front of all wheels and drive slowly ahead.

If necessary to tow with another unit, use a tow bar or a long chain (a cable is not recommended). Inspect the chain for flaws. Make sure all parts of towing devices are of adequate size and strong enough to handle the load.

Always hitch to the rear drawbar of the towing unit. Do not hitch to the front pushbar attachment point. Before moving, clear the area of people. Apply power smoothly to take up the slack: a sudden pull could snap any towing device causing it to whip or recoil dangerously.

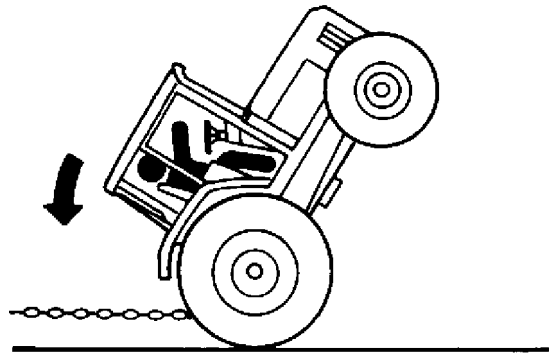

TS1645 -UN-15SEP95

TS263 -UN-23AUG88

TS263

DX,MIRED -19-07JUL99



## PRACTICE SAFE MAINTENANCE

Understand service procedure before doing work. Keep area clean and dry.

Never lubricate, service, or adjust machine while it is moving. Keep hands, feet, and clothing from power-driven parts. Disengage all power and operate controls to relieve pressure. Lower equipment to the ground. Stop the engine. Remove the key. Allow machine to cool.

Securely support any machine elements that must be raised for service work.

Keep all parts in good condition and properly installed. Fix damage immediately. Replace worn or broken parts. Remove any buildup of grease, oil, or debris.

On self-propelled equipment, disconnect battery ground cable (-) before making adjustments on electrical systems or welding on machine.

On towed implements, disconnect wiring harnesses from tractor before servicing electrical system components or welding on machine.



DX,SERV -19-04FEB99

-UN-23AUG88

TSS218



## REMOVE PAINT BEFORE WELDING OR HEATING


Avoid potentially toxic fumes and dust.

Hazardous fumes can be generated when paint is heated by welding, soldering, or using a torch.

Do all work outside or in a well ventilated area. Dispose of paint and solvent properly.

Remove paint before welding or heating:

- If you sand or grind paint, avoid breathing the dust. Wear an approved respirator.
- If you use solvent or paint stripper, remove stripper with soap and water before welding. Remove solvent or paint stripper containers and other flammable material from area. Allow fumes to disperse at least 15 minutes before welding or heating.

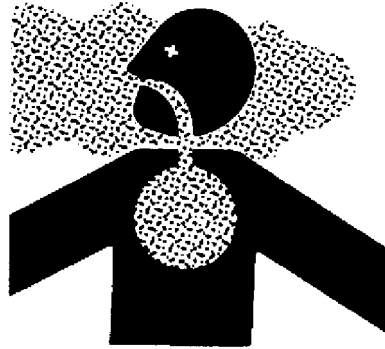

DX,PAINT -19-03MAR93

TS220 -UN-23AUG68

## AVOID HEATING NEAR PRESSURIZED FLUID LINES

Flammable spray can be generated by heating near pressurized fluid lines, resulting in severe burns to yourself and bystanders. Do not heat by welding, soldering, or using a torch near pressurized fluid lines or other flammable materials. Pressurized lines can be accidentally cut when heat goes beyond the immediate flame area.



DX,TORCH -19-03MAR93

TS953 -UN-15MAY90




## AVOID HIGH-PRESSURE FLUIDS

Escaping fluid under pressure can penetrate the skin causing serious injury.

Avoid the hazard by relieving pressure before disconnecting hydraulic or other lines. Tighten all connections before applying pressure.

Search for leaks with a piece of cardboard. Protect hands and body from high pressure fluids.

If an accident occurs, see a doctor immediately. Any fluid injected into the skin must be surgically removed within a few hours or gangrene may result. Doctors unfamiliar with this type of injury should reference a knowledgeable medical source. Such information is available from Deere & Company Medical Department in Moline, Illinois, U.S.A.

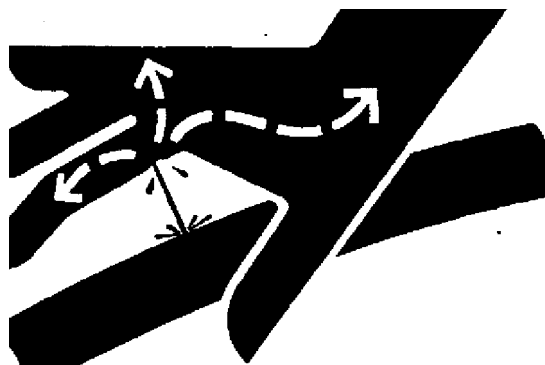


X9811 -UN-23AUG88

DX,FLUID -19-03MAR93

## STORE ATTACHMENTS SAFELY

Stored attachments such as dual wheels, cage wheels, and loaders can fall and cause serious injury or death.

Securely store attachments and implements to prevent falling. Keep playing children and bystanders away from storage area.

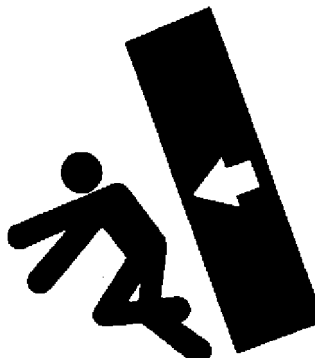

TS219 -UN-23AUG88

DX,STORE -19-03MAR93

## SERVICE COOLING SYSTEM SAFELY

Explosive release of fluids from pressurized cooling system can cause serious burns.

Shut off engine. Only remove filler cap when cool enough to touch with bare hands. Slowly loosen cap to relieve pressure before removing completely.

Add coolant only when the engine is shut off.



TS281 -UN-23AUG88

LX,RCAP -19-01SEP95

Thank you so much for reading.  
Please click the “Buy Now!”  
button below to download the  
complete manual.



After you pay.

You can download the most  
perfect and complete manual in  
the world immediately.

Our support email:

[ebooklibonline@outlook.com](mailto:ebooklibonline@outlook.com)