

| Document Title: | · · | Information Type: | Date: |
|---------------------------|-----|---------------------|-------------------|
| Checking function, engine | | Service Information | 2014/6/4 0 |
| Profile: | | | |

Checking function, engine

Op nbr

Testing for possible causes

1. First check:

- O Fluid levels
- O Control/warning lamps
- O Instruments
- O Battery voltage
- O Fuses (correct rating)

2. Separate systems:

O If two or more systems, and/or circuits work together. Check the systems/circuits individually.

3. If the pulling power of the machine is poor, the fault may be in the engine or the transmission:

- O Then check the stalling speed, see specifications.
- O If the engine stalling speed is within the prescribed values, the fault can be found in the transmission.
- O If the engine stalling speed is low, check according to point below.

4. Checking engine:

- O Check oil and coolant, discoloration, smell etc.
- O Check exhaust pipe (sticky inside
- O Check air filter and turbo.
- O If the engine runs unevenly (imbalance-noise).
- O Check for overpressure in header tank.
- O Crankcase breather (overpressure-clogged).
- O Oil dipstick, remove (overpressure).
- O Exhaust smoke (colour-impurities, smell).
- O Bleed the fuel system.
- O Slightly loosen the delivery pipes [1] ^① from the injectors (one at a time with the engine running).
- O Check speed.
- O Check feed pressure (before and after filter).
- O Make a compression test (repeat with oil if incorrect).
- O Check injectors.
- O Check injection timing.

[1] This check must not be carried out on low-emission engines, as the fuel injection pressure in these engines is very high.



| Document Title: | · · | Information Type: | Date: |
|-----------------|-----|---------------------|-------------------|
| Description | | Service Information | 2014/6/4 0 |
| Profile: | | | |

Description

Loader I150 is provided with a td102 type engine and loader I180 with a td122 type engine.

In both cases the engines are straight, six-cylinder, turbocharged, four-stroke direct-injection diesel engines.

Both engine types are available in a low-emission version.

The output and torque curves for the respective engines are shown in Figure 1 and Figure 2.

Figure 3 and Figure 4 show the torque curve for the low-emission engine in relation to a standard engine.

The engine type designation, part and serial numbers are stamped on the left side of the cylinder block. For repair work on the engine, please refer to the separate service manual, see the foreword.

Volvo bm l150

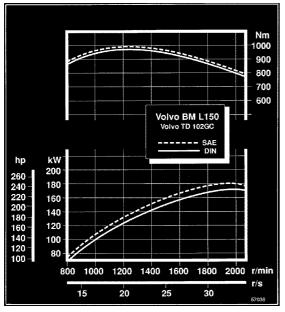


Figure 1 Output and torque curves, td102

Volvo bm l180

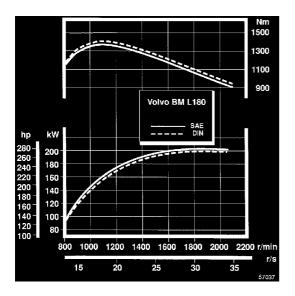


Figure 2 Output and torque curves, td122

Additional or new parts for low-emission engine

| | L150 | L180 | |
|-----------------------------|----------|----------|---|
| Engine designation | TD102KCE | TD122KHE | |
| Pistons | New | New | |
| Camshaft | = Std. | Std. | |
| Cylinder head | Std. | Std. | |
| Turbo | Std. | Std. | |
| Intercooler | Т | Т | |
| Additional coolant pump | Т | Т | |
| | Built-in | Built-in | |
| Injection pump | New | New | |
| camshaft | New | NEW | |
| pump element | New | New | |
| cold-starting groove [1] 🛈 | No | No | |
| idling change-over | - | - | |
| delivery valve | New | New | |
| torque control | - | New | - |
| Delivery pipes | Std. | New | |
| Injectors | Std. | New | |
| Injection timing | New | New | |

Explanations:

Std. Component which is included in the standard engine New New component as compared with the standard engine T Additional component as compared with the standard engine

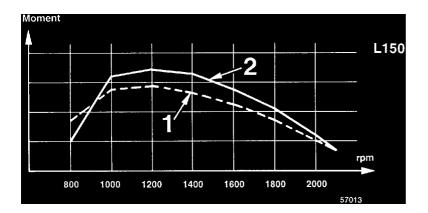


Figure 3

| 1 | Torque curve standard engine L150 |
|---|-----------------------------------|
| 2 | Torque curve, low-emission engine |

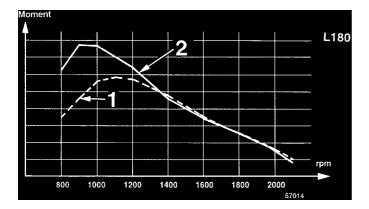


Figure 4

| 1 | Torque curve, standard engine L180 |
|---|------------------------------------|
| 2 | Torque curve, low-emission engine |



Figure 5 Emission values according to ece r49

| Standard | L150 | Low emission | L150 | Standard | L180 | Low emission | L180 |
|----------|-------|--------------|------------|-----------|--------|--------------|------------|
| Output | | Output | | Output | | Output | |
| kW/ | 180 | RW | 182 | k₩V | 211 | kW | |
| at rpm | 2100 | at rpm | 2100 | at rpm | 2100 | at rpm | 2100 |
| Torque | | Torque | | Torque | | Torque | |
| Nm | 1000 | Nm | 1030 | Nm | 1390 | Nm | 1588 |
| at rom | 1200 | at rpm | 1100 | at rom | 1100 | at rpm | 900 |
| | | | | | | | |
| | g/kWh | | g/kWh | | g/k¥th | | g√kWh |
| NOx | - | NOx | 7.4 | NOx | 15.4 | NOx | |
| HC | - | HC | 0.74 | HC | 0.53 | HC | 0.63 |
| CO | - | CO | 0.86 | CO | 2.00 | CO | 0.87 |
| PM | - | PM | 0.40 | FM | - | PM | |
| | | | | | | | |
| | g/h | | g/h 868 | | g/h | | g/h 797 |
| NOx | - | NOx | | NOx | 1767 | NOx | 797 |
| HC | - | HC | 43 | HC | 61 | HC | 72 |
| co | - | CO | 71 | CO | 229 | CO | 99 |
| PM | - | PM | 26 | FM | - | PM | |

Figure 6 Emission values according to california 8-mode and iso 8178

[1]Omitted as it is not required on the low-emission engine



| Document Title: | Information Type: | Date: |
|---------------------|---------------------|-------------------|
| Specifications L180 | Service Information | 2014/6/4 0 |
| Profile: | | |

Specifications L180

Unless otherwise stated, the following data apply to all three versions of the engine i.e. The basic, the low-emission and the high-altitude versions.

General

Type designation

| basic and high-altitude versions | TD122GH Engine no. 499185 |
|----------------------------------|----------------------------|
| low-emission version | TD122KHE Engine no. 499167 |

Flywheel output at 35.0 r/s (2100 rpm)

| basic and high-altitude versions | 202 kW (275 hp) SAE J 1349 Net 202 kW (275 hp) DIN 70020 Net |
|----------------------------------|---|
| low-emission version | 198 kW (269 hp) SAE J 1349 Net 198 kW (269 hp) DIN 70020 Net |

Output gross at 35.0 r/s (2100 rpm)

| basic and high-altitude versions | 211 kW (287 hp) SAE J 1349 Gross |
|----------------------------------|----------------------------------|
| low-emission version | 209 kW (284 hp) SAE J 1349 Gross |

Torque

| basic and high-altitude versions | 1380 N m (959 lbf ft) SAE J 1349 Net |
|----------------------------------|---|
| at 18.3 r/s (1100 rpm) | 1380 N m (1018 lbf ft) DIN 70020 Net |
| | 1390 N m (1025 lbf ft) SAE J 1349 Gross |
| low-emission version | 1570 N m (1158 lbf ft) SAE J 1349 Net |
| at 15 r/s (900 rpm) | 1580 N m (1165 lbf ft) SAE J 1349 Gross |
| | 1570 N m (1158 lbf ft) DIN 70020 Net |

| Number of cylinders | 6 |
|---|---|
| Cylinder bore | 130.17 mm (5.125 in) |
| Stroke | 150 mm (5.906 in) |
| Cylinder capacity, total | 12.0 litre |
| Compression ratio, basic and high-altitude versions | 15:1 |
| low-emission version | 16:1 |
| Compression pressure at starter motor revolutions | 2.6 MPa (26 bar) (377 psi) |
| Order of injection | 1 - 5 - 3 - 6 - 2 - 4 |
| | |
| Idling speed, low | 10.8 ±0.5 r/s (650 ±50 rpm) (823 ±63 Hz) |
| high | 37.9± 1.0 r/s (2275 ±60 rpm) (2880 ±75 Hz) |
| Valve clearance, cool engine, inlet valve | 0.40 mm (0.016 in) |
| exhaust valve | 0.70 mm (0.028 in) |
| Stalling speed, basic and high-altitude versions | 34.2 ±1.25 r/s (2050 ±75 rpm) (2595 ±95 Hz) |

| torque converter | | |
|---|---|--|
| torque conv. + lifting against overflow | 25.0 ±1.70 r/s (1500±100 rpm) (1899±127 Hz) | |
| torque conv. + tilting against overflow | 26.7±1.70 r/s (1600±100 rpm) (2025±127 Hz) | |
| | · · · · · · · · · · · · · · · · · · · | |
| | | |
| Stalling speed, low-emission version | 34.2±1.25 r/s (2050±75 rpm) (2595±95 Hz) | |
| Stalling speed, low-emission version torque converter | 34.2±1.25 r/s (2050±75 rpm) (2595±95 Hz) | |
| | 34.2±1.25 r/s (2050±75 rpm) (2595±95 Hz) 25.0±1.70 r/s(1500±100 rpm) (1899±127 Hz) | |



| Document Title: | Information Type: | Date: |
|-----------------|---------------------|-------------------|
| Starting engine | Service Information | 2014/6/4 0 |
| Profile: | | |

Starting engine

Description of function

With the ignition switch sw1 in position 3 the coil in relay re14 receives current via the ignition switch terminal 50. Relay re14 is activated and starter motor terminal 50 receives current via fuse fu15, relay re14 (30-87) and relay re13 (87a) and the starter motor is activated.

Relay re13, starter lock-out

When the selector control sw2a or any of switches sw43 or sw108 are moved to positions forward or reverse, the coil in relay re11 receives current, see description in section 4.

Relay re11 is activated and the coil in relay re13 receives current.

Relay re13 is activated and the current to the starter motor is interrupted, which prevents the starting of the engine with forward or reverse gear engaged.



Our support email: ebooklibonline@outlook.com