

Product: COMPACT WHEEL LOADER  
Model: 910 COMPACT WHEEL LOADER 80U  
Configuration: 910 WHEEL LOADER 80U00001-06734 (MACHINE)

## Disassembly and Assembly 3204 VEHICULAR ENGINE FOR D3 TRACTOR, 931 TRACK-TYPE LOADER

Media Number -REG01219-02

Publication Date -01/08/1978

Date Updated -10/10/2001


### Cylinder Head (Precombustion Chamber)

SMCS - 1100-11; 1100-12


### Remove Cylinder Head (Precombustion Chamber)

start by:

- a) remove rocker shaft and push rods (precombustion chamber)
- b) remove exhaust manifold

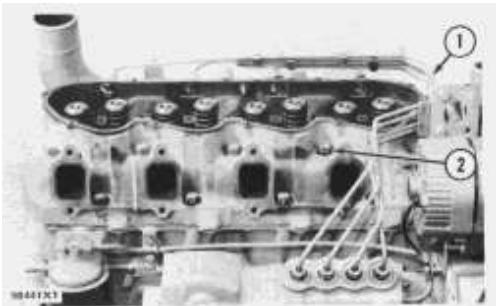


1. Remove fuel injection lines (1). Put caps on all openings to keep dirt out.
2. Loosen the hose clamp on the water connection between the head and timing gear cover.
3. Remove bolts (2) that hold the cylinder head to the cylinder block.

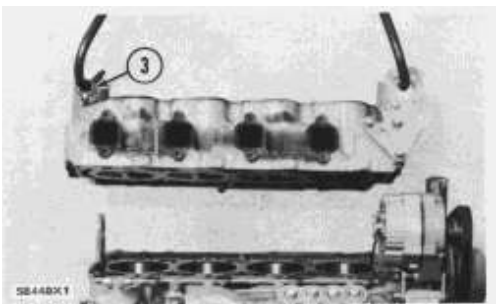

4. Install a 5/16"-18 NC forged eyebolt (3) in the cylinder head as shown. Fasten a hoist and remove the cylinder head. The weight is 130 lb. (59 kg).


## Install Cylinder Head (Precombustion Chamber)

1. Clean the surfaces of the cylinder head and the cylinder block that make contact with each other. Make sure the surfaces are clean and dry. Install a new, dry gasket on the cylinder block.

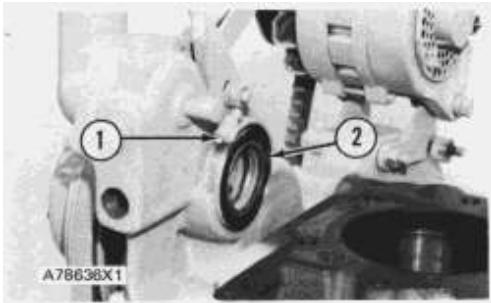

2. Inspect the condition of water ferrule and seal (2). Make a replacement if needed. Put water ferrule and seal (2) in position with the adjusting screw of hose clamp (1) toward the top and approximately 45° to the right of vertical as seen from the front of the engine.

3. Make sure the seal is installed all the way into counterbore.

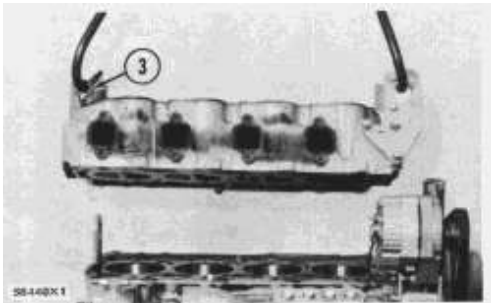

4. Install a 5/16"-18 NC forged eyebolt (3) in the head and fasten a hoist. Put the cylinder head in position on the cylinder block.

5. Put 5P3931 Anti-Seize Compound on the threads of the bolts and install the bolts that hold the cylinder head in place. Tighten the bolts in the cylinder head according to the following HEAD BOLT CHART.


end by:

a) install exhaust manifold

b) install rocker shaft and push rods (precombustion chamber)

## HEAD BOLT CHART

	*EARLIER BOLTS (with six dash marks)	*LATER BOLTS (with seven dash marks)
<b>Tightening Procedure</b>		
Step 1. Tighten bolts 1 through 18 in number sequence to:	60 ± 10 lb.ft. (80 ± 14 N·m)	60 ± 10 lb.ft. (80 ± 14 N·m)
Step 2. Tighten bolts 1 through 18 in number sequence to:	95 ± 5 lb.ft. (130 ± 7 N·m)	110 ± 5 lb.ft. (149 ± 7 N·m)
Step 3. Again tighten bolts 1 through 18 number sequence to:	95 ± 5 lb.ft. (130 ± 7 N·m)	110 ± 5 lb.ft. (149 ± 7 N·m)
*See BOLT HEAD IDENTIFICATION pictures for EARLIER and LATER identification.		
Torque for head bolts 19 through 22 (tighten in number sequence to)	32 ± 5 lb.ft. (43 ± 7 N·m)	

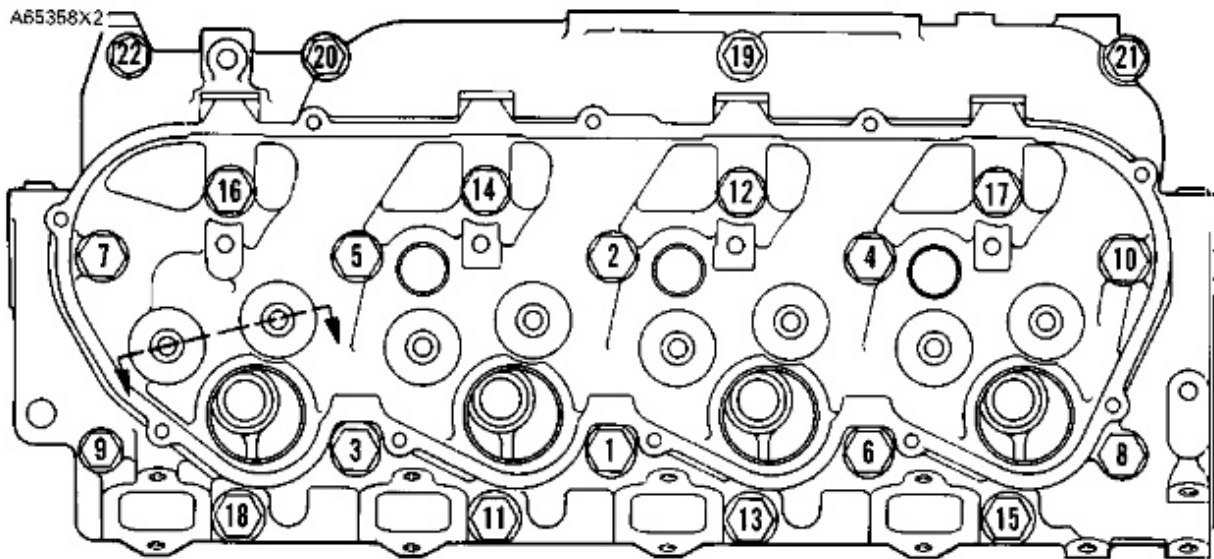

Product: COMPACT WHEEL LOADER  
 Model: 910 COMPACT WHEEL LOADER 80U  
 Configuration: 910 WHEEL LOADER 80U00001-06734 (MACHINE)

## Disassembly and Assembly 3204 VEHICULAR ENGINE FOR D3 TRACTOR, 931 TRACK-TYPE LOADER

Media Number -REG01219-02

Publication Date -01/08/1978

Date Updated -10/10/2001

### Cylinder Head


SMCS - 1101-15; 1101-16

### Disassemble Cylinder Head


	Tools Needed	A	B	C	D
FT806	Cylinder Head Stand	1			
FT967	Adapter Plate	2			
8S2263	Valve Spring Tester		1		
5S1330	Valve Spring Compressor			1	
8S7170	Valve Seat Insert Puller Group				1

start by:


a) remove cylinder heads

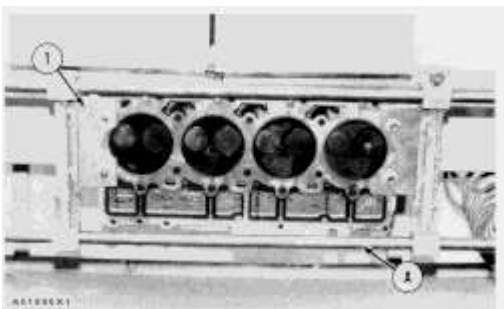


1. Fasten a hoist and put the cylinder head in position on tool (A). Use adapter plates (1) from tooling (A) to hold the head in place.

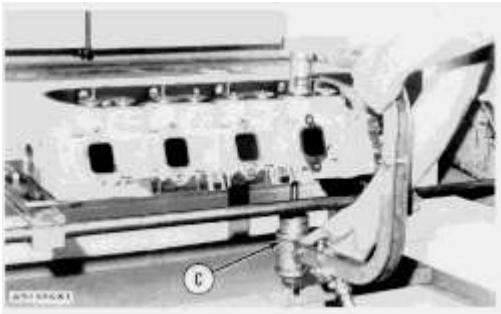

2. Put the valve springs under compression with tool (C).
3. Remove the locks from the valves.
4. Remove tool (C), retainer, spring, washer and valve from the cylinder head. Put identification on the valve as to its location in the cylinder head.

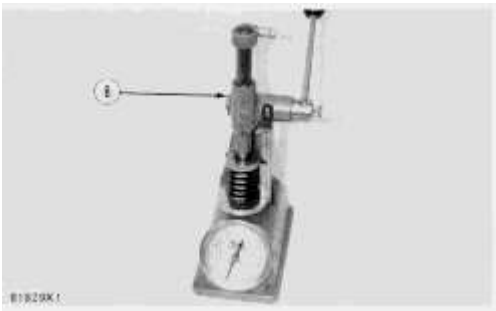

5. Check the valve spring force with tool (B). Spring force must be  $35 \pm 5$  lb. ( $155 \pm 22$  N) when the length of the spring force is 1.715 in. (43.56 mm).
6. Do Steps 2 through 5 for the remainder of the valves.

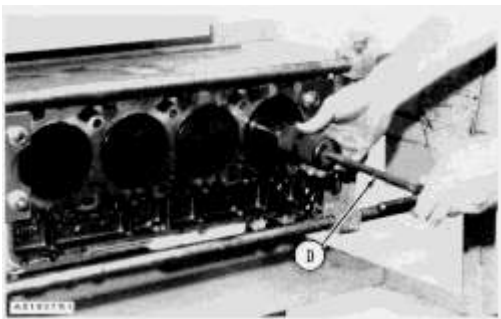


7. Remove the valve seat inserts with tooling (D).

**NOTE:** The valve guides are part of the cylinder head. Measure the bore in each valve guide .75 in. (19.0 mm) from the outside edge on both ends of each valve guide. The bore must be  $.3745 \pm .0005$  in. ( $9.512 \pm 0.013$  mm). The maximum permissible bore is .3760 in. (9.550 mm). Valve guides worn more than the maximum specification can be made to the original size by knurling. See RECONDITIONING PROCEDURES FORM NO. REG00867.

## Assemble Cylinder Head

Tools Needed		A	B	C
8S7170	Valve Seat Insert Puller Group	1		
5S1322	Valve Keeper Inserter		1	
5P1330	Valve Spring Compressor			1

1. Clean and remove burrs and all foreign material from the valve seat bores.

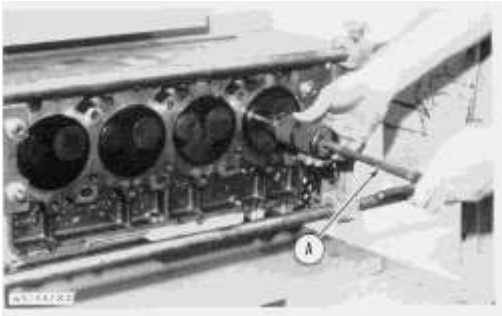

2. Lower the temperature of the valve seat inserts and install them with tooling (A).


---

### NOTICE


**Do not make the diameter of the extractor (part of tooling A) in valve seat insert larger when the insert is installed in the cylinder head.**

---

3. Grind the valve inserts according to specifications given in ENGINE SPECIFICATIONS.

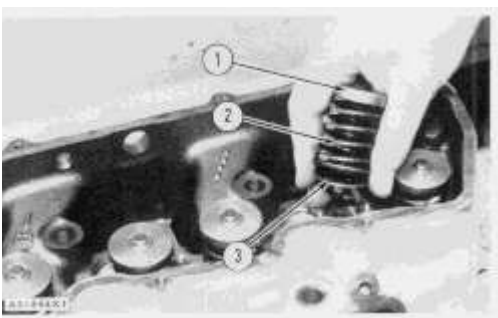


4. Put clean engine oil on the valve stem. Install the valve, washer (3), spring (2) and retainer (1) in the cylinder head.

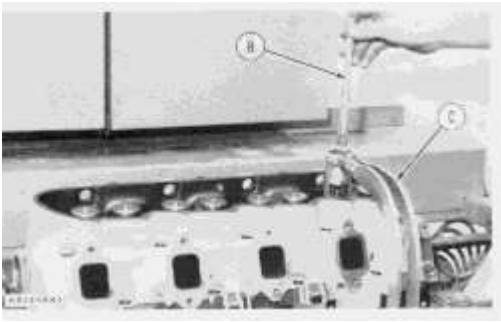

5. Put the valve spring under compression with tool (C).
6. Install the locks on the valve stem with tool (B).

 **WARNING**

**Make sure locks (4) are in their correct position on the valve. The locks can be thrown from the valve when tool (C) is released if the locks are not in their correct position on the valve.**

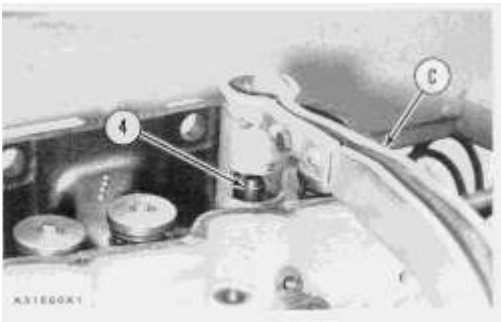

7. Remove tool (C) and hit the valve with a rubber hammer to be sure the locks are in their correct position.
8. Do Steps 4 through 7 for the remainder of the valves.

end by:

- a) install cylinder heads
-

Product: COMPACT WHEEL LOADER  
Model: 910 COMPACT WHEEL LOADER 80U  
Configuration: 910 WHEEL LOADER 80U00001-06734 (MACHINE)

## Disassembly and Assembly 3204 VEHICULAR ENGINE FOR D3 TRACTOR, 931 TRACK-TYPE LOADER

Media Number -REG01219-02

Publication Date -01/08/1978

Date Updated -10/10/2001

### Valve Lifters


SMCS - 1209-11; 1209-12

### Remove Valve Lifters

Tools Needed		A
8S2293	Magnet	1

start by:

a) remove cylinder head

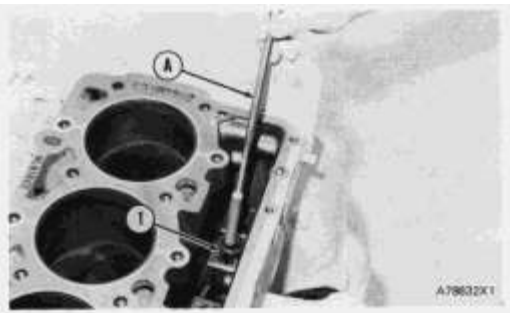


1. Remove valve lifters (1) from the cylinder block with tool (A).

### Install Valve Lifters

Tools Needed		A
8S2293	Magnet	1

1. Put STP Oil Treatment or Casite Motor Honey on the lifter face that makes contact with the camshaft.



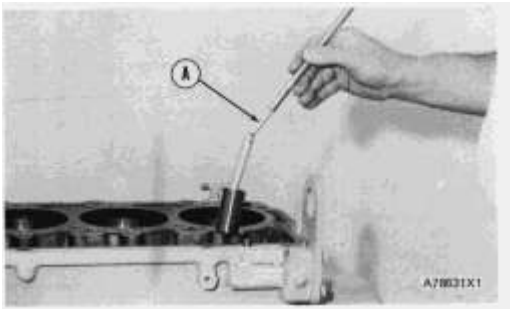

**2.** Install the valve lifters in the cylinder block with tool (A).

end by:

**a)** install cylinder head

---

Product: COMPACT WHEEL LOADER  
Model: 910 COMPACT WHEEL LOADER 80U  
Configuration: 910 WHEEL LOADER 80U00001-06734 (MACHINE)

## Disassembly and Assembly 3204 VEHICULAR ENGINE FOR D3 TRACTOR, 931 TRACK-TYPE LOADER

Media Number -REG01219-02


Publication Date -01/08/1978

Date Updated -10/10/2001

### Oil Pan

SMCS - 1302-11; 1302-12


### Remove Oil Pan

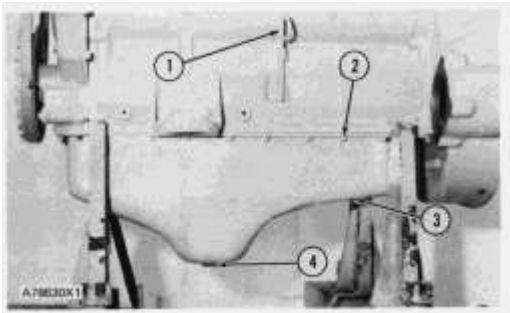

1. Remove drain plug (4) and drain the oil from the oil pan.
2. Remove oil level gauge (1). Remove bolts (2) that hold the oil pan in place.
3. Fasten a hoist to the engine. Lift the engine and remove oil pan (3).
4. Lower the engine on the engine stand.

### Install Oil Pan

1. Fasten a hoist and lift the engine. Inspect the oil pan gasket. Install a new one if needed.

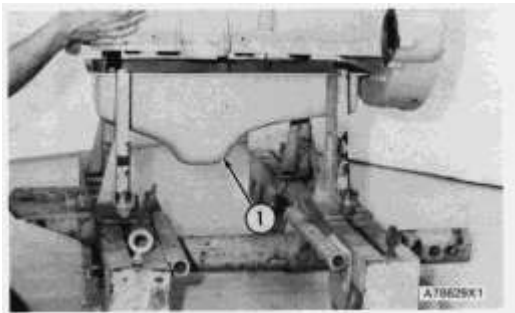

2. Put oil pan (1) in position on the engine stand as shown.

3. Lower the engine on to the oil pan. Install the bolts that hold the oil pan to the cylinder block.
  4. Install the oil level gauge.
  5. Tighten the drain plug to a torque of  $50 \pm 10$  lb.ft. ( $70 \pm 14$  N·m).
  6. Fill the engine with oil to the correct level.
-

Product: COMPACT WHEEL LOADER  
Model: 910 COMPACT WHEEL LOADER 80U  
Configuration: 910 WHEEL LOADER 80U00001-06734 (MACHINE)

## Disassembly and Assembly 3204 VEHICULAR ENGINE FOR D3 TRACTOR, 931 TRACK-TYPE LOADER

Media Number -REG01219-02

Publication Date -01/08/1978

Date Updated -10/10/2001

### Connecting Rod Bearings


SMCS - 1219-10

### Remove And Install Connecting Rod Bearings

Tools Needed		A
5B1161	Wire	•

start by:

a) remove oil pan

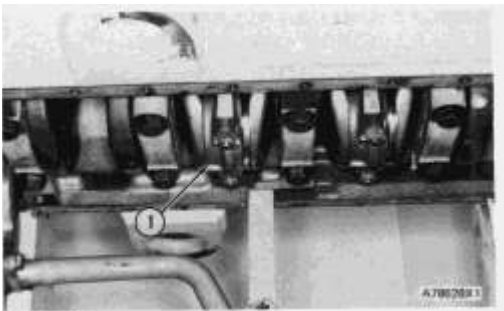

1. Turn the crankshaft until two pistons are at bottom center. Remove connecting rod caps (1) from the two connecting rods. Remove the lower half of the bearings from the caps.
2. Push the connecting rods away from the crankshaft and remove the upper half of the bearings.

---

#### NOTICE

**Be careful not to damage the crankshaft journals. Do not turn the crankshaft while any of the connecting rod caps are removed.**

---

3. Clean the surfaces where the bearings fit. Install the upper half of the new bearings in the rods. Put clean SAE 30 oil on the bearings and crankshaft journals. Put the connecting rods in position on the crankshaft.



4. Clean the surfaces where the bearings fit. Install the lower half of the new bearings in the caps. Put clean SAE 30 oil on the bearings, bolt threads and contact surfaces of the nuts.

---


### NOTICE

**When the connecting rod caps are installed make sure that the numbers on the side of the caps are next to and respective with the number on the side of the connecting rods.**

---

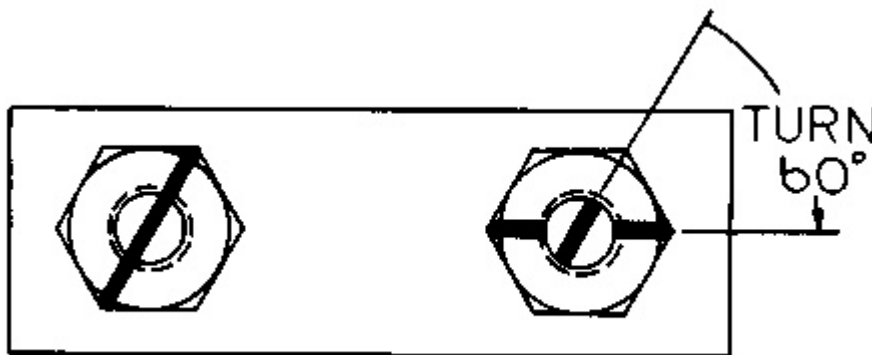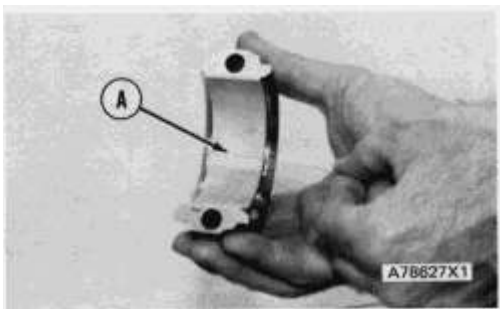

93833X1

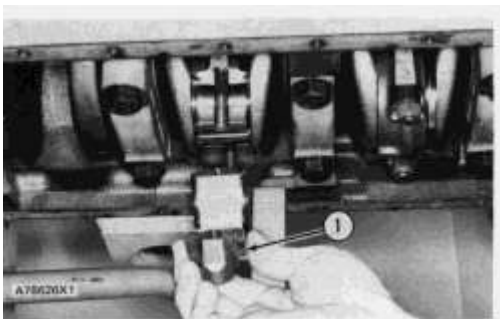

5. Check the bearing clearance with wire (A). Put the caps (1) in position on the connecting rods and install the nuts. Tighten the nuts to a torque of  $30 \pm 3$  lb.ft. ( $40 \pm 4$  N·m). Put a mark on each nut and the end of each bolt. Tighten the nuts  $60^\circ \pm 5^\circ$  more.

**6.** Remove the cap. Measure the thickness of the wire. The rod bearing clearance must be  $.0033 \pm .0018$  in. ( $0.084 \pm 0.046$  mm). The maximum permissible clearance is  $.007$  in. ( $0.18$  mm).

**7.** Put the caps in position on the connecting rods and install the nuts. Tighten the nuts to a torque of  $30 \pm 3$  lb.ft. ( $40 \pm 4$  N·m). Put a mark on each nut and the end of each bolt. Tighten the nuts  $60^\circ \pm 5^\circ$  more.

**8.** Do Steps 1 through 7 again for the other bearings.

end by:

**a)** install oil pan

---

Product: COMPACT WHEEL LOADER  
Model: 910 COMPACT WHEEL LOADER 80U  
Configuration: 910 WHEEL LOADER 80U00001-06734 (MACHINE)

## Disassembly and Assembly 3204 VEHICULAR ENGINE FOR D3 TRACTOR, 931 TRACK-TYPE LOADER

Media Number -REG01219-02

Publication Date -01/08/1978

Date Updated -10/10/2001

### Crankshaft Main Bearings

SMCS - 1203-10


### Remove And Install Crankshaft Main Bearings

	Tools Needed	A	B	C
2P5518	Bearing Tool	1		
5B1161	Wire		*	
8S2328	Dial Test Indicator Group			1

start by:


a) remove oil pan

1. The main bearing caps are installed with the part number toward the front of the engine. Each cap has a number on the bottom of the cap which is the same as the number on the camshaft side of the cylinder block.

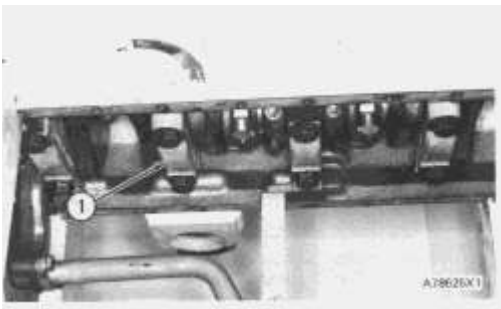

2. Remove the bolts that hold main cap (1). Remove bearing cap (1) and the lower half of the main bearing.

3. Remove the bearing from the cap.

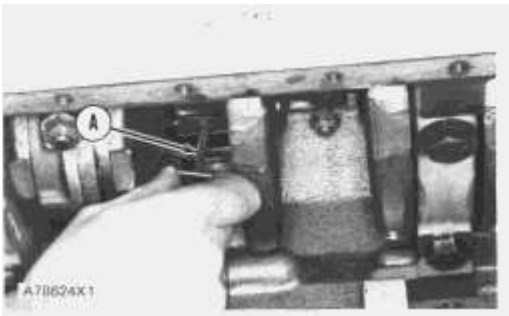

4. Turn the crankshaft until tool (A) can be installed in the oil hole in the crankshaft journal. Install tool (A). Turn the crankshaft in the direction which will push the upper main bearing out, tab end first.

---

### NOTICE

**If the crankshaft is turned in the wrong direction, the tab of the bearing will be pushed between the crankshaft and the cylinder block. This will cause damage to the crankshaft and block.**

---

5. Put clean engine oil on the lower bearings. Install lower bearings in the bearing caps.
6. Put clean engine oil on the upper bearings (the bearing with the oil hole). Install upper bearings in the cylinder block with tool (A).


**NOTE:** Be sure the tab on the back of the bearings fits in the groove of the caps and cylinder block.

---

### NOTICE

**When bearing caps are installed, make sure the caps are installed with the part number toward the front of the engine and the number on the bottom of the cap is the same as the number on the camshaft side of the engine.**

---

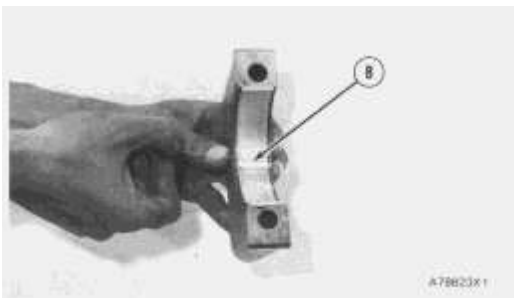

**NOTE:** When the bearing clearance is checked and the engine is in a vertical position, such as in the vehicle, the crankshaft will have to be lifted up and held against the upper halves of the main




bearings to get a correct measurement with wire (B). The wire will not hold the weight of the crankshaft and give a correct indication. If the engine is in a horizontal position, such as on an engine stand, it is not necessary to hold the crankshaft up. Do not turn crankshaft when lead wire is in position to check clearance. If lead wire is not available, PLASTIGAGE can be used to check bearing clearance.

7. Check the bearing clearance with tool (B) as follows:

a) Put tool (B) and cap (1) in position and install the bolts. Tighten the bolts to a torque of  $120 \pm 10$  lb.ft. ( $160 \pm 14$  N·m).


b) Remove the bearing cap and measure the thickness of the wire. The main bearing clearance must be .0030 to .0066 (0.076 to 0.168 mm). The maximum permissible clearance is .010 in. (0.25 mm).

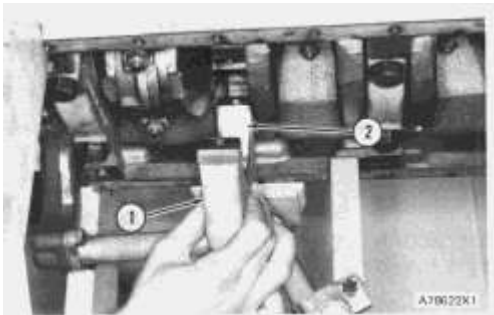

8. Put clean SAE 30 oil on the bolt threads and lower half of the main bearing. Put bearing cap (1) and lower half of main bearing (2) in position on the engine. Install the bolts. Tighten the bolts to a torque of  $120 \pm 10$  lb.ft. ( $160 \pm 14$  N·m).

9. Do Steps 1 through 9 for the remainder of the bearings.

**NOTE:** When a replacement of the thrust plates on No. 3 main bearing is made, install the thrust plates with the identification "BLOCK SIDE" next to the block.

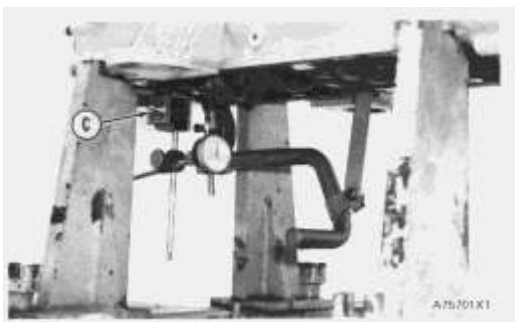

10. Check the crankshaft end play with tooling (C). The end play is controlled by the thrust bearing on No. 3 main bearing. The end play with a new bearing must be .0025 to .0190 in. (0.064 to 0.483 mm). The maximum permissible end play for used bearings is .035 in. (0.89 mm).

---

Product: COMPACT WHEEL LOADER  
Model: 910 COMPACT WHEEL LOADER 80U  
Configuration: 910 WHEEL LOADER 80U00001-06734 (MACHINE)

## Disassembly and Assembly 3204 VEHICULAR ENGINE FOR D3 TRACTOR, 931 TRACK-TYPE LOADER

Media Number -REG01219-02

Publication Date -01/08/1978

Date Updated -10/10/2001

### Pistons


SMCS - 1214-11; 1214-12

### Remove Pistons


Tools Needed		A
8S2269	Ridge Reamer	1

start by:

- a) remove cylinder head
- b) remove oil pan

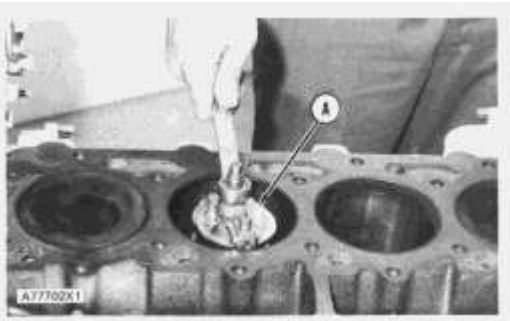


1. Remove the carbon ridge from the top inside surface of the cylinders with tool (A).
2. Turn the crankshaft until two pistons are at bottom center.

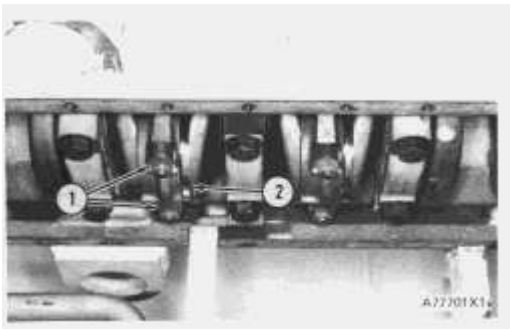

3. Remove two nuts (1). Remove rod cap (2). Put pieces of rubber hose or tape on the threads of the connecting rod bolts as protection for the crankshaft.

4. Push the piston and connecting rod away from the crankshaft until the piston rings are above the cylinder block.

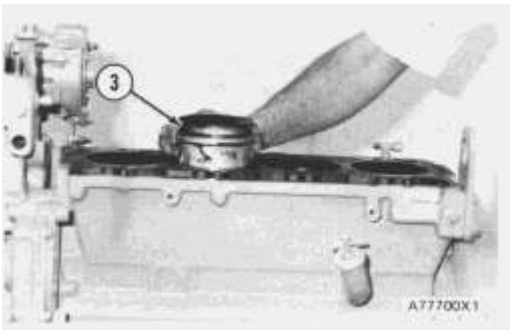

5. Remove piston (3) and the connecting rod. Keep each connecting rod with its respective connecting rod and piston.

---

### NOTICE

**Do not turn the crankshaft while any of the connecting rods are in the engine without the caps installed.**

---

6. Do Steps 2 through 5 for the remainder of the pistons.



## Install Pistons

	Tools Needed	A	B
5P3524	Ring Compressor	1	
5B1161	Wire		*

1. Put clean engine oil on the piston rings, connecting rod bearings, cylinder walls and crankshaft bearing journals.

2. Turn the crankshaft until the bearing journal for the piston to be installed is at bottom center.

3. Make sure the piston ring gaps are at least 120° apart on the piston.

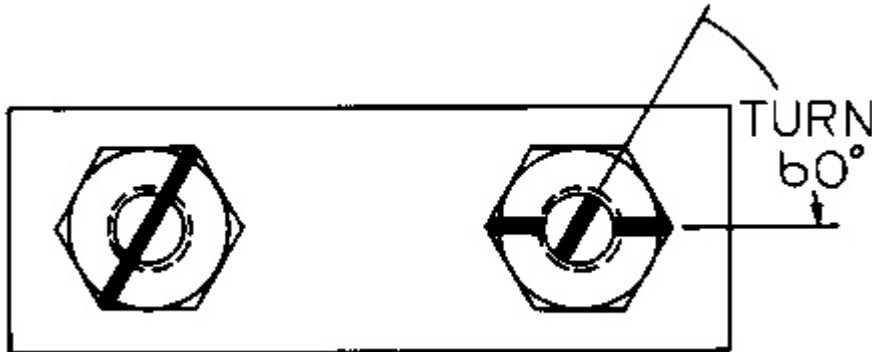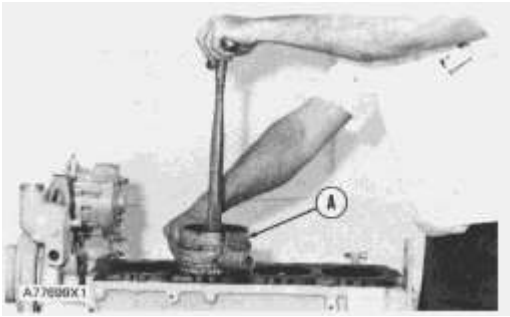

93833X1

4. Use tool (A) and install the piston in the engine in the same cylinder bore from which it was removed. The hole (crater) in the top of the piston must be toward the camshaft side of the engine for direct injection engines. The valve reliefs in the top of the piston for the precombustion engine must be toward the camshaft side of the engine.

**NOTE:** For more detail about the installation of connecting rod bearings see REMOVE AND INSTALL CONNECTING ROD BEARINGS.

5. Check the bearing clearances with tool (B).


6. Put clean engine oil on the threads of the bolts and contact surfaces of the nuts for the connecting rod caps.

---

### NOTICE

**When the connecting rod caps are installed, make sure that the number on the side of the cap is next to and respective with the number on the side of the connecting rod.**

---

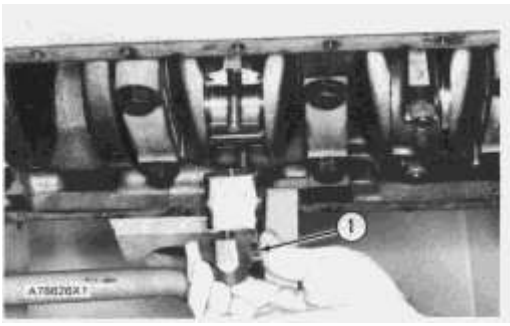

7. Put the cap (1) in position on the connecting rod and install the nuts. Tighten the nuts to a torque of  $30 \pm 3$  lb.ft. ( $40 \pm 4$  N·m). Put a mark on each nut and the end of each bolt. Tighten the nuts  $60 \pm 5^\circ$  more.

8. Do Steps 1 through 7 for the remainder of the pistons.

end by:

a) install cylinder heads

b) install oil pan

---

Thank you so much for reading.  
Please click the “Buy Now!”  
button below to download the  
complete manual.



After you pay.

You can download the most  
perfect and complete manual in  
the world immediately.

Our support email:

[ebooklibonline@outlook.com](mailto:ebooklibonline@outlook.com)