

Product: TRACK LOADER

Model: 953K TRACK LOADER LJT

Configuration: 953K Track-Type Loader LJT00001-UP (MACHINE) POWERED BY C7.1 Engine

## Disassembly and Assembly 953K Track-Type Loader Power Train

Media Number -M0073767-00

Publication Date -01/10/2016

Date Updated -26/10/2016

i06841166

# Final Drive and Sprocket - Disassemble

SMCS - 4050-015; 4164-015

## Disassembly Procedure

Table 1

Required Tools			
Tool	Part Number	Part Description	Qty
A	1P-2420	Transmission Repair Stand	1
	FT-0996	Positioning Gp	1
	FT-0957	Positioning Gp	1
B	439-3938	Link Bracket	2
C	1U-6400	Three Jaw Puller	1
D	1P-0820	Hydraulic Puller	1
	3H-0465	Push-Puller Plate	4
	5F-7369	Puller Leg	2
	350-7768	Electric Hydraulic Pump Gp (115 V)	1
	350-7769	Electric Hydraulic Pump Gp (230 V)	1
	4C-5655	Threaded Adapter	2
	1P-0527	Plate	1
E	439-3940	Link Bracket	2
F	1P-2322	Combination Puller	1
G	1P-0074	Slide Hammer Puller Gp	1

**Start By:**

- a. Remove the final drive and sprocket.
- b. Remove the track brakes.

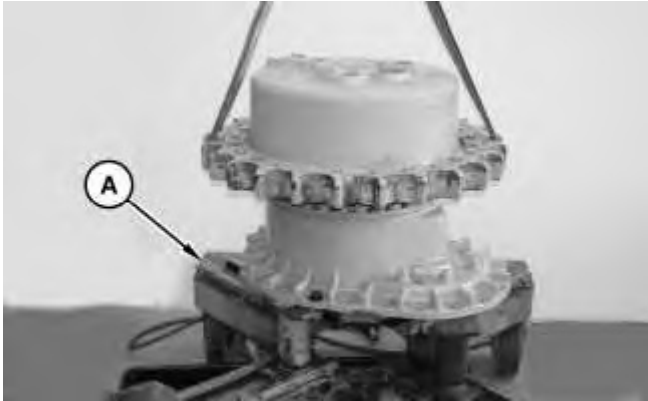


Illustration 1

g01291262



Illustration 2

g01291250

1. Attach Tooling (A) and a suitable lifting device to the final drive. The weight of the final drive is approximately 522 kg (1150 lb). Position the final drive onto Tooling (A).
  2. Remove bolts (1) and sprocket segments (2).
-

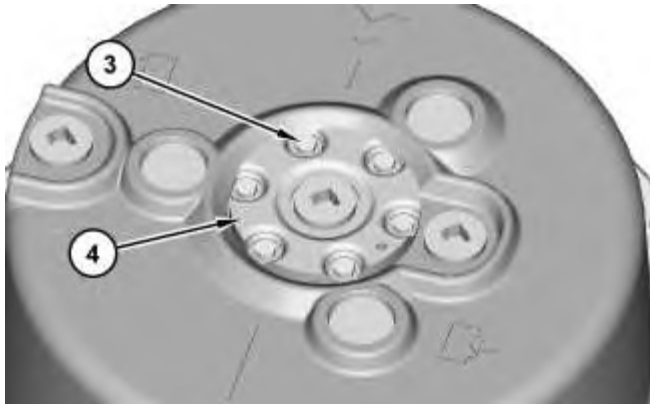


Illustration 3

g01291251

3. Remove bolts (3) and cover (4).



Illustration 4

g01291267

4. Remove sun gear shaft (5).

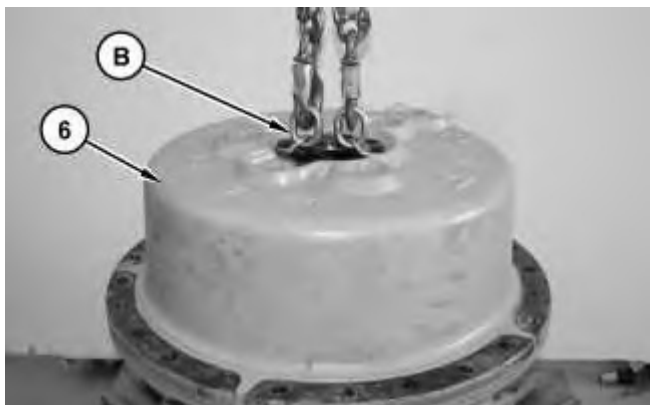


Illustration 5

g01291271

5. Attach Tooling (B) and a suitable lifting device to carrier assembly (6). The weight of carrier assembly (6) is approximately 136 kg (300 lb). Remove carrier assembly (6).

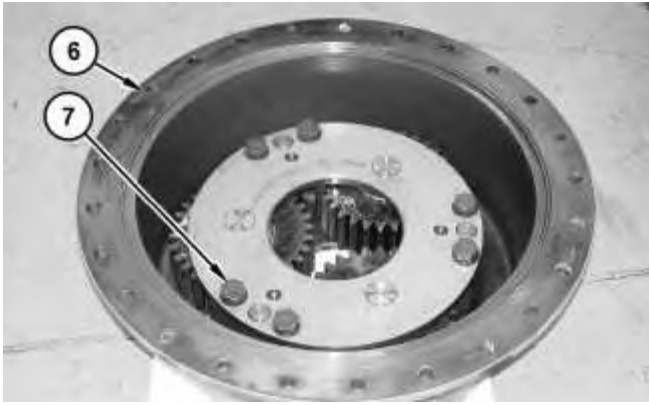


Illustration 6

g01291290

6. Reposition carrier assembly (6) and remove bolts (7).

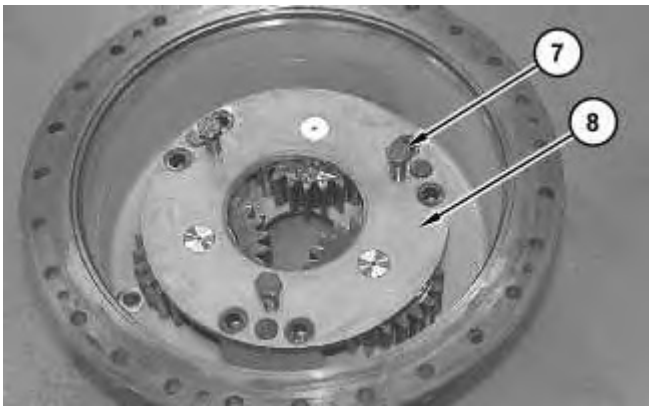


Illustration 7

g01291345

7. Use bolts (7) to remove plate (8).

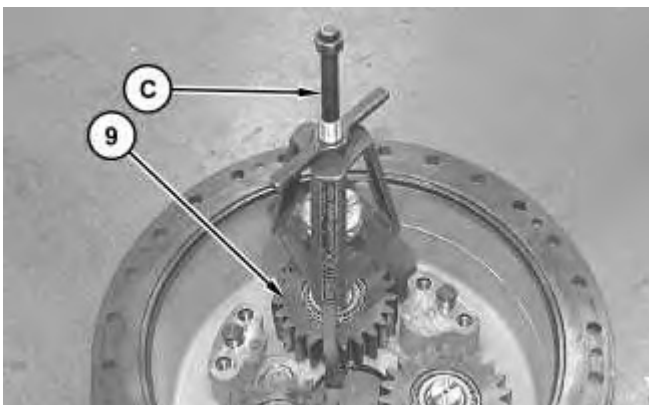


Illustration 8

g01291348

8. Install Tooling (C) to remove the gear and shaft assembly (9).

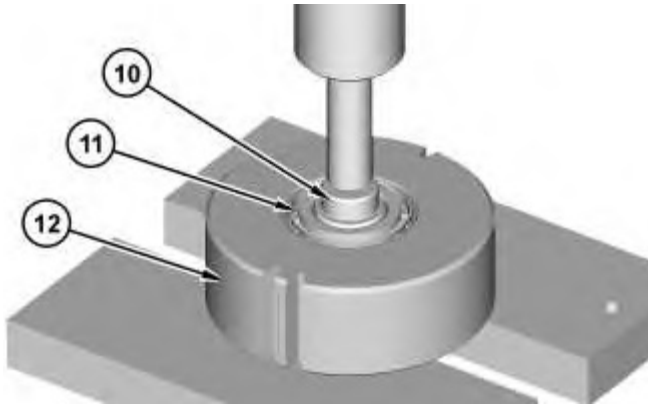


Illustration 9

g01297364

9. Use a suitable press to remove shaft (10) from bearing cone (11) and gear and shaft assembly (12).
10. Place shaft (10) and the bearing cone in a position to remove the remaining bearing cone from the other end of shaft (10).

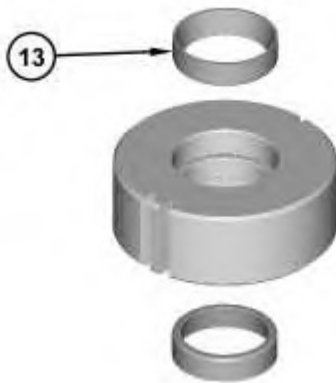


Illustration 10

g01297505

11. Remove bearing cups (13).



Illustration 11

g01291305

12. Remove bolts (14) and retainer (15).



Illustration 12

g01291308

13. Attach a suitable lifting device to ring gear assembly (16). The weight of ring gear assembly (16) is approximately 45 kg (100 lb). Remove ring gear assembly (16).

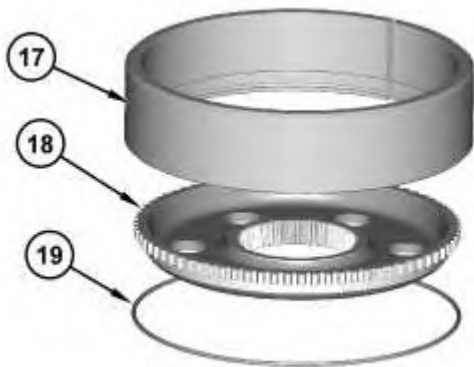


Illustration 13

g01291315

14. Remove retaining ring (19) and hub (18) from ring gear (17).
-

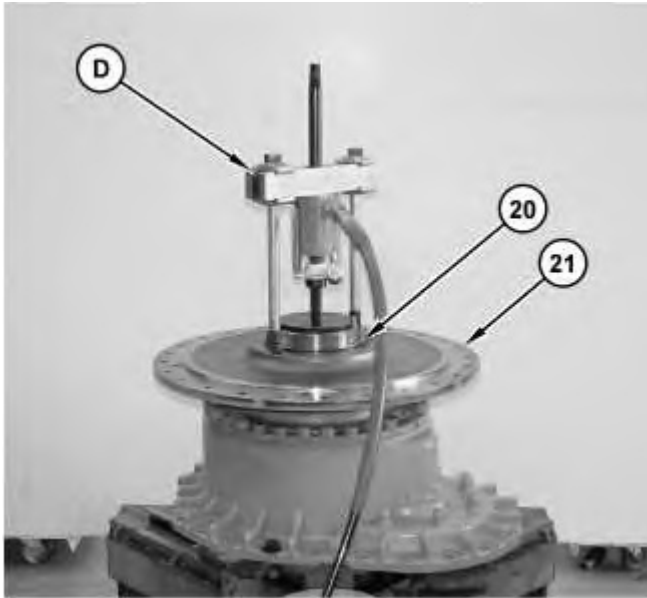


Illustration 14

g01291318

15. Use Tooling (D) to remove bearing cone (20) and hub (21).

**Note:** Maximum pressure must not exceed 39300 kPa (5700 psi) or damage to the Tooling or the component could result.

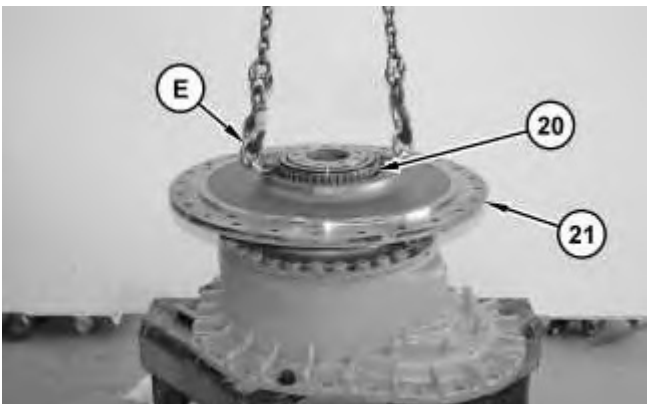


Illustration 15

g01291320

16. Remove bearing cone (20).
17. Attach Tooling (E) and a suitable lifting device to hub (21). The weight of hub (21) is approximately 73 kg (160 lb). Remove hub (21).

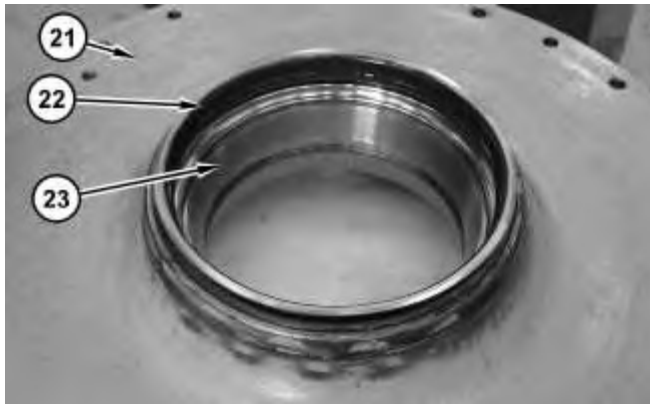


Illustration 16

g01291328

18. Remove Duo-Cone seal (22) and bearing cup (23) from hub (21).



Illustration 17

g01291331


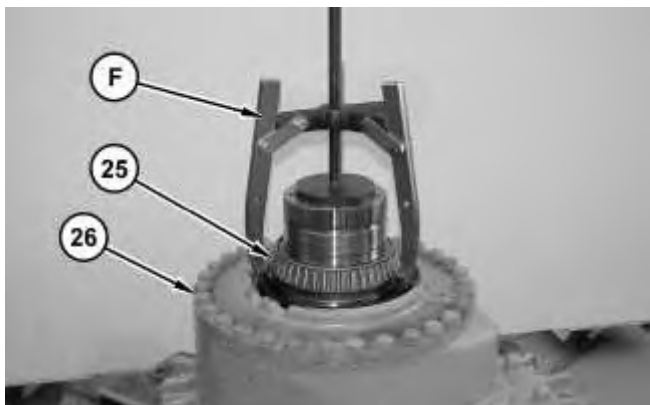


Illustration 18

g01291330



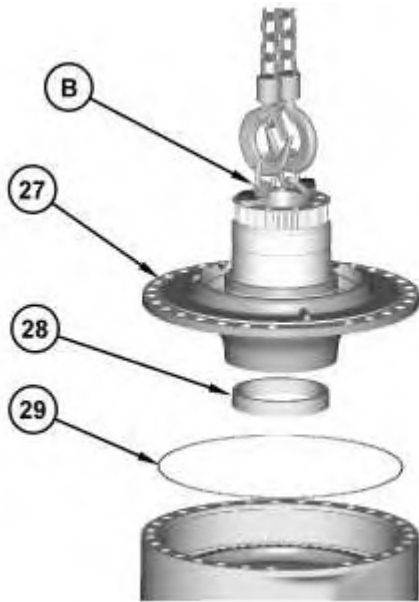


---

Illustration 19

g01291737

19. Remove Duo-Cone seal (24).
20. Use Tooling (F) to remove bearing cone (25).
21. Attach Tooling (B) and a suitable lifting device to hub assembly (27). The weight of hub assembly (27) is approximately 128 kg (282 lb). Remove bolts (26), hub assembly (27), and O-ring seal (29).
22. Remove bearing race (28) from hub assembly (27).

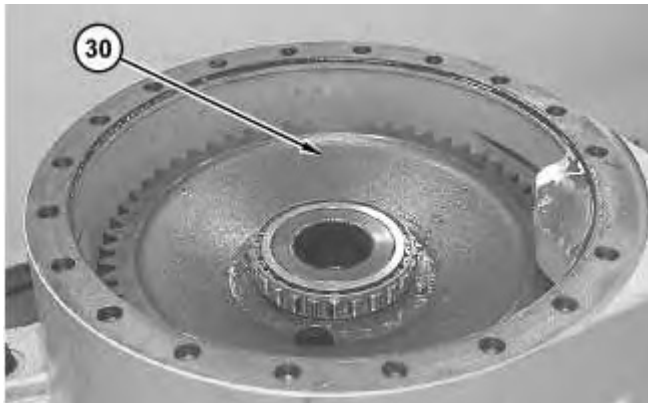

---

Illustration 20

g01291684

---

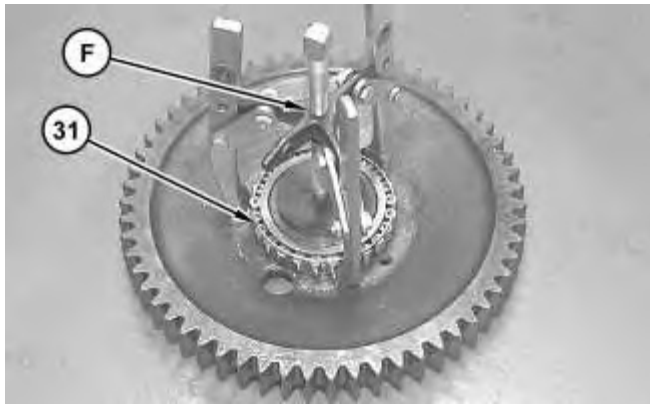


Illustration 21

g01291747

23. Remove gear (30).
24. Use Tooling (F) to remove bearing (31) from gear (30).

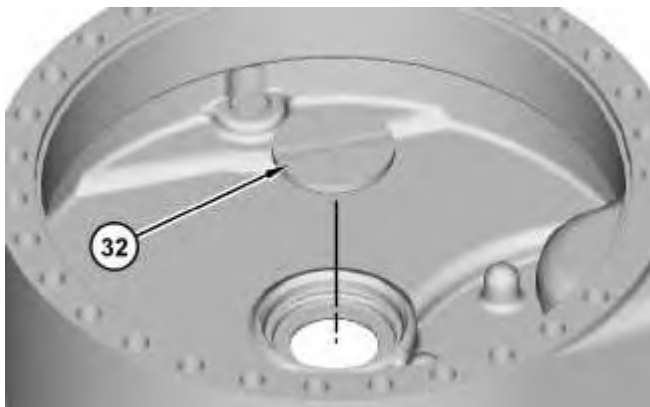


Illustration 22

g01291853

25. Remove thrust plate (32).

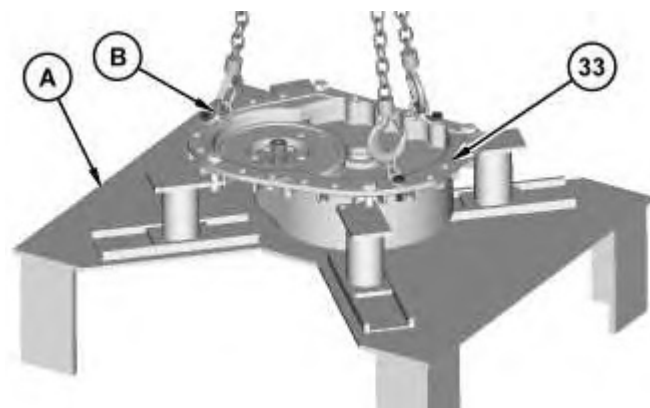


Illustration 23

g01291930

26. Attach Tooling (B) and a suitable lifting device to housing assembly (33). The weight of housing assembly (33) is approximately 75 kg (165 lb). Position housing assembly (33) onto Tooling (A).

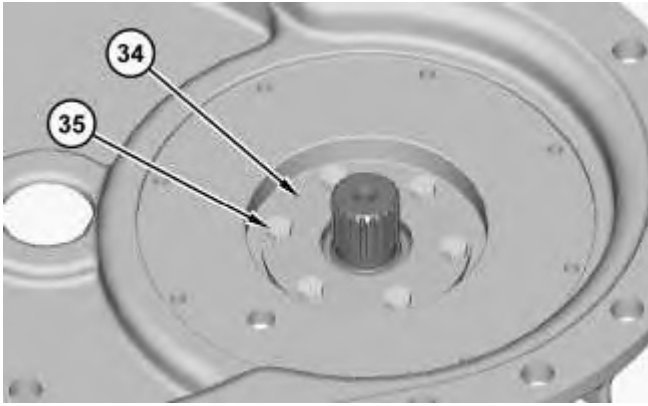


Illustration 24

g01291919

27. Remove bolts (35) and plate (34).

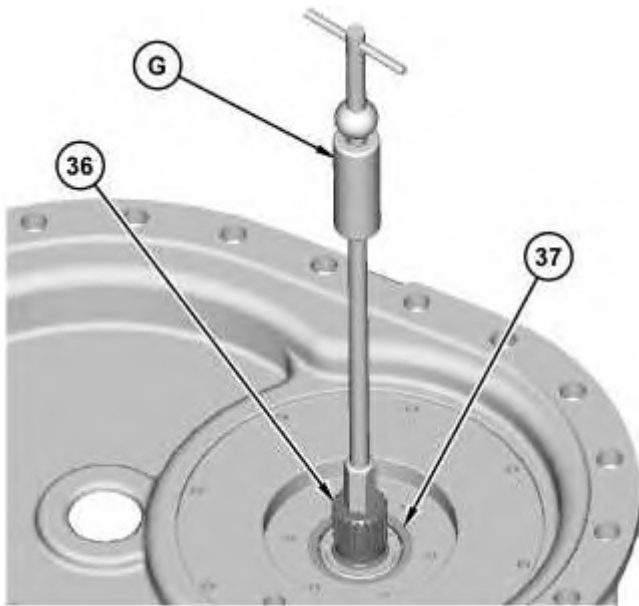


Illustration 25

g01291922

28. Use Tooling (G) to remove gear assembly (36) and upper bearing cup (37).
-

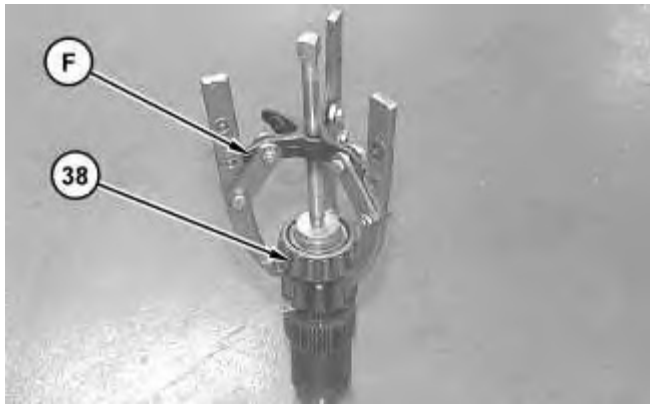


Illustration 26

g01292019

29. Use Tooling (F) to remove bearing cones (38).

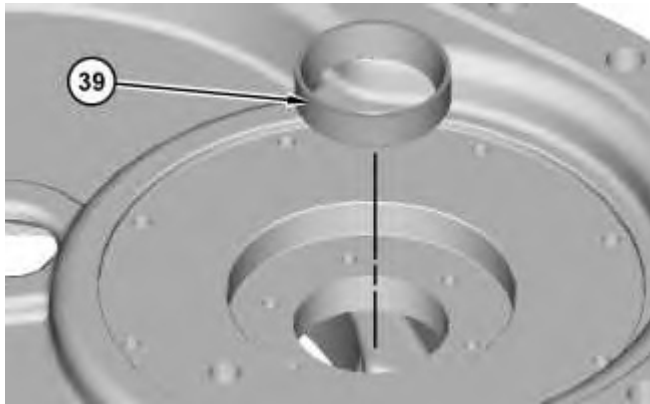


Illustration 27

g01291923

30. Remove lower bearing cup (39).
-

Product: TRACK LOADER

Model: 953K TRACK LOADER LJT

Configuration: 953K Track-Type Loader LJT00001-UP (MACHINE) POWERED BY C7.1 Engine

## Disassembly and Assembly 953K Track-Type Loader Power Train

Media Number -M0073767-00

Publication Date -01/10/2016

Date Updated -26/10/2016

i07024228

# Final Drive and Sprocket - Assemble

SMCS - 4050-016; 4164-016

## Assembly Procedure

Table 1

Required Tools			
Tool	Part Number	Part Description	Qty
A	1P-2420	Transmission Repair Stand	1
	FT-0996	Positioning Gp	1
	FT-0957	Positioning Gp	1
B	439-3938	Link Bracket	2
E	439-3940	Link Bracket	2
F	1U-9895	Crossblock	1
H	-	Loctite 5127	-

**Note:** Check the O-ring seals, the gaskets, and the seals for wear or for damage. Replace the components, if necessary.

---

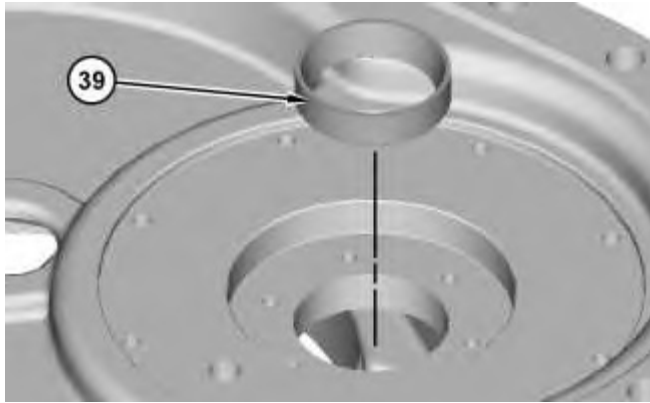


Illustration 1

g01291923

1. Lower the temperature of lower bearing cup (39) and install lower bearing cup (39).



Illustration 2

g01297731

2. Raise the temperature of bearing cones (38) and install bearing cones (38).

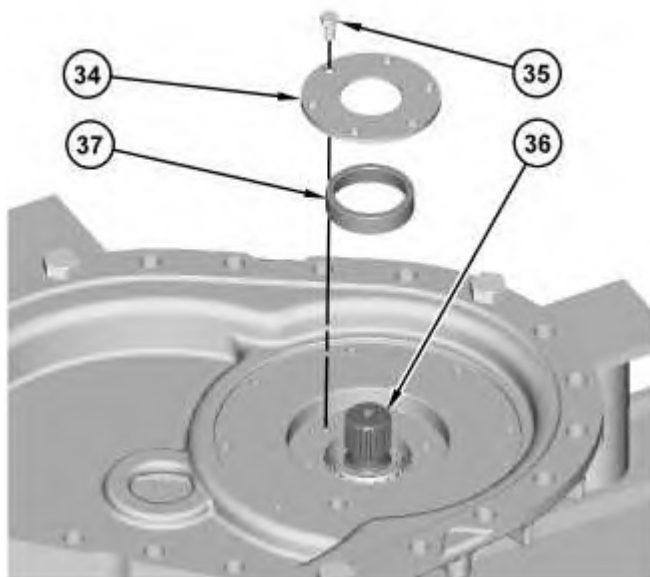


Illustration 3

g01297748

3. Install gear assembly (36). Lower the temperature of upper bearing cup (37) and install upper bearing cup (37).
4. Install plate (34) and bolts (35).

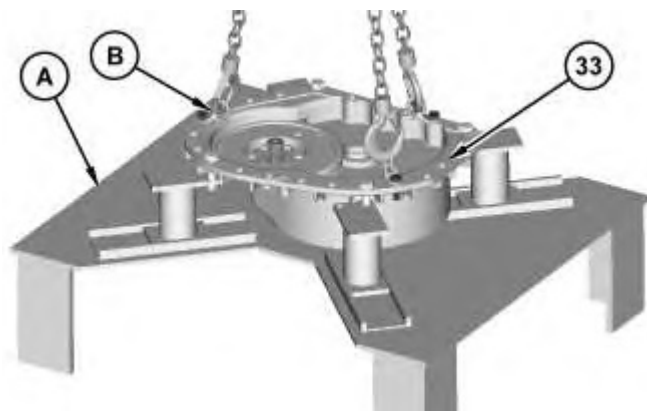


Illustration 4

g01291930


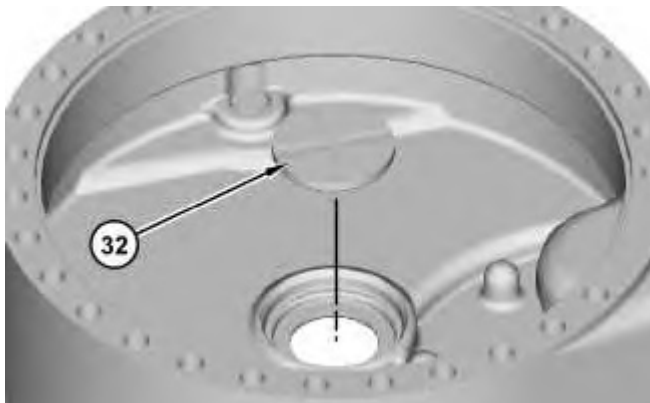


Illustration 5

g01291853

5. Attach Tooling (B) and a suitable lifting device to housing assembly (33). The weight of housing assembly (33) is approximately 75 kg (165 lb).
6. Reposition housing assembly (33). Install thrust plate (32).

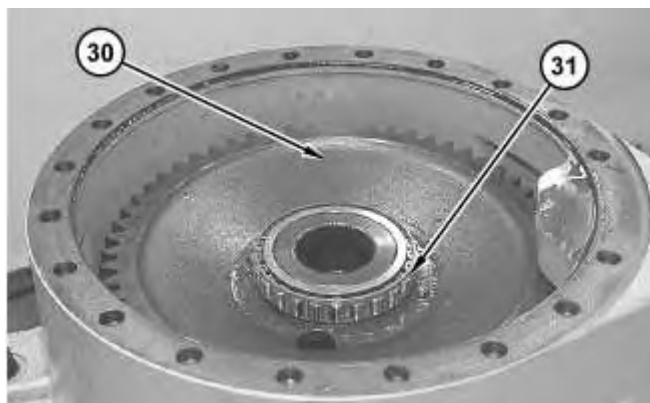

7. Raise the temperature of bearing (31) and install bearing (31) onto gear (30). Install gear (30).

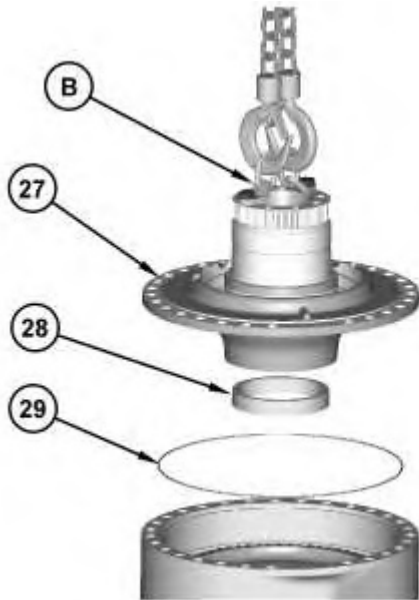


Illustration 7

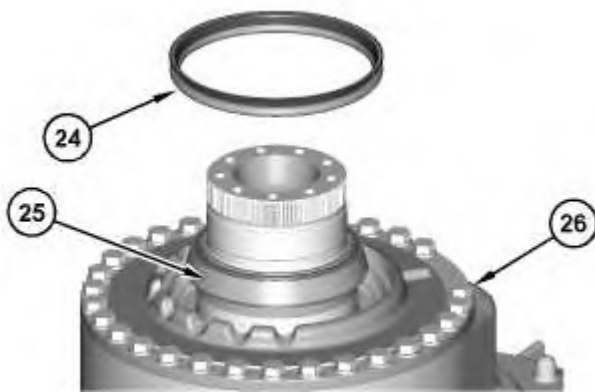


Illustration 8

8. Lower the temperature of bearing race (28) and install bearing race (28) into hub assembly (27).
  9. Attach Tooling (B) and a suitable lifting device to hub assembly (27). The weight of hub assembly (27) is approximately 128 kg (282 lb). Install O-ring seal (29), hub assembly (27), and bolts (26). Tighten bolts (26) to a torque of  $300 \pm 40 \text{ N}\cdot\text{m}$  ( $221 \pm 30 \text{ lb ft}$ ).
  10. Raise the temperature of bearing cone (25) and install bearing cone (25).
  11. Install Duo-Cone seal (24). Refer to Disassembly and Assembly, "Duo-Cone Conventional Seals - Install".
-



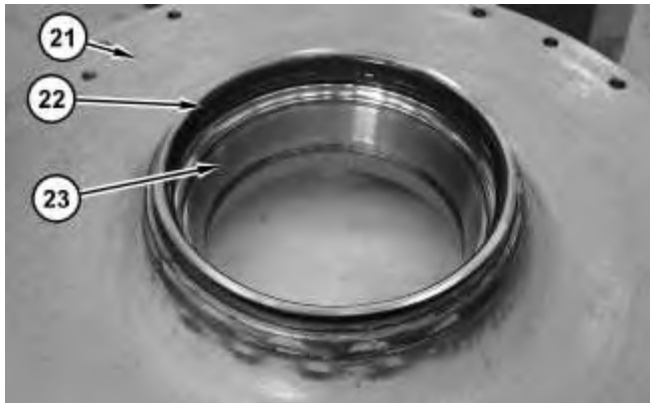


Illustration 9

g01291328

12. Lower the temperature of bearing cup (23) and install bearing cup (23). Install Duo-Cone seal (22) into hub (21). Refer to Disassembly and Assembly, "Duo-Cone Conventional Seals - Install".

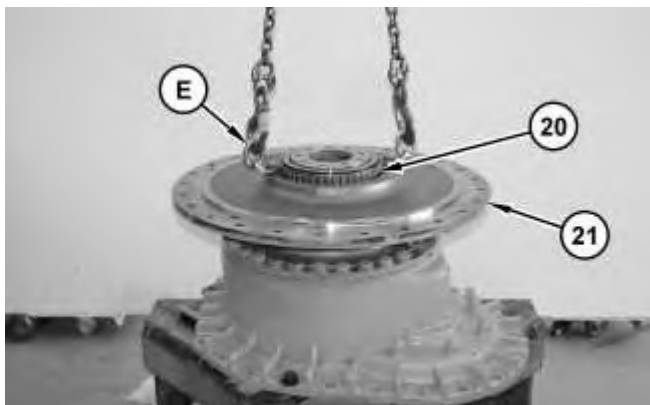


Illustration 10

g01291320

13. Attach Tooling (E) and a suitable lifting device to hub (21). The weight of hub (21) is approximately 73 kg (160 lb). Install hub (21).
14. Raise the temperature of bearing cone (20) and install bearing cone (20).

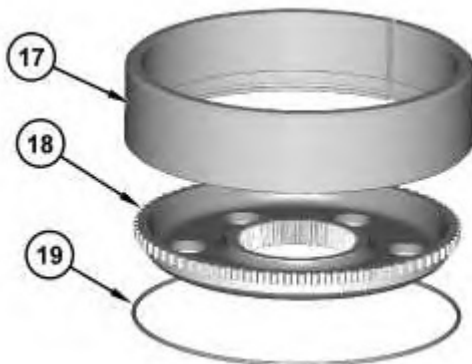


Illustration 11

g01291315

15. Install hub (18) and retaining ring (19) onto ring gear (17).



Illustration 12

g01291308

16. Attach a suitable lifting device to ring gear assembly (16). The weight of ring gear assembly (16) is approximately 45 kg (100 lb). Install ring gear assembly (16).

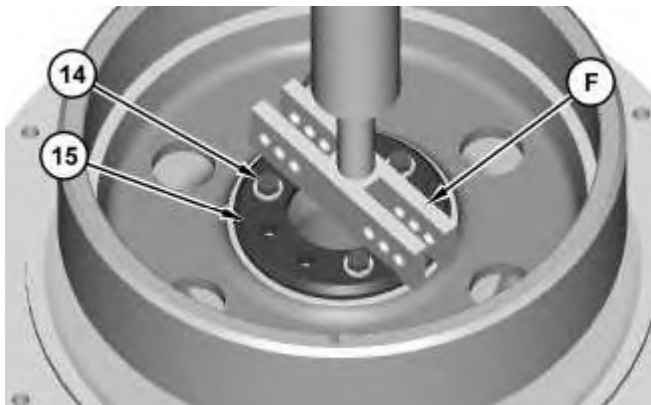


Illustration 13

g01300489

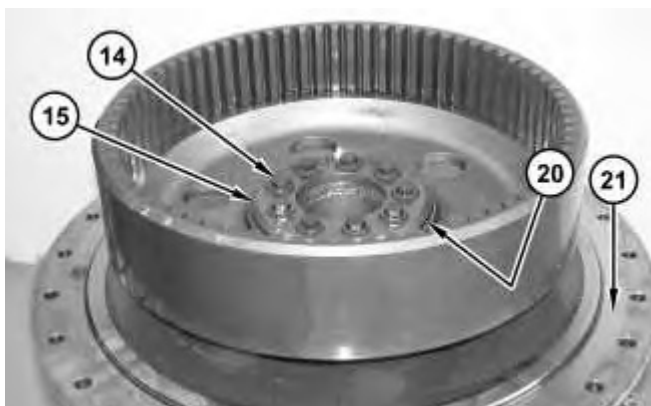



Illustration 14

g01297769

17. To properly seat bearing cone (20), use Tooling (F) and a suitable press to apply an axial load of 120000 N (26977 lb). Continually rotate hub (21). Install three of bolts (14) that are

located 120 degrees from each other and retainer (15). Tighten the bolts evenly to a torque of  $95 \pm 10 \text{ N}\cdot\text{m}$  ( $70 \pm 7 \text{ lb ft}$ ).

18. Remove Tooling (F) and install remaining bolts (14). Tighten all bolts (14) to a torque of  $120 \pm 20 \text{ N}\cdot\text{m}$  ( $89 \pm 15 \text{ lb ft}$ ).

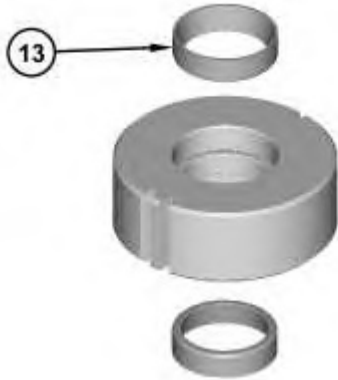


---

Illustration 15

g01297505

19. Lower the temperature of bearing cup (13) and install bearing cup (13).

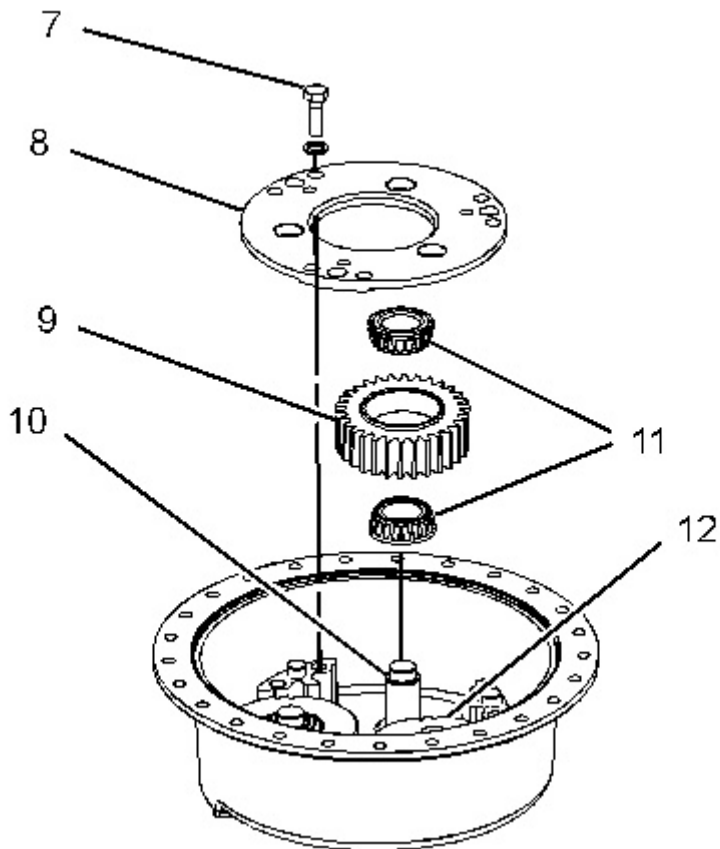

---

Illustration 16

g01297796

20. Install shaft (10). Raise the temperature of bearing cone (11) and install bearing cone (11). Install gear and shaft assembly (9). Raise the temperature of remaining bearing cone (11) and install bearing cone (11). Repeat for the remaining gear and shaft assemblies (12).
21. Position plate (8) and install bolts (7). Tighten bolts (7) to a torque of  $570 \pm 80 \text{ N}\cdot\text{m}$  ( $420 \pm 59 \text{ lb ft}$ ).

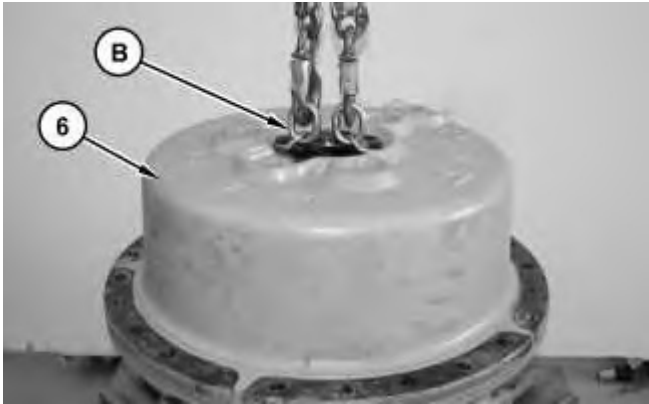


Illustration 17

g01291271


22. Attach Tooling (B) and a suitable lifting device to carrier assembly (6). The weight of carrier assembly (6) is approximately 136 kg (300 lb). Position carrier assembly (6).



Illustration 18

g01291267

23. Install sun gear shaft (5).

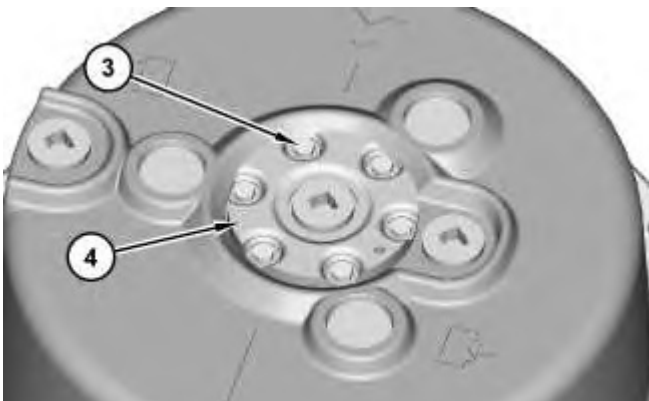

---

Illustration 19

g01291251


24. Apply Tooling (H) to cover (4) and the threads of bolts (3). Install cover (4) and bolts (3).



---

Illustration 20

g01291250

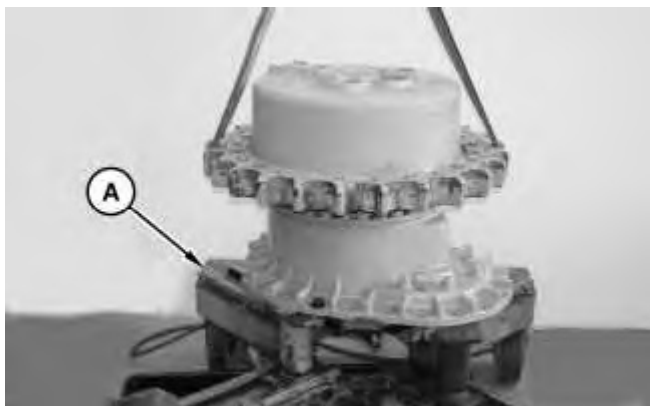

---

Illustration 21

g01291262

25. Install sprocket segments (2) and bolts (1). Lubricate bolts (1) with SAE 30 or an equivalent lubricant. Tighten bolts (1) to a torque of  $175 \pm 40$  N·m ( $129 \pm 30$  lb ft) plus an additional 1/3 turn.
26. Attach a suitable lifting device to the final drive. The weight of the final drive is approximately 522 kg (1150 lb). Disconnect and remove the final drive from Tooling (A).

**End By:**

- a. Install the track brakes.
  - b. Install the final drive and sprocket.
-

Product: TRACK LOADER

Model: 953K TRACK LOADER LJT

Configuration: 953K Track-Type Loader LJT00001-UP (MACHINE) POWERED BY C7.1 Engine

## Disassembly and Assembly 953K Track-Type Loader Power Train

Media Number -M0073767-00

Publication Date -01/10/2016

Date Updated -26/10/2016

i06781634

# Track Brake - Remove and Install

SMCS - 4251-010

## Removal Procedure

Table 1

Required Tools			
Tool	Part Number	Part Description	Qty
A	-	M12 Guide Stud 1.75 by 200 mm	2
B	439-5246	Pump As	1
	6V-8936	Reducer	1
	3B-7722	Pipe Bushing	1
	116-1859	Elbow	1

### Start By:

- a. Remove the piston motor (hydrostatic).
-

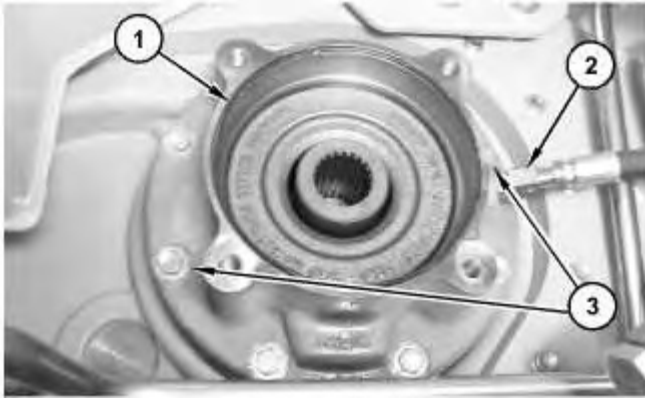


Illustration 1

g06112390

1. Remove O-ring seal (1). Disconnect hose assembly (2). Remove two bolts (3).

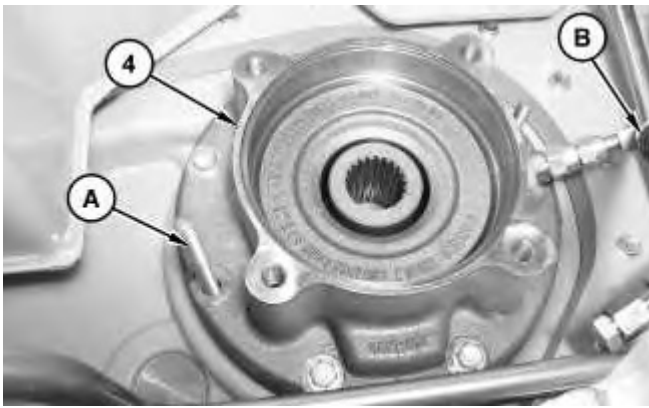


Illustration 2

g01333620

## **WARNING**

**Personal injury can result from being struck by parts propelled by a released spring force.**

**Make sure to wear all necessary protective equipment.**

**Follow the recommended procedure and use all recommended tooling to release the spring force.**

2. Install Tooling (A) into the bolt holes. Install Tooling (B) to release the piston. Remove remaining six bolts (3).
3. Use two people to remove housing (4). The weight of housing (4) is approximately 28 kg (62 lb).

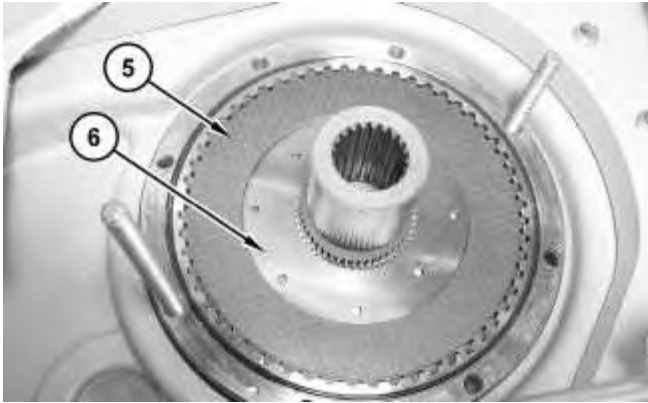


Illustration 3

g01333631

4. Remove friction discs (5) and plates (6).

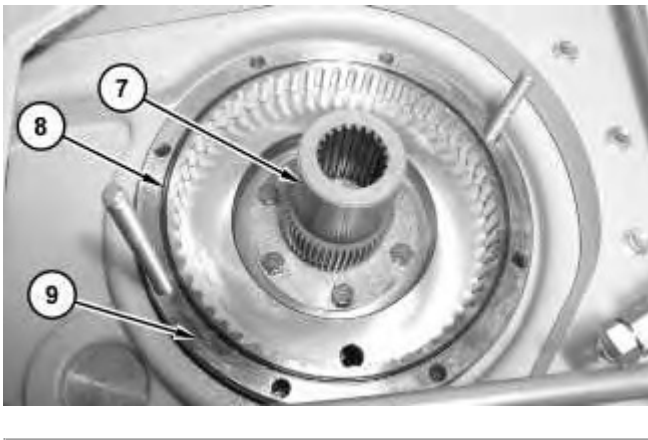


Illustration 4

g01333634

5. Remove shaft (7), O-ring seals (8), and ring (9).

## Installation Procedure

1. Install the track brake in the reverse order of removal.
    - a. Apply SAE 30 or equivalent lubricant to both sides of friction discs (5) and plates (6).
-



Thank you so much for reading.  
Please click the “Buy Now!”  
button below to download the  
complete manual.



After you pay.

You can download the most  
perfect and complete manual in  
the world immediately.

Our support email:

[ebooklibonline@outlook.com](mailto:ebooklibonline@outlook.com)